

OLDE MIDWAY



SPIN2000

INSTRUCTION
MANUAL

WARNING

Misuse of this machine may result in serious injury.
Please read and follow all precautions below.

This machine is not a toy and should not be operated by children.

Take proper safety precautions when using this machine.

Do not use the machine for other than its intended purpose and do not modify.

Use only on grounded outlet and with a grounded 3-prong extension cord that meets or exceeds electrical rating.

Do not immerse in water.

Do not touch moving parts. Keep body, hair, jewelry, clothes, etc., away from machine when in use.



Always turn machine off using the ON/OFF switch before unplugging.

NEVER touch floss head while in motion or shortly after use, until cooled.

SPECIFICATIONS

Heating Power	Motor Power	Electric Voltage	Frequency	Yield
1000W	80W	110V	50Hz/60Hz	1/30 sec


COTTON CANDY MACHINE & CART PARTS

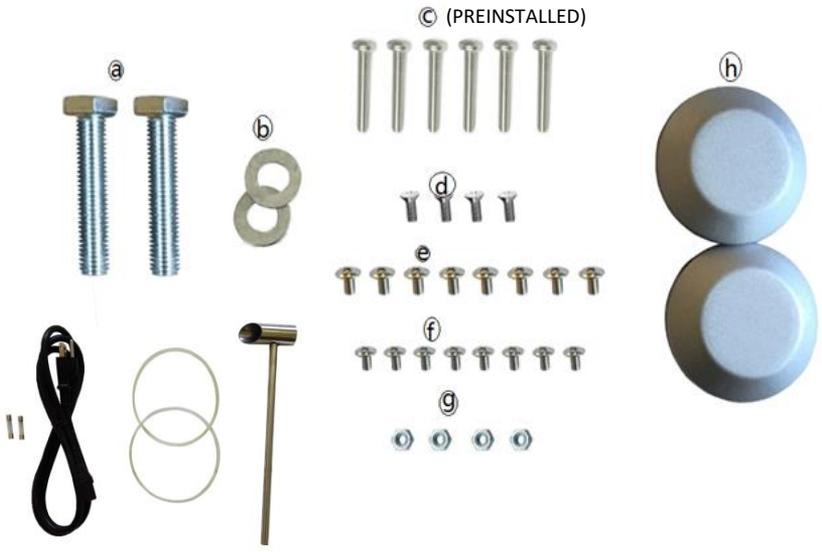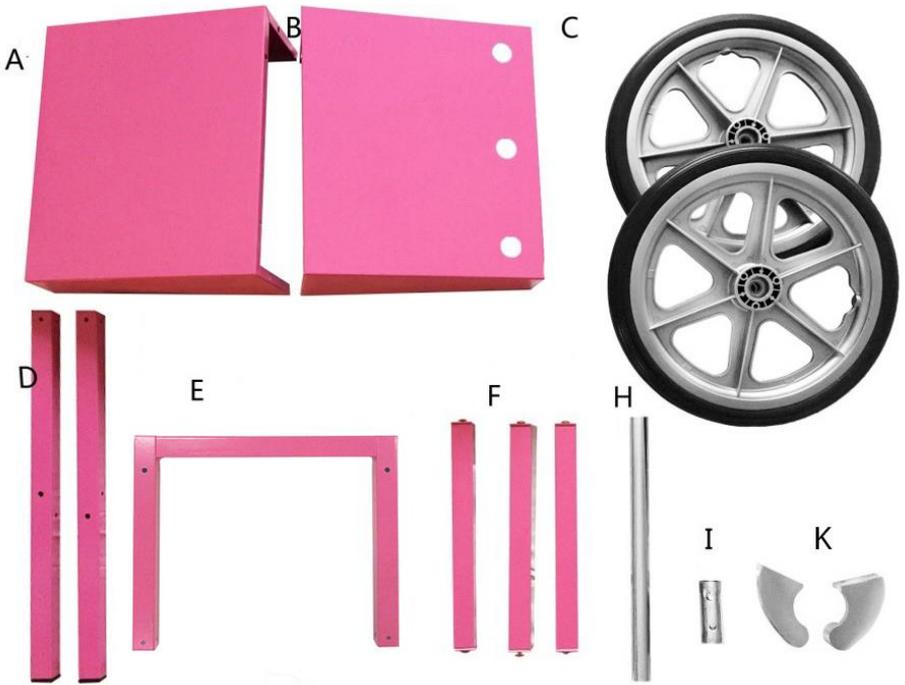

FIRST-TIME SET UP PROCEDURE



If your model includes a cart, please advance to page 7 to complete the cart assembly **before** proceeding.

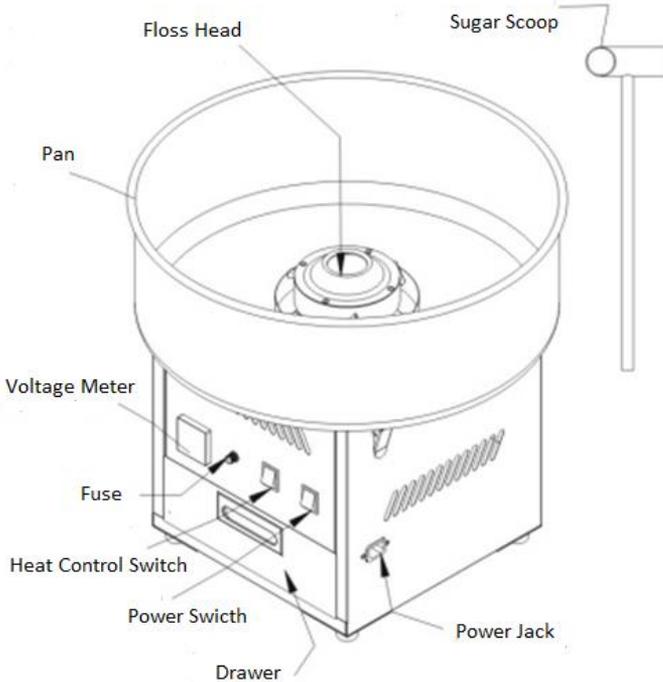

1. Wipe the pan and floss head with a damp clean cloth and dry thoroughly. **Do not clean with detergent or abrasive chemicals.**
2. If you did not purchase the cart, place the cotton candy machine on a flat stable surface. The machine operates at very high speeds making stability essential.
3. Plug the machine into a grounded outlet that meets the requirement of the machine. Avoid using electrical extension cords and outlet adapters, if possible.

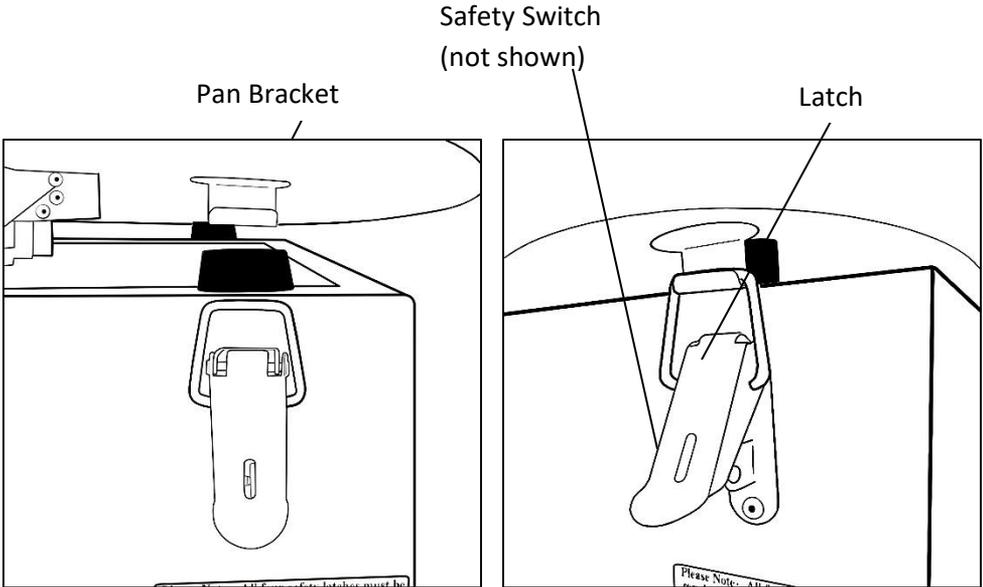


Fig. 1

Fig. 2

4. Carefully, hold the pan on top of the base aligning pan brackets with the four latches. (Fig. 1)
5. Securely latch the pan to the machine by hooking the latch ring over the pan brackets and pressing down on each of the four latches until fully engaged. (Fig. 2)




NOTE: For Safety, All four latches must be completely closed and secure before unit will turn on. The latch as shown above must also have the safety pin inserted.

6. Read the operating instructions completely to familiarize yourself with the equipment and process.

OPERATION INSTRUCTIONS

1. Press the power switch **ON** and allow the machine to run for 1-2 minutes.
Note: If the machine begins to vibrate excessively, turn the Power Switch to OFF. Unplug the machine and make sure it's on a level working surface.
 2. Press the heating controller switch **ON**. Allow the machine to heat up for 4-5 minutes.
 3. Empty one spoon of granulated sugar or cotton candy sugar mix into the floss head. **CAUTION: THE FLOSS HEAD SPINS AT ULTRA-FAST SPEEDS AND IS HOT. DO NOT TOUCH THE FLOSS HEAD. DO NOT ADD MORE THAN ONE SCOOP OF SUGAR MIX.**
 4. After approximately 30 seconds, cotton candy will begin to appear in the pan. *Note: Keep all jewelry and loose clothing away from the spinning floss head.*
 5. Insert the open end of the cotton candy cone, or candy stick gently into the cotton candy. Spin the cotton candy onto the cone in a counter-clockwise direction, twisting the cone as you go. Pull up slowly, while still rolling the cotton candy onto the cone until the desired portion has been reached.
 6. Continue creating cones until all the sugar has been removed from pan. There is no need to preheat the machine to start a second batch if done immediately after the first. *Note: Failure to spin off excess sugar may increase the likelihood of smoke or burned sugar on next use.*
- ⚠ IMPORTANT! Rest the machine 20 minutes after 60 minutes of continuous use.**
7. Turn the machine **OFF**, unplug and allow cooling completely before touching. Remove pan, wipe clean with a damp cloth and dry thoroughly. Avoid using excessive water when cleaning.

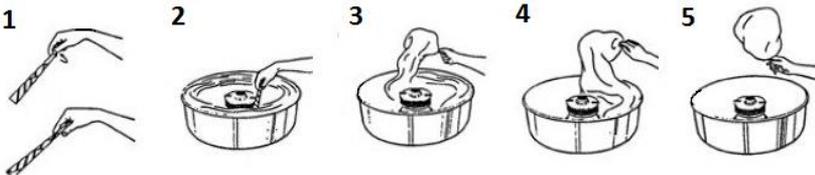


COTTON CANDY CART ASSEMBLY

STEP 1: Remove the 6 preinstalled **bolts (C)** from the **cross posts (F)**.

STEP 2: Arrange **leg post (D)**, **U bar (E)**, and **cross post (F)**. **Cross post (F)** should be attached to the hole furthest away from the black end cap on **leg post (D)**.

See *Fig. 1*

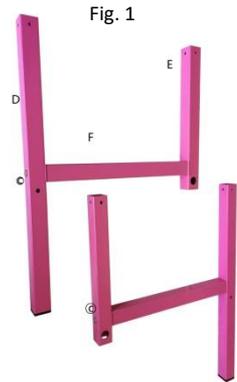

STEP 3: Build the other side of the cart using leg post (D) and 2 cross posts (F) into the same shape as in Step 2.



STEP 4: Connect each side of the cart frame together with the final **cross post (F)**, secure cross post to legs (D) using **bolts (c)**.

STEP 5: Place **washer (b)** between the wheel and **U bar (E)**, insert **bolt (a)** through tire, place **washer (b)** on the other end of the bolt. Repeat for the remaining tire.

Fig. 2



STEP 6: Insert a screw driver through the hole on **tool (I)** and twist to tighten. If the wheels do not spin, loosen the bolts slightly. See *Fig. 2*.

STEP 7: Press on **end-cap (h)** to hide the bolts on outside of tire. *See Fig. 3.*



Fig. 3

Fig. 4



STEP 8: Turn the frame upright.

Remove the pan

from the cotton candy machine. Set the cotton candy machine base on the posts, the power outlet should be between the wheels. Align the base to the bracket holes. Secure


with 2 bolts (e). Repeat for the remaining posts. *See Fig. 4*

STEP 9: Hold the **shelf (C)** into place on the same side as the wheels. Secure using **bolts (f)**. Repeat for the other shelf on the opposite side of the machine. *See Fig. 5*



Fig. 5

Fig.6

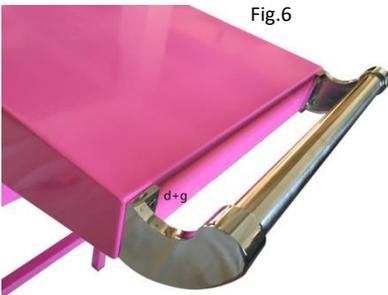

STEP 10: Attach handle **bracket (J)** to one side of the shelf using **bolts (d)** and **nuts (g)** under the shelf. *See Fig. 6*

STEP 11: Insert one end of the **handle (H)** into the affixed bracket; arrange the other end of the handle into the loose bracket. Attach bracket to frame using **bolts (d)** and **nuts (g)** under the shelf.

The cart assembly is now complete. Return to page 4 for initial set up instructions and operating procedure.

CARE & MAINTENANCE

CLEANING

After your final batch of cotton candy in a session, keep the machine running and hot while cleaning the floss head by slowly pouring a small amount of water into the center. **NOTE: The water will immediately become hot steam.** Keep the floss head spinning through until water runs almost clear. Then, allow the machine to cool and dry with a damp cloth to remove excess sugar.

The cotton candy pan may be cleaned with mild soap and a soft cloth. Do not use detergents.

REMOVING BURNT SUGAR

It is normal for a small amount of sugar to burn inside the machine, even with regular cleanings. The cotton candy machine will not be harmed, nor the produced candy. You may use a light-duty scrubbing sponge (do not use steel wool or other abrasive materials) and a diluted vinegar solution.

CHANGING THE BELT

This package includes a spare belt.

To access belt: Remove the cotton candy pan. Remove the screws holding on the top cover of the machine.

To adjust belt: Remove the top cover of the machine. Loosen the 4 motor screws, reposition the motor slightly, and retighten the screws. Replace the top cover and secure with screws.

TROUBLESHOOTING

MACHINE HAS NO POWER

Check to make sure that the bowl is seated correctly and all four latches are engaged and secure. If the safety switch is engaged and both switches are ON, unplug the machine and check the fuse; replace if defective. Contact us for further assistance if this does not resolve the problem.

FLOSS HEAD WILL NOT SPIN, OR SMOKES

Turn the power switch off, unplug the machine and clean the burnt sugar off with a soft cloth.

EXTREME VIBRATION

Make sure the floss head is even, pan is securely attached, and machine is level.

FLOSS HEAD SPINS BUT DOES NOT HEAT

Ensure wires underneath floss head are not damaged. If the wires are not damaged there may be an issue with the Temperature Sensor.

ELECTRICAL CORD IS LOST

Replace with a standard 20 Amp electrical cord like those for a computer or printer, designed for 110V power.

FLOSS HEAD DOES NOT SPIN

Belt may be damaged, loose, or unattached. See “Changing the Belt” under Care & Maintenance for further instructions.



Please contact us for assistance at 954-577-1043