

Challenger10/Plus System Numbering Sequences

On

= Dip Switch On

RAS					
LAN 1	LAN 2	1	2	3	4
1	65				
2	66	On			
3	67		On		
4	68	On	On		
5	69			On	
6	70	On		On	
7	71		On	On	
8	72	On	On	On	
9	73				On
10	74	On			On
11	75		On		On
12	76	On	On		On
13	77			On	On
14	78	On		On	On
15	79		On	On	On
16	80	On	On	On	On

DGP					
LAN 1	LAN 2	1	2	3	4
1	17	On			
2	18		On		
3	19	On	On		
4	20			On	
5	21	On		On	
6	22		On	On	
7	23	On	On	On	
8	24				On
9	25	On			On
10	26		On		On
11	27	On	On		On
12	28			On	On
13	29	On		On	On
14	30		On	On	On
15	31	On	On	On	On
16	32	Challenger Panel is DGP 16			
		DGP 32 all switches are off			

DICKER
DATA

DAS

ACCESS AND SURVEILLANCE

Challenger10/Plus User Menus

1. Panel Status	13. Start Auto Access Test
2. Input Unsealed	14. Program Users
3. Input In Alarm	15. Time & Date
4. Input Isolated	16. Isolate/Deisolate RAS/DGP
5. History	17. Enable/Disable Service Tech
6. Test Report	18. Reset Cameras
7. Service Menu	19. Install Menu
8. Film Counters	20. Door and Floor Groups
9. Input Text	21. Holidays
10. Isolate	22. Open Door
11. Deisolate	23. Unlock, Lock, Disable & Enable
12. Test Input	24. Automation
	25. Change PIN

	DGP	Inputs max.32	Relays max.16	Doors
LAN 1				RAS's 1-16
	1	17-48	17-32	17-20
	2	49-80	33-48	21-24
	3	81-112	49-64	25-28
	4	113-144	65-80	29-32
	5	145-176	81-96	33-36
	6	177-208	97-112	37-40
	7	209-240	113-128	41-44
	8	241-272	129-144	45-48
	9	273-304	145-160	49-52
	10	305-336	161-176	53-56
	11	337-368	177-192	57-60
	12	369-400	193-208	61-64
	13	401-432	209-224	
	14	433-464	225-240	
	15	465-496	241-256	
Challenger Panel		1-16	1-16	

	DGP	Inputs max.32	Relays max.16	Doors
LAN 2				RAS's 65-80
	17	497-528	257-272	81-84
	18	529-560	273-288	85-88
	19	561-592	289-304	89-92
	20	593-624	305-320	93-96
	21	625-656	321-336	97-100
	22	657-688	337-352	101-104
	23	689-720	353-368	105-108
	24	721-752	369-384	109-112
	25	753-784	385-400	113-116
	26	785-816	401-416	117-120
	27	817-848	417-432	121-124
	28	849-880	433-448	125-128
	29	881-912	449-464	
	30	913-944	465-480	
	31	945-976	481-496	
	32	977-1008	497-512	

Installer Menu 19

1. Input Database	16. Map Relays	33. Program Next Service
2. Area Database	17. Arm/Disarm Via Tz	34. Program Summary E/F
3. RAS Database	18. Vaults	35. Program Macro Logic
4. DGP Database	19. Area Linking	36. Area Groups
5. Alarm Groups	21. Input Shunts	37. SD card backup/restore
6. Timers	22. Soft Timezones	38. Reset Input Test Days
7. System Options	23. Poll Errors	39. Automation
8. Auto Reset	24. Download	40. Door Setup
9. Communications	25. Display Last Card	41. Event Flag Names
11. Version	26. Diagnostics	42. Challenger Name
12. Lamp Test	28. Remote Controllers	43. Automation Status
13. Time Zones	29. Panel Volts & Currents	44. Standard Lifts
14. Defaults - CAUTION	31. Battery Testing	45. Standard Doors
15. User Category	32. Custom Message	