

# Operation Guide 3198/3299

CASIO.

## About This Manual

- The operational procedures for Modules 3198 and 3299 are identical. All of the illustrations in this manual show Module 3198.
- Button operations are indicated using the letters shown in the illustration.
- Each section of this manual provides you with the information you need to perform operations in each mode. Further details and technical information can be found in the "Reference" section.



E Module 3198



Module 3299

## Contents

General Guide .....	E-4
Timekeeping .....	E-6
World Time .....	E-16
Alarms .....	E-19
Countdown Timer .....	E-25
Stopwatch .....	E-28
Reference .....	E-30
Specifications .....	E-36

## Procedure Lookup

The following is a handy reference list of all the operational procedures contained in this manual.

*To toggle the Timekeeping Mode time between DST and Standard Time .....* E-12  
*To turn on illumination .....* E-15  
*To view the time for another city code .....* E-16  
*To toggle a city code time between Standard Time and Daylight Saving Time .....* E-17  
*To change your Home Time city to the current World Time city .....* E-18  
*To set an alarm time .....* E-20  
*To test the alarm .....* E-22

*To turn an alarm on and off .....* E-23  
*To turn the Hourly Time Signal on and off .....* E-24  
*To configure the countdown timer .....* E-26  
*To use the countdown timer .....* E-27  
*To measure times with the stopwatch .....* E-29  
*To turn the button operation tone on and off .....* E-32  
*To turn off Auto Display .....* E-35  
*To turn on Auto Display .....* E-35


E-2

E-3

## General Guide

- Press **C** to change from mode to mode.
- In any mode (except when a setting screen is on the display), press **B** to illuminate the display.

### Timekeeping Mode World Time Mode

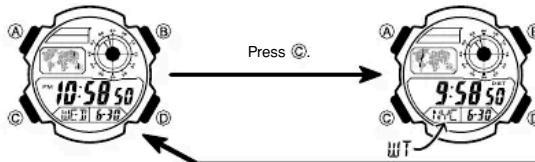


E-4

### Alarm Mode Countdown Timer Mode



E-5


## Timekeeping

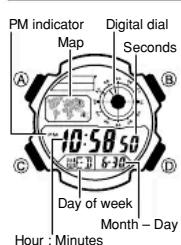

The Timekeeping Mode's Multi Time feature gives you quick and easy access to the current time and date in four different cities, numbered from T-1 (Time 1) through T-4 (Time 4). T-1 is your Home City Time, and T-2, T-3, and T-4 are Local Times. Local Times are kept in synchronization with your Home City Time (T-1). The digital dial at the top of the screen indicates the current Home City Time (T-1). For details on reading the map and digital dial, see "Map and Digital Dial" (page E-30).

### Switching Between Time Screens

Each press of **D** cycles the time screens in the sequence shown below.

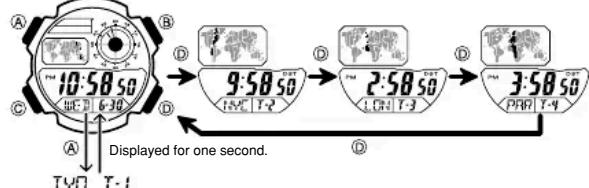


E-6

E-7

- While the Home City Time (T-1) screen is displayed, pressing **A** will switch the day of the week / month-day indication to the currently selected Home City code and the T-1 indicator for about one second.
- You can change the current time setting for your Home City Time (T-1) only.
- For Local Times (T-2, T-3, T-4), you only can change the city code and DST setting.

### Changing the Current Home City Time and Date Settings

 - Use **D** to display the current Home City Time (T-1) screen.
- Hold down **A** until the seconds start to flash, which indicates the setting screen.
- Press **C** to move the flashing in the sequence shown below to select other settings.

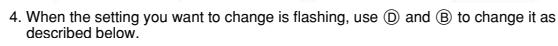

- When the setting you want to change is flashing, use **D** and **B** to change it as described below.

E-8

E-9



