

Door and Window Sensor

Product instruction manual



Packing List

- Door and window sensor x 1
- Reset needle x 1
- Battery x 1
- Instruction manual x 1

Please read the instruction manual carefully before using the product

 
Items Not Under Warranty

1. Unauthorized repairs, misuse, collisions, negligence, abuse, exposure of the product to moisture or water, accidents, alterations, improper use of accessories, tearing or alteration of stickers or anti-counterfeiting marks;
2. The validity period of the warranty has passed.
3. Damage caused by force majeure;
4. Damage or malfunction caused by problems other than the design, technology, manufacturing, quality of the product.

Product Specifications

Product name	Door and window sensor
Battery specifications	CR2450
Operating temperature	-20°C~+60°C
Operating humidity	95% RH (no condensation)
Wireless connection	ZigBee
Battery life	3 year(10 times/day)


- Press and hold the reset button for 5 seconds, until the network indicator light begins flashing. Follow the App instructions to add the device.

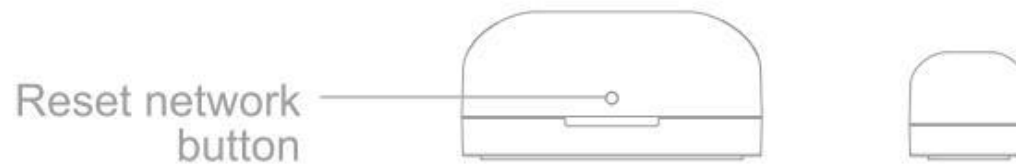

- Once the device has been successfully added, you will be able to find the device in the "My home" list.

Product Description

 The door and window sensor detects the opening or closing of the door and window, and works in conjunction with other devices to design and implement smart application scenarios. Ensure that the door magnet is located on the side of the alignment mark.

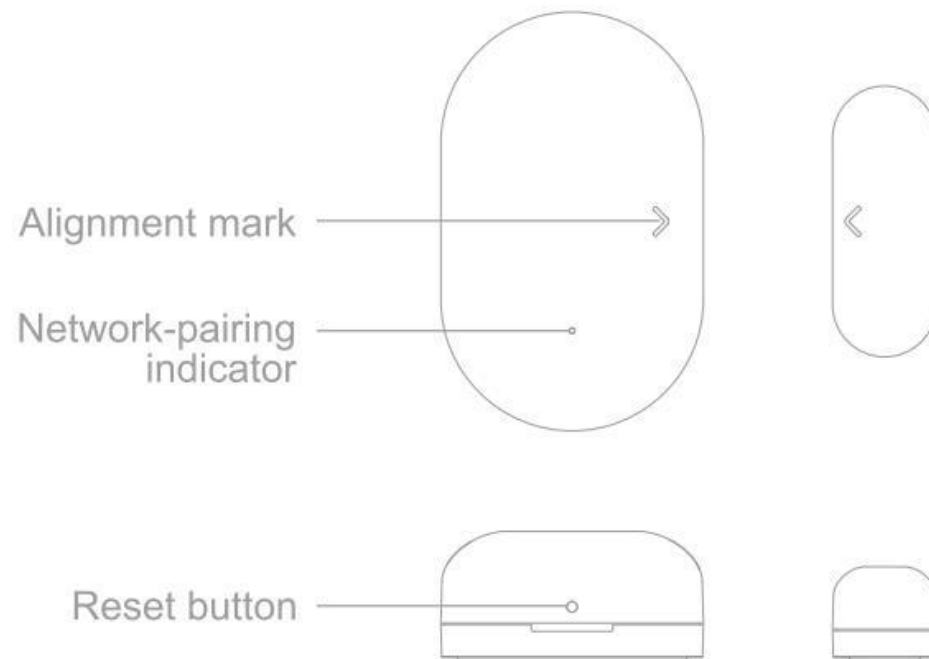

Preparation For Use

- 1 Mobile phone is connected to Wi-Fi



Ensure that the product is within the effective coverage of the smart host (gateway) ZigBee network to ensure an effective connection between the product and the smart host (gateway) ZigBee network.

*Make sure the smart host has been added.

Preparation For Use

- 2 Download and open the App

 
In the App Store or Google Play, search for " My SmarH "

If you are downloading this App for the first time, please tap the "Register" button to register your account; If you already have an account, click the "Login" button.



Network Settings

- Connect the device to the power source while ensuring that the phone is connected to the network and the smart gateway has been added successfully;
- Open the App and tap "Add sub-device" on the "Smart gateway" screen. Then , select "Door and window sensor";

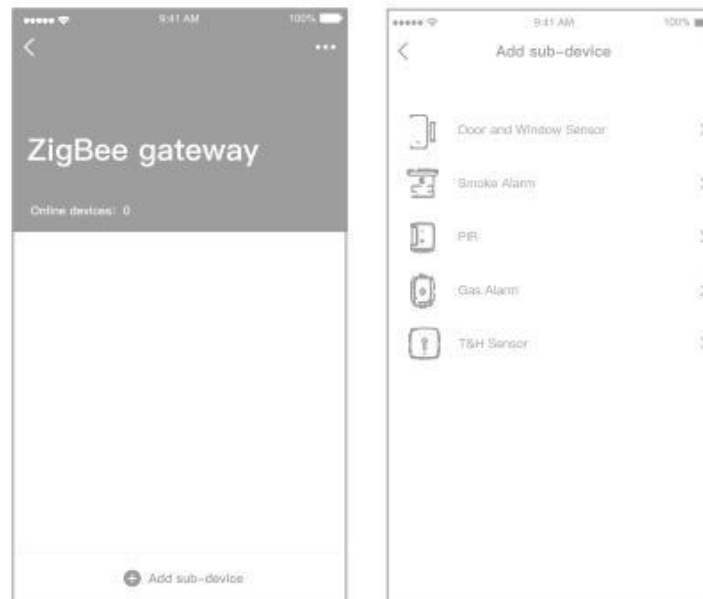

Amazon Echo Plus / Echo Show 2nd Gen

Using the reset needle, press and hold the reset button for 5 seconds until the indicator starts flashing red on the sensor.

Method 1: Ask Alexa to “Discover new devices”

Method 2: Add the sensor manually via Amazon Alexa app as displayed on the next page

New door sensor should now appear under Smart Home devices section and be ready for Alexa smart routines

Make Your Home Smarter