
 

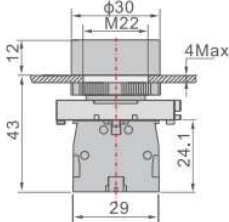 
 


 

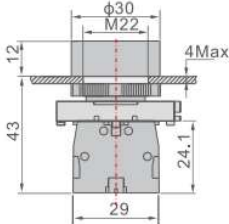 






 

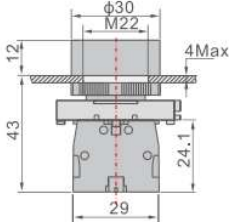 


 

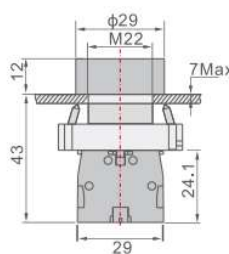 





 

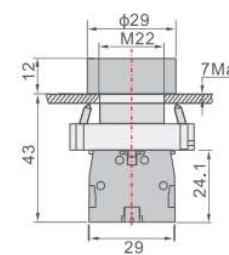 


 

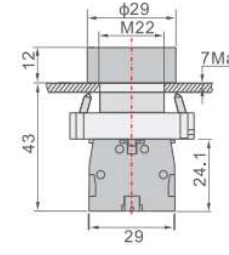 






 

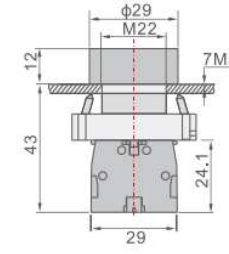 




 




 
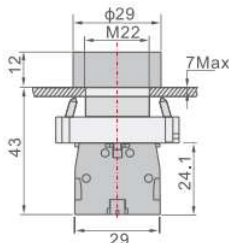 
 

 
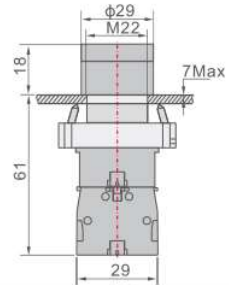 
 

 
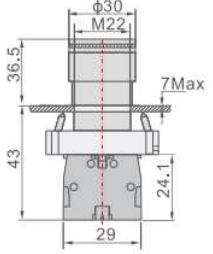 

 
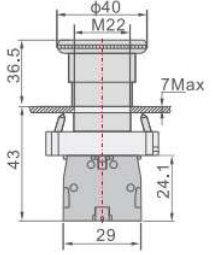 

 
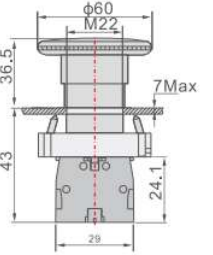 


 
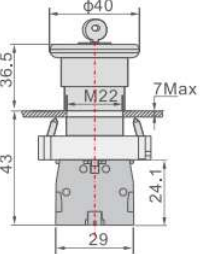 






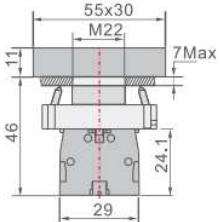 





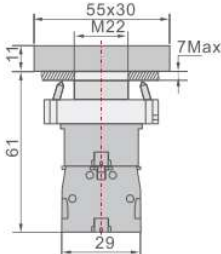 


Push button	Description	Contact	Circuit	Color	Type	Contour
 LAY5-EA6371	Flush push button Spring return Marked	N/O		 Blue	LAY5-EA6371	
		N/O+N/O		 Blue	LAY5-EA6373	
 LAY5-EA3341	Flush push button Spring return Marked	N/O		 Green	LAY5-EA3311	
				 Green	LAY5-EA3361	
				 White	LAY5-EA3341	
				 Black	LAY5-EA3351	
				 Green	LAY5-EA5331	
				 Black	LAY5-EA5321	
 LAY5-EA4322	Flush push button Spring return Marked	N/C		 Red	LAY5-EA4322	
				 Red	LAY5-EA4342	
 LAY5-BA31	Flush push button Spring return	N/O		 White	LAY5-BA11	
				 Black	LAY5-BA21	
				 Green	LAY5-BA31	
				 Yellow	LAY5-BA51	
				 Blue	LAY5-BA61	
 LAY5-BA45	Flush push button Spring return	N/C		 Red	LAY5-BA42	
				 Black	LAY5-BA25	
 LAY5-BA35	Flush push button Spring return	N/O+N/C		 Green	LAY5-BA35	
				 Green	LAY5-BA36	
				 Yellow	LAY5-BA55	
				 Blue	LAY5-BA65	
				 Red	LAY5-BA45	
				 Black	LAY5-BA25	
 LAY5-BA3351	Flush push button Spring return Marked	N/O		 Green	LAY5-BA3311	
				 Green	LAY5-BA3361	
				 White	LAY5-BA3341	
				 Black	LAY5-BA3351	
				 Green	LAY5-BA5331	
		N/C		 Black	LAY5-BA5321	
				 Red	LAY5-BA4322	
				 Red	LAY5-BA4342	



Push button	Description	Contact	Circuit	Color	Type	Contour
	Flush push button Spring return Marked	N/O		Blue	LAY5-BA6371	
LAY5-BA6373		N/O+N/O		Blue	LAY5-BA6373	
	Illuminated Flush push button Spring return	N/O 220~240V		White Green Yellow Blue	LAY5-BW3161 LAY5-BW3361 LAY5-BW3561 LAY5-BW3661	
LAY5-BW3361		N/C		Red	LAY5-BW3462	
	Emergency stop Turn to release	N/C		Red Red	Φ30 Φ30	LAY5-BS442
LAY5-BS442						
	Emergency stop Turn to release	N/C		Red Red	Φ40 Φ40	LAY5-BS542
LAY5-BS542						
	Emergency stop Turn to release	N/C		Red	Φ60	LAY5-BS642
LAY5-BS642						
	Emergency stop Key release	N/C		Red	Φ40	LAY5-BS142
LAY5-BS142		N/O+N/C		Red	Φ40	LAY5-BS145
						



Push button	Description	Contact	Circuit	Color	Type	Contour
	Double-headed Push button 1 flush green push Marked I 1 flush red push Marked O IP40	N/O+N/C		 Green  Red	LAY5-BL8325	
LAY5-BL8325						
	Illuminated double-headed Push button with integral LED 1 flush green marked I 1 flush red marked O 1 central pilot light IP40	N/O+N/C 220~240V		 Green  Yellow  Red	LAY5-BW8365	
LAY5-BW8365						