



Installation Setup Instructions for Standard Tank

Please visit our website www.powertankcleaning.com to view the demonstration video



1. Unplug

1. Make sure the power supply is DISCONNECTED at the wall and the power switch on the Tank is OFF



Power OFF



2. Drain Valve




2b. Water Level

2. Make sure the drain Valve on the Tank is in the CLOSED position
2b.) Using Hot water, fill the tank to the marked water line



3. Empty (1) bag or ENVIROSOAK® to the hot water, stir well to dilute the solution

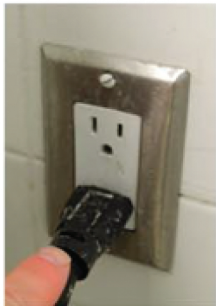

1. Plugged

4. Plug the main power supply to the wall outlet, turn ON, will be come illuminated



Power ON



5. Start soaking your dirty cookware, refer to the manual for estimated soak times



6. Close the lid and let POWERTANK® and ENVIROSOAK® clean your cookware.

SAMPLE COOKWARE THAT CAN BE USED IN THE POWERTANK®

