

HOW TO ADJUST YOUR STATIONARY CAMERA



1. Use a **t-15** screwdriver to unscrew the cap from the camera.

a. avoid touching the glass Cap as much as possible.



2. Remove the glass cap to gain access to the inside of the camera.


a. **DO NOT TOUCH ANYTHING OTHER THAN INSTRUCTED.**




3. Remove the shroud from the camera.

a. On each side of the camera, there should be a small clip. Unclip the shroud Gently, one side at a time.

4. Rotate the slide designated by the arrows on the right for a level, upright **view**.

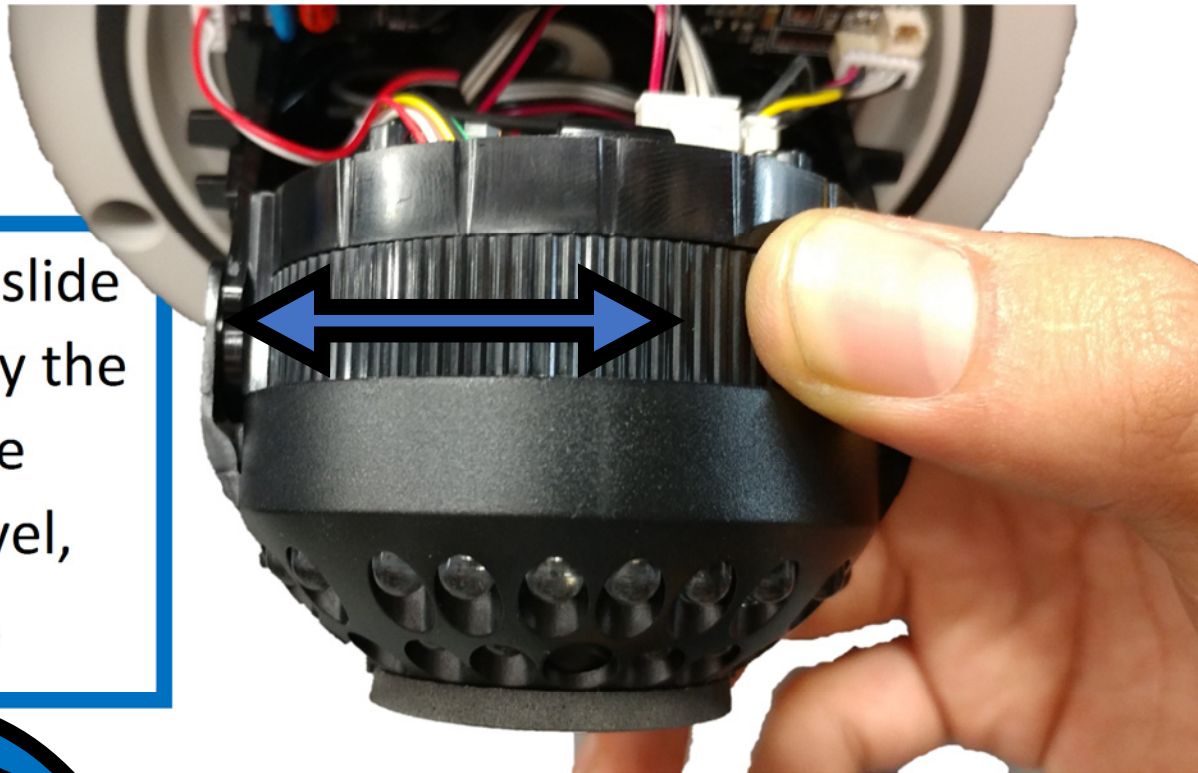

5. To change the **angle** of the camera, Spin the base of the camera until the lens faces the direction you'd like to start recording.

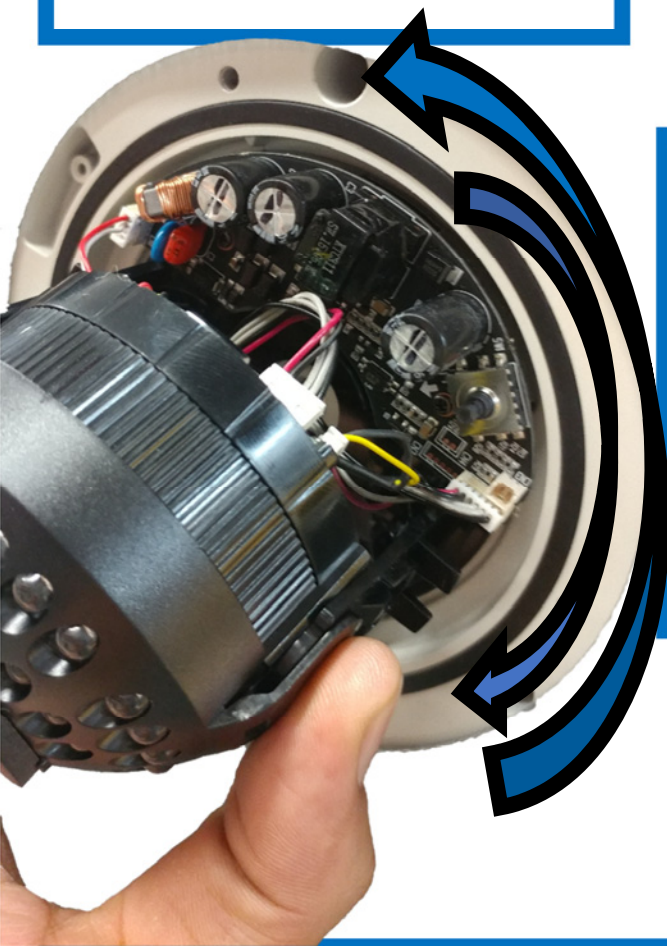

6. Under the lens you'll find two levers. Toggle these side to side to set **zoom & Focus**.

a. Use a flathead to loosen levers.

