



Lollipops II - Lollipop Vending M

Instruction Manual
Assembly, Operation, and Care Instruct

Serial #: _____

Safety Precautions

Attention

- ◆ DO NOT put the machine on uneven, sloping or easily shaken surfaces.
- ◆ This machine is intended for inside use only.
- ◆ Check wires and cables regularly.

Warning

- ◆ Always plug into a grounded circuit.
- ◆ The power must be turned off before any movement.
- ◆ DO NOT let the machine fall down or be hit.
- ◆ DO NOT put any liquid on or around the machine

Danger

- ◆ DO NOT touch the power cord with wet hand.
- ◆ DO NOT let the power cord be scraped, cut or bent.
- ◆ DO NOT put heavy objects on the cord.
- ◆ DO NOT use any damaged power cord.
- ◆ DO NOT let non-professionals check or repair the machine.
- ◆ DO NOT perform repairs or maintenance on this machine with the power on.

- I. Technical parameters and parts
- II. How to Play
- III. Appearance.....
- IV. Auto Test.....
- V. Set up.....
- VI. Candy shelf life setting.....
- VII. Maintenance.....
- VIII. Warranty Terms.....

I. Technical parameters

Dimensions: L: 29" x W: 30" x H: 60"

Weight: 155 lbs

Power: 60W, 110V



Customizing Family Fun

2. Parts

No.	Name	Quantity
1	Key	1
2	Power Cord	1
3	Manual	1
4	Belt	1

Prior to use, please confirm that all contents are included. If anything is missing, please contact Barron Games immediately.

Barron Games International
84 Aero Drive, Suite 5
Buffalo, NY 14225

Phone: +1-716-866-0054

Fax: +1-716-630-0055

II. How to Play

- 1) Insert coin.
- 2) Press button to start the lights rotating.
- 3) Press button again, lights stop rotating and selected number us the winning prize number.
- 4) The machine will release prize into the exit terminal.

www.barrongames.com

For Parts and Service Information, please co


Phone: +1-716-866-0054


Email: service@barrongames.com

1. Clean the machine with mild, ammonia free cleaners.
2. Use NON-FLAMMABLE solvents for cleaning.

VIII. Warranty Terms

1. 1 year limited warranty from date of delivery, other than abuse, natural calamities or improper servicing.
2. This warranty does not cover the following:
 - ◆ Damage due to improper installation and/or use.
 - ◆ Game abuse or misuse
 - ◆ Stuck or jammed coin mechanisms (caused by improper coin usage).
 - ◆ Damage from repairs or modifications without our authorization.
 - ◆ Damage incurred during shipping/transit from our warehouse.
 - ◆ Damage caused by weather, water, lightening or electrical damage.
 - ◆ Damage due to extreme heat over 90°F or temperatures below 65°F.

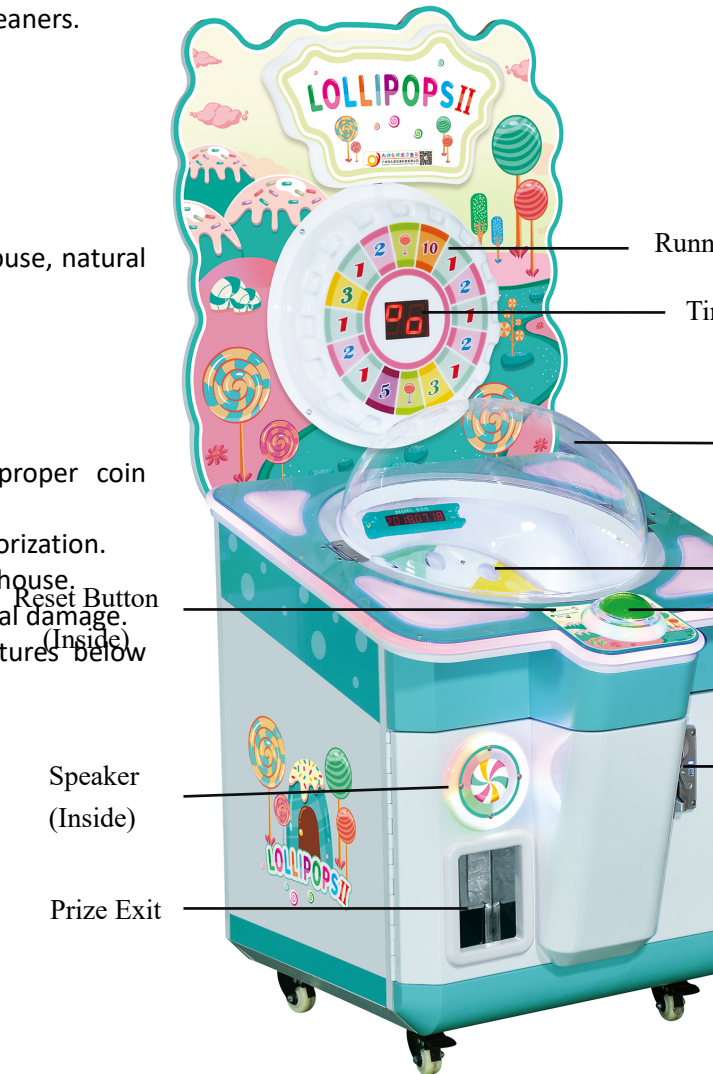

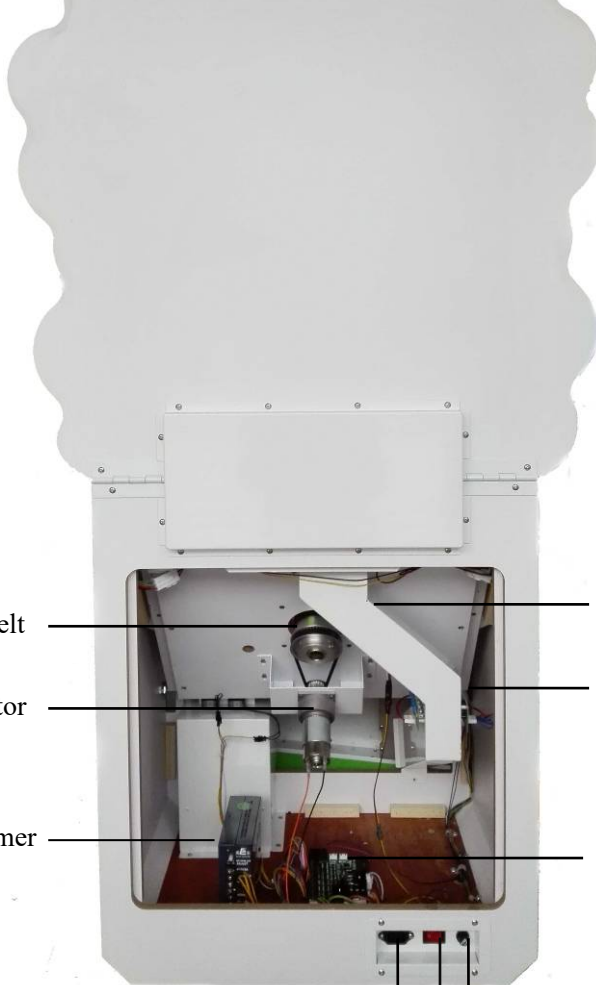

Belt

Motor

Transformer

Prize Conversion
Channel

Prize Sensor

Main Board

Power Socket

Fuse

Power Switch




Setting up the candy period of the area in which it is

Set up

MODE key: select

START key: set up

Degree of difficulty	prize rate	total prize per 100 play	0 occurrence number	1 occurrence number	2 occurrence number	3 occurrence number	5 occurrence number	1 occurrence number
0		Random						
1	1.8	180	0	67	17	8	5	3
2	1.7	170	0	69	16	8	5	2
3	1.6	160	0	78	11	5	3	3
4	1.5	150	0	79	12	4	3	2
5	1.4	140	0	84	10	2	2	2
6	1.3	130	0	87	7	3	2	2
7	1.2	120	0	86	10	3	1	0
8	1.1	110	0	90	10	0	0	0
9	1	100	0	100	0	0	0	0
10	0.9	90	10	90	0	0	0	0
11	0.8	80	20	80	0	0	0	0
12	0.7	70	30	70	0	0	0	0
13	0.6	60	40	60	0	0	0	0
14	0.5	50	50	50	0	0	0	0
15	0.4	40	60	40	0	0	0	0
16	0.3	30	70	30	0	0	0	0
17	0.2	20	80	20	0	0	0	0
18	0.1	10	90	10	0	0	0	0

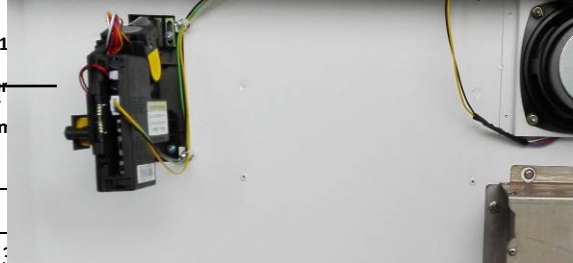

IV. Auto Test

1. Start up auto test:


- a) Start button
- b) Coin acceptor
- c) Motor
- d) Prize sensor

Please do not touch start button or other parts while a

E1	Start button damage
E2	Prize sensor damage
E3	Motor or prize sensor damage

Coin	DIP Switch	
	1	2
0	ON	ON
1	OFF	ON
2	ON	OFF
3	OFF	OFF
4	ON	ON
5	OFF	ON
6	ON	OFF
7	OFF	OFF

V. Set up

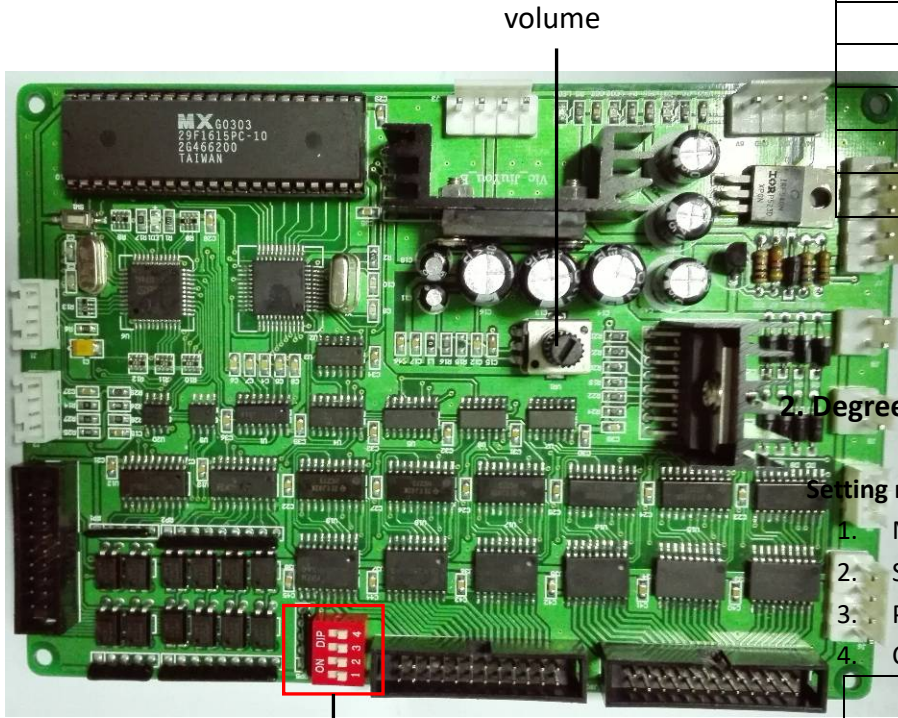

2. Degree of difficulty

Setting method

1. Machine power on.
2. Set Switch DIP – 4: OFF.
3. Press start button to choose difficulty.
4. Choose degree and set Switch DIP – 4: ON. Finish se

DIP- 4	
OFF	Standby
ON	Difficulty: 0-1



DIP