

WORLD TOUR FOOSBALL PARTS



Foosball Door Lock
Part Number: FBA004



Foosball Door Key
Part Number: FBA005



 
Corner Metal Part
Part Number: FBA012-1



Corner Metal Part
Part Number: FBA012-2



Ball Elevating Device with
Ball Release and Motor
Part Number: FBB001

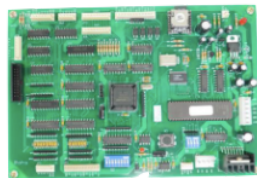

World Tour Foosball Main
PCB
Part Number: FBB005



World Tour Foosball
Volume Amplifier
Part Number: FBB006



Tact Switches K1-K4
Part Number: FBB007



Foosball power Supply
Box
Part Number: FBB008-1



Speaker 5W
Part Number: FBB014



Lock The Face Plate /
Coin Box
Part Number: FBA015



Key for the Face Plate
/ Coin Box
Part Number: FBA016



Foosball Roll Pin (For
Player Attachment to
Rod)
Part Number: FBC002



Roll Pin Aid
Part Number: FBC003



Iron Bar / Stop Ring
Part Number: FBC004



Rubber Bumper
Part Number: FBC005



Plastic Washer Spacer
Part Number: FBC006



 
Plastic Handle-Grip
Part Number: FBC007



Rubber Rod End Cap
Part Number: FBC008



Foosball Ball
Part Number: FBC013

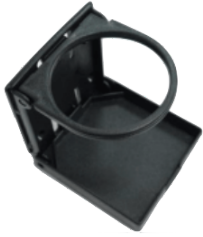

World Tour Foosball
Cup Holder
Part Number: FBC014



Foosball Leg Leveler -
Metal
Part Number: FBC017



Foosball Man
Part Number: WAR-black
foos man