


WORLDWIDE © COPYRIGHT 2001 ITSA GOAL POSTS LTD, ALL RIGHTS RESERVED

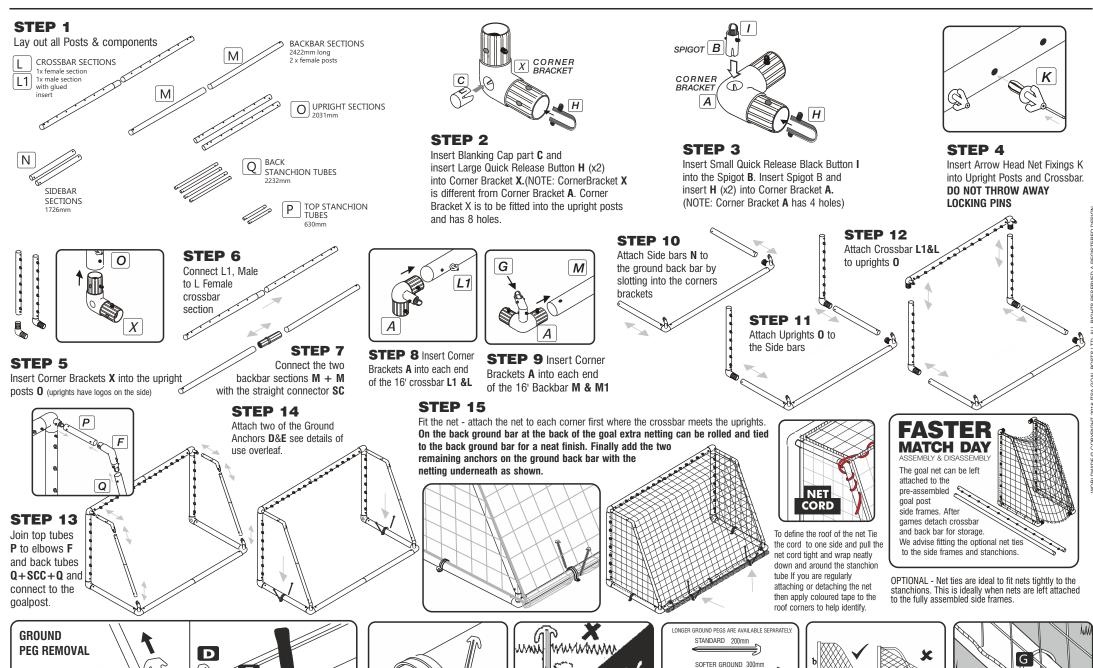

USE THE HOOK ON THE END

TO REMOVE PEGS FROM THE GROUND OR USE

A CLAW HAMMER FOR PEGS THAT ARE

OF THE RED GROUND PEG

DIFFICULT TO REMOVE.

Longer pegs are to be used on sandy or

Soft ground earth. A risk assessment of

 
carried out when anchors are to be used.

soil conditions suitability should be


STEP BY STEP NET FITTING

STEP 1

Open net and check the lengths of a and b correspond with the diagram below.





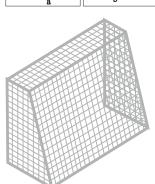

ANCHORING YOUR GOAL

ground anchors. Do not use the goal in sub zero temperatures. ANCHORING YOUR GOAL ON GRASS - POSITION YOUR GOAL ON A LEVEL

anchors and pegs. We take no responsibility for any damage or injury caused in this manner. HARD SURFACES: to prevent damage to goal or it's components.

PLAYING SURFACE. PLACE THE MULTI-SURFACE ANCHOR OVER EACH SIDE OF

THE GROUND FRAME (POSITIONS SHOWN) HAMMER THE PEGS THROUGH THE

ANCHOR DOWN UNDER THE FRAME INTO THE GRASS ADDITIONAL ANCHORS

OR LARGER PEGS CAN BE PURCHASED FOR USE ON SOFT GROUND OR SAND.

THESE ANCHORS CAN BE USED FOR HARD SURFACES SUCH AS TARMAC WITH

1 DIG HOLES IN YOUR TARMAC FILL HOLES WITH CONCRETE 2 DRILL TWO

HOLES (DO NOT USE METAL HAMMERS USE RUBBER MALLETS) ON THE

OPTIONAL BOLTS. ON HOT/SUNNY DAYS TARMACADAM SOFTENS AND

14MM HOLES 12CM APART AND 70MM DEPTH, 3 POSITION GOAL AND

FOR OTHER SURFACES SUCH AS WOODEN SPORTS HALL FLOORS WOOD

D

THEREFORE TO ANCHOR YOUR GOAL PROPERLY YOU MUST:-

ANCHOR, INSERT AND TIGHTEN BOLT.

USEA CLAW HAMMER FOR PEGS THAT ARE

USED (SUPPLIED SEPARATELY).

GROUND

PEG REMOVAL

USE THE END OF THE

FROM THE GROUND OR

DIFFICULT TO REMOVE

RED GROUND PEG


TO REMOVE PEGS

loosen soil with a steel pole and moisten with some water before inserting the

STEP 2

With the net the correct way round lift the net onto the goalpost frame. This is easier with two people.

■ NOTE: If your net does not fit the first time, you may be fitting it to the goal frame upside down i.e. that is to say the net from the crossbar to the floor (a) is longer than the length of the net to the bottom of the upright.(b)

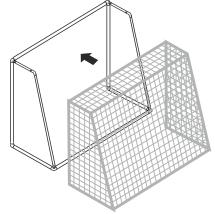

STEP 3

Attach the corners first, where the upright posts meets the crossbar as shown. Then attach the net to the post using

the Arrow head net fixings on crossbar and uprights.



STEP 4

Using the large net ties tie the net to the ground side frame back ground frame.



Using the small net ties attach the net down the back of the sloping back net supports as shown to the posts as shown.




STEP 6

NET CORD - ROOF TO THE NET To help define the roof of the net Tie the cord to one side and pull the net chord tight and wrap neatly down and around the stanchion section.

If you are regularly attaching or detaching the net then apply coloured tape to the roof corners of net to help identify the roof area.



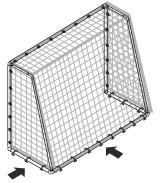

CARE & MAINTENANCE

We advise adult supervision during assembly and use. Observe and follow warning labels attached to goal.

Do not use any components, nets or parts if they are damaged or broken. Spare parts and replacement nets are readily available. If others are to install your goal you should show them how to erect and dismantle the goal and hand them a copy of the fitting instruction

prevent damage to goal or it's components, loosen soil with a steel pole and moisten with some water before inserting the ground anchors.

Do not use the goal in sub zero temperatures. warning labels should be replaced when worn and we recommend replacing them every two years -spare labels available, damaged components requested under quarantee must be returned for inspection. Failure to follow the warnings, fitting instructions contained in this document, may invalidate your quarantee.

The company, its agents and representatives do not accept any product liability if used outside the EU. Use of the product in other countries outside the EU including the USA is not covered and appropriate insurance should be taken out by the user to cover for any eventuality

We reserve the rights to amend the specifications of our soccer products in the interest of continued development. Your product therefore may differ slightly to those illustrated. Not suitable for children under 36 months until assembled due to small parts.


NET TIES: We recommend placing the net ties no more than 340mm apart. The net ties supplied are designed to permanently fix the net to the goal frame. If you require to take nets on and off, other net fixings can be used


NOTE: Goal must be anchored otherwise breakages may occur. At the end of the season nets can be tied into a bundle and placed into a pillow case (not to damage washing machine) and washed at 40 C with normal washing powder. The ground frame can be washed with Do not drop any heavy objects on ends of tubes. Hard surfaces: to hot soapy water. Any scuff marks on posts can be rubbed off with a light abrasive scouring pad.

> If you find the nets are worn along the floor it may be rodents, by spreading pepper along the base frame rodents will be deterred. Crossbars will not be replaced within the quarantee period if broken by swinging or climbing or any other misuse.


DO NOT try to glue any damaged fixings. Plastic materials in this product vary and this may cause the plastic to break. Always replace any damaged components.

NOTE: All plastic extrusions vary and therefore some tubes may be looser or tighter to connector fittings. If you want to increase the diameter of the fitting just wrap masking tape around the part that fits into the tube, twist as you insert the fitting and it will grab to the tube tight. You can make tighter fits by adding more tape.

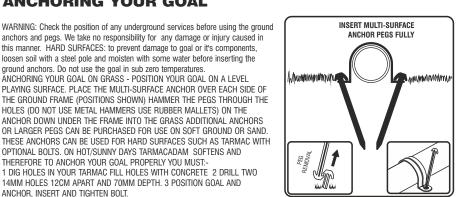

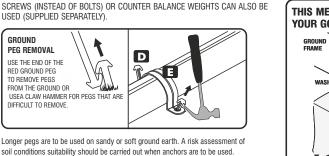

Longer pegs are to be used on sandy or soft ground earth. A risk assessment of soil conditions suitability should be carried out when anchors are to be used.

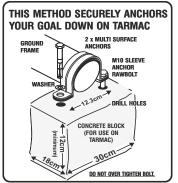



Visit our YouTube site for assembly videos www.youtube.com/user/Footballgoalposts