

# STEP 1 BACKBAR Lay out all Posts & components CROSSBAR SECTION with insert CROSSBAR SECTION **UPRIGHT** SECTIONS x 2 BACK STANCHION TUBES x 2 SIDEBAR SECTIONS TOP STANCHION TUBES x 2

### STEP 2

Insert Blanking Cap part C into two corners


Note: Make sure part C. blanking Cap is inserted in two corner brackets. This part may already be

#### STEP 3

Insert Spigots B. into four corner brackets and insert the small quick release button I into the Spigots

### STEP 4

Insert the Lower Back Stanchion Connector LB into two of the corner bracket that already have the spigot in place.

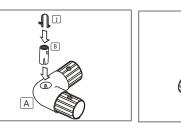


#### Care and maintenance of your goals

We advise adult supervision during assembly and use. Observe and follow warning labels attached to goal. Do not use any components, nets or parts if they are damaged or broken. Spare parts and replacement nets are readily available. If others are to install your goal you should show them how to erect and dismantle the goal and hand them a copy of the fitting instruction. Do not drop any heavy objects on ends of tubes. Hard surfaces: to prevent damage to goal or it's components, loosen soil with a steel pole and moisten with some water before inserting the ground anchors. Do not use the goal in sub zero temperatures, warning labels should be replaced when worn and we recommend replacing them every two years -spare labels available. damaged components requested under guarantee must be returned for inspection. Failure to follow the warnings, fitting instructions contained in this document, may invalidate your guarantee. The company, its agents and representatives do not accept any product liability if used outside the EU. Use of the product in other countries outside the EU including the USA is not covered and appropriate insurance should be taken out by the user to cover for any eventuality. We reserve the rights to amend the specifications of our soccer products in the interest of continued development. Your product therefore may differ slightly to those illustrated. Not suitable for children under 36 months until assembled due to small parts.

NET TIES: We recommend placing the net ties no more than 340mm apart. The net ties supplied are designed to permanently fix the net to the goal frame. If you require to take nets on and off, other net fixings can be used. NOTE: Goal must be anchored otherwise breakages may occur. You must anchor your goals with the multi surface ground anchors provided. At the end of the season nets can be tied into a bundle and placed into a pillow case (not to damage washing machine) and washed at 40 C0 with normal washing powder. The ground frame can be washed with hot soapy water. Any scuff marks on posts can be rubbed off with a light abrasive scouring pad, WARNING: Check the position of any underground services before using the ground anchors and pegs. We take no responsibility for any damage or injury caused in this manner. If you find the nets are worn along the floor it may be rodents, by spreading pepper along the base frame rodents will be deterred. Crossbars will not be replaced within the guarantee period if broken by swinging or climbing or any other misuse. DO NOT try to glue any damaged fixings. Plastic materials in this product vary and this may cause the plastic to break. Always replace any damaged components. NOTE: All plastic extrusions vary and therefore some tubes may be looser or tighter to connector fittings. If you want to increase the diameter of the fitting just wrap masking tape around the part that fits into the tube, twist as you insert the fitting and it will grab to the tube tight. You can make tighter fits by adding more tape.

## STEP 5

crossbar and upright posts. Insert pin to lock.

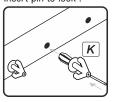

STEP 6

Insert Arrow Net Fixings into Firstly form the ground frame - Connect Backbar L+K+L with the Corner Brackets with the Lower Back Stanchion



STEP 7 Insert Corner **Brackets** with Blanking Caps into

N x 2


**STEP 11** 



Attach Ground Anchors. Anchors must be inserted for the stability of the whole goal frame see details of use overleaf.


STEP 8


Insert uprights N with the Corner Brackets with Blanking Caps into the ground side bars M

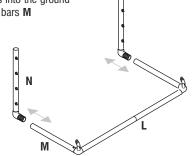

STEP 9

Connect the remaining corners brackets to the Crossbar K+KI and slide onto the uprights

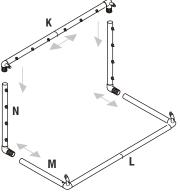

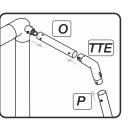

**STEP 10** 

Join top tubes 0 with Top Tube Elbows TTE and back tubes P and connect to the goalpost.









Start with each corner and attach the Net to the goal to the Arrow fixings







Press button in and out to warm up, this helps fitting, once in place this button stavs connected TWO HOLES BUTTON

NOTE: Ensure that the two holes of the stanchion are parallel to the buttons of the Top Tube Elbow before connecting.

**GOAL TIP** 

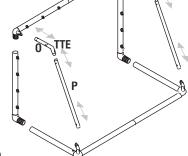

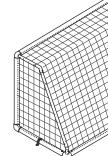

SQUARE MESH Net is cut to shape. Simply throw over the frame and fit each end onto top stanchion by securing on each corner of crossbar.

NOTE: If your net does not fit the first time, you may be fitting it to the goal frame upside down i.e. that is to say the net from the crossbar to the floor (a) is longer than the length of the net to the bottom of the upright.(b)

OPTIONAL - Net ties are ideal to fit nets tightly to the side ground frames and stanchions. This is ideally when nets are left attached to the fully assembled side

TIE A CORD BETWEEN THE TOP SUPPORT TUBES TO SUPPORT THE ROOF OF THE NET (THIS CAN BE LEFT TIED MIN POSITION WHEN DISMANTLED)

IF YOU WOULD LIKE TO CREATE A TIGHT FIT BETWEEN CORNER BRACKETS AND POSTS IT IS POSSIBLE TO ADD A SMALL AMOUNT OF MASKING TAPE(NOT INCLUDING) THIS CREATES A SEAL, IDEAL IF GOALS ARE LEFT IN SITU see over.