

Humidity Control,
Your Way

Smart+ Mode

Automatically detects the level of humidity and adjusts operation accordingly to maintain pleasant indoor conditions.



Auto-Clean System

Keeps air blow for a while after shutdown in order to dry the inner parts of your dehumidifier, thus preventing mold buildup.



Sterilizing Ionizer

Releases ions that bind to harmful bacteria and viruses and destroy them with OH Radical.



DD16GMWE1 | Essence White

DD16GMEE1 | Calming Beige



LG PuriCare™ Dehumidifier

Outright RM3,000	Subscription RM55/mth 7 Years Self-Service	RM85/mth 5 Years Self-Service
	RM85/mth 7 Years Combine Maintenance	RM115/mth 5 Years Combine Maintenance

*Combine Maintenance Plan includes self-service every 6 months and a regular visit every 12 months. Images are for illustration purposes only and may differ from actual products. For continual products development, LG reserves the right to change specifications, availability and pricing without further notice. T&Cs Apply.

Hassle Free Regular Visit
Maintenance Process

Keep your LG PuriCare™ Air Purifier running at its best with our hassle-free maintenance service. Breathe easy knowing we've got it covered for you, ensuring fresh and clean air without any stress!

Regular Visit For

5 OR 7
Years Years

Service Frequency Once Every

6
Months

- 

1. Briefing & Explanation

Inform the customer about maintenance service that will be provided & give an estimated completion time.



2. Getting Ready

Turn off power, lay plastic sheets on the ground.



3. Steam Clean Booster Fan

Disassemble & perform steam cleaning on Booster fan.
- 


4. Remove & Steam Clean

Remove the air purifier cover, steam clean it, then take out the used filters and clean the unit thoroughly.



5. Clean the PM 1.0 sensor

Use a cotton bud & gently clean the lens of the PM 1.0 Sensor.

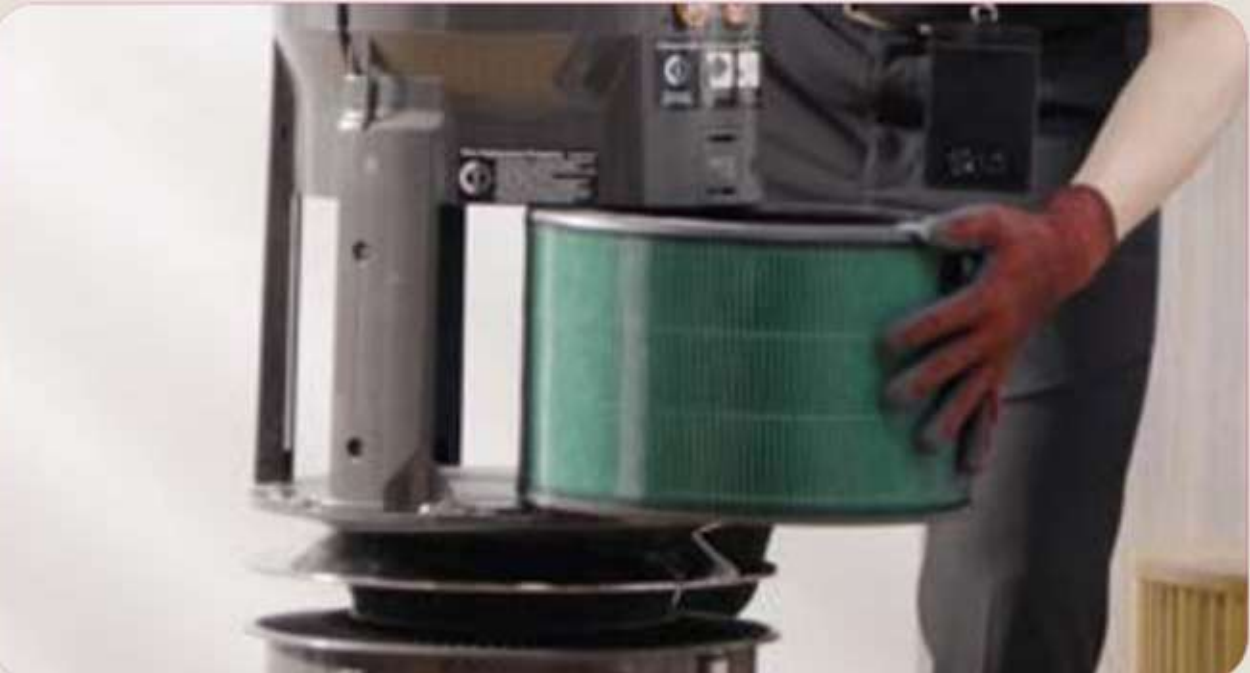

6. Replace Filters

Replace new Ultra-Fine Filter. (Once every 6th months).
Replace HEPA Filters (annually).
- 

7. Reassemble & Power On

Put the air purifier cover back on after installing the new filters & turn on power.



8. Reset Filters

Press SPEED + INDICATOR to reset the upper filter. Press INDICATOR + SLEEP TIMER to reset the lower filter.
(*Press & hold 3 or more seconds)



9. Explanation & Complete

Brief & explain to customer regarding product information after maintenance service.

Images are for demonstration purposes only. LG reserves the right to modify the maintenance process without prior notice.