

Hassle Free Self-Service Maintenance Process

Keep your LG Styler™ performing at its best with easy self-service maintenance. Refresh your clothes effortlessly while ensuring your Styler™ stays in top shape, all without any hassle!

Self Service For

5 OR 7

Years Years

Service Frequency Once Every

6

Months



1. Shelf Removal
Remove the shelf.



2. Aroma Filter Removal
Remove the aroma filter.



3. Lint Filter Removal
Remove lint cover & filter.



4. Lint Filter Cleaning
Clean and dry the lint filter and its cover.



5. Aroma Sheet Replacement
Remove old & replace new aroma sheet.



6. Tank Cleaning
Remove and clean the drain and water tank.



7. Refill & Reassembly
Refill the water tank to the maximum level, and then place the both tanks back into position.



8. Interior & Door Cleaning
Wipe & clean the interior and door surfaces.



9. Reassembly & Complete
Reassemble shelf & maintenance is complete.