

Hassle Free Self-Service Maintenance Process

Keep your LG PuriCare™ Air Purifier running at its best with our hassle-free maintenance service. Breathe easy knowing we've got it covered for you, ensuring fresh and clean air without any stress!

Self Service For

5 OR 7

Years Years

Service Frequency Once Every

6

Months



1. Getting Ready

Turn off power, lay plastic sheets on the ground.



2. Remove & Clean

Remove the air purifier cover, take out the used filters, and clean the unit.



3. Clean the PM 1.0 Sensor

Use a cotton bud & gently clean the lens of the PM 1.0 Sensor.



4. Replace Ultra-Fine Filter

Replace new Ultra-Fine Filter. (Once every 6th months)



5. Replace HEPA Filter

Replace new HEPA Filter. (Annually)



6. Reassemble & Power On

Put the air purifier cover back on after installing the new filters & turn on power.



7. Reset Upper Filter

Press and hold the SPEED and INDICATOR buttons simultaneously for 3 seconds or more.



8. Reset Lower Filter

Press and hold the INDICATOR and SLEEP TIMER buttons simultaneously for 3 seconds or more.



9. Maintenance Complete

Self Service maintenance is done.