
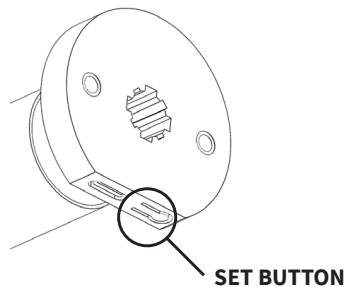
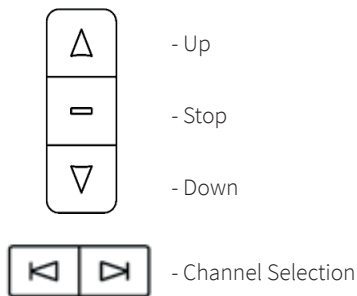


BASIC PROGRAMMING INSTRUCTIONS

INITIAL SET UP

1. To start you will need an installed motorised blind, remote control and push pin/paperclip/pen.
2. Make sure when fitting the blind into the brackets that the SET button & charge port are facing downwards.

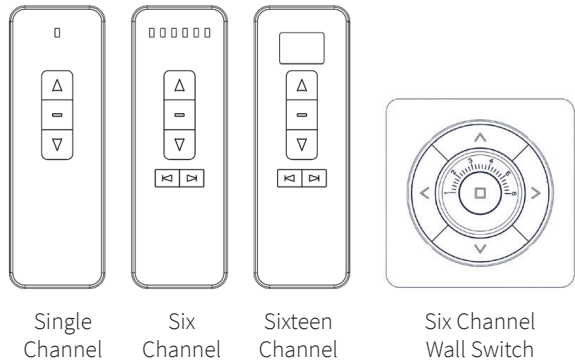

MOTOR RESET

3. Press SET button, release when light shows
4. Press SET button again, release when light shows
5. Press SET button and hold until light shows twice
6. Press SET button and hold until motor jogs twice

LINK REMOTE TO MOTOR

7. If using a multi channel remote, select required channel by using the 'Left or Right' channel selection buttons on the remote. If using a single channel remote, proceed to Step 8
8. Press Set button on motor until the motor jogs. Press the 'Up' button on the remote, motor will jog

CHANGING MOTOR DIRECTION

9. Using the remote, check that the motor is turning in correct direction. If motor direction does not need adjusted proceed to step 11. If direction needs changed, follow step 10.
10. Press Stop button on remote for approx. 5s, motor will jog. Press the 'Down' button on the remote, motor will jog

Before commencing level setting, please remove back cover of remote to access 'Program' button.

If using a wall switch, remove control panel from wall mount to access 'LEARN' button.

Note: When entering upper limit level setting it is important that after the 'Program' button has been pressed the first button pressed is the level UP button on the remote. This first button press determines which level is being set. If the down button is pressed first it will store the first position set as the lower limit.

SET BLIND LEVEL

Upper Limit:

11. Press 'Program/Learn' button on back of remote, until motor jogs
12. Press 'Up' button on remote, blind will raise. Stop blind at desired upper position
13. Press 'Program/Learn' button on back of remote, until motor jogs



Lower Limit:

14. Press 'Down' button on remote, blind will lower. Stop blind at desired lower position
15. Press 'Program/Learn' button on back of remote, until motor jogs
16. Press 'Program/Learn' button on back of remote, until motor jogs

Mid Limit(s):

17. Use 'Up & Down' buttons on remote, stop blind at desired position
18. Press 'Program/Learn' button on back of remote for, until motor jogs
19. Press 'Program/Learn' button on back of remote for, until motor jogs

PROGRAM BUTTON

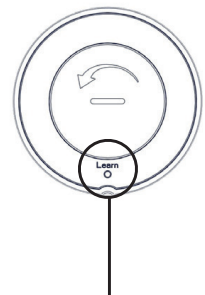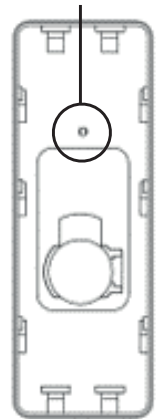

LEARN BUTTON