


FAA-450 EU1KY Antenna Analyzer Operation Guide Rev 1.01



Elekitsorparts Store

www.elekitsorparts.com

Important Notice: A flat-top 18650 battery is recommend for this analyzer. The battery holder contains a built-in battery protective circuitry, so an activation procedure is needed before powering the analyzer on, otherwise it will not output voltage, and the analyzer will not be powered on.

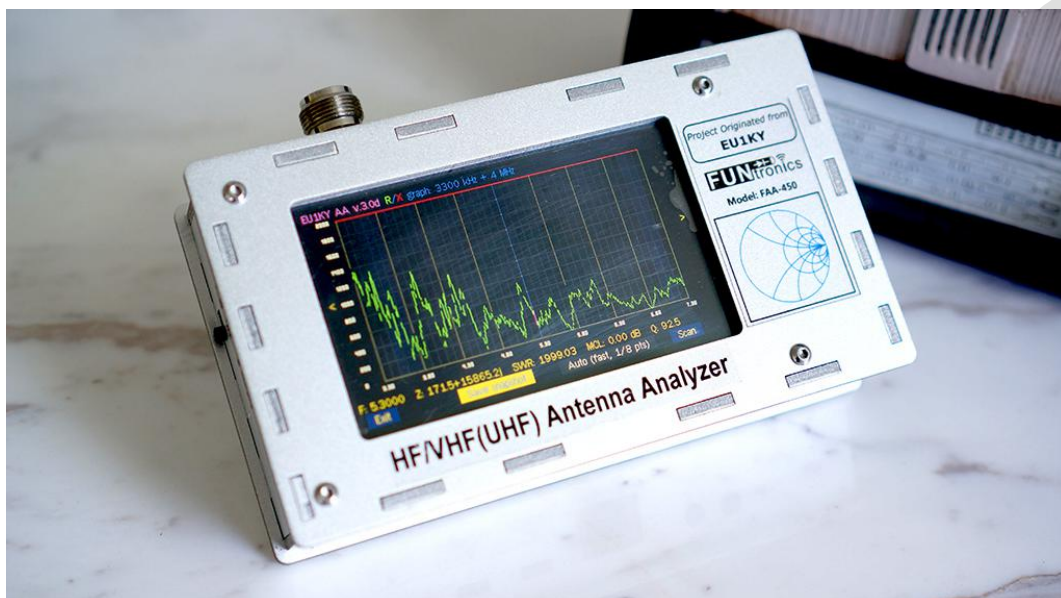

1. Description

The FAA-450 Antenna Analyzer is an open source project built from STM32-F7 Discovery board. This project originated from “EU1KY Antenna Analyzer V3”, which features with BIG COLOR TFT LCD, CAPACITIVE TOUCHSCREEN, HF/VHF(UHF) frequency coverage, built-in TDR function, and multiple scanning plots besides with SWR. These features may outperform many expensive antenna analyzers present on the market. The analyzer utilizes the DSP technology to analyze the sampled and lower converted (10KHz) V & I signal and derive the their magnitude ratio and phase difference. The calibrated measured results could be very accurate for amateur radio purpose. However, an Open-Short-Load calibration is required to compensate transmission line influence on measured parameters before the final usage.

Moreover, the device is able to work up to 450 MHz for some less accurate measurements. (Using 3rd harmonics of both signal and LO above 150 MHz, or above 200 MHz if properly configured).

The FAA-450 comes with an aluminium enclosure which consists of 6 sheets of 3mm aluminium plates, all are in silvery anodic oxidation. A cell of 18650 Li-ion battery is needed to power up the analyzer, and you can switch the analyzer to the charging mode if a USB power source is connected. It will stop the charging process if the battery cell is fully charged.

Also, the analyzer comes with a 16G TF card for storing the calibrated files and saved measurement results, and this could be a creative feature of this analyzer.

Weighing just over 1.2 pounds, the FAA-450 is ideal for convenient bench work or the field testing, which could be a nice partner for Radio Amateurs, and RF engineers.

2. Features


- Silvery Anodic Oxidation aluminium case
- Built-in Li-ion charging circuitry and DC-DC booster
- Comes with a N-type to SMA port adapter
- Comes with a set of Open-Short-Load calibration kit
- Comes with a cloth bag for storing the analyzer
- All capacitive touchscreen on the display - no buttons are needed
- Settings and calibration files could be saved on the TF card
- HF/VHF(UHF) continuous coverage
- Big and fast 480×272 4.3" TFT LCD display
- PC USB connection is supported for remotely measurement

3. Specification

- Frequency Range: 1-150MHz
- In/Out Impedance: 50
- RF OUT Level: -20 dBm Square Wave Out
- Measurement Parameters: SWR, R, +Jx, -Jx, |Z|, Returnloss
- Measurement Mode: Single point measurement, Scanning (Frequency Sweep), and TDR Mode
- SWR Measurement Range: 1.0-1999 (Single Point Mode), 1.0-20.0 (Scan Mode)
- Display Modes: Numerical Display, Scan Plots, Smith chart
- Connector Type: UHF N-type Connector
- LCD size: TFT 4.3"
- Touch Screen Type: Capacitive
- Power Source: USB or Internal 18650 Li-ion
- External Storage Method: TF card
- Dimensions: 163 • 92 • 37.5 mm (6.42" • 3.62" • 1.48")
- Weight: 535g (1.18 lbs)

4. Powering it up

The FAA-450 could be powered up by 1 cell of 18650 Li-ion battery or by your PC with a mini-USB cable connected to the ST-LINK port. A power switch is located at the left side edge of the unit. Sliding the switch to ON for powering the unit on, and to CHG for charging the internal battery. Don't forget to insert 1 18650 battery before charging up! By sliding the PWR switch to OFF location, the unit will be powered OFF. The power switch is illustrated as the following pictures:

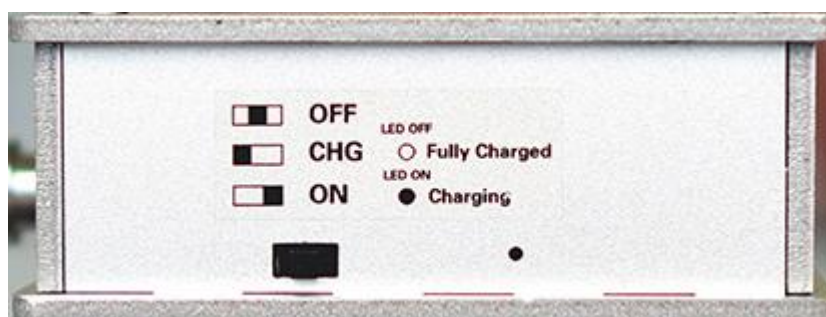

Picture 1: Power switch


Even if there is no battery installed, you can still power the unit up by your PC with a mini-USB cable connected to the unit's ST-LINK port. Due to the ST-LINK circuitry regulations on STM32F7-Disco board, connecting this port to a cell phone charger or other power supply except a PC may not power up the unit or charge the internal 18650 battery. There is no this problem on some earlier versions of STM32F7-Disco boards.



Picture 2: Powering the Unit Up from ST-LINK Port

5. Battery Installation

The FAA-450 uses 1 cell of 18650 LI-ion battery as the internal power source, and there is an battery holder inside its metal case. For installing a 18650 battery, you need to open its back cover by screwing out the 4 socket head cap screws with the supplied hex keys.

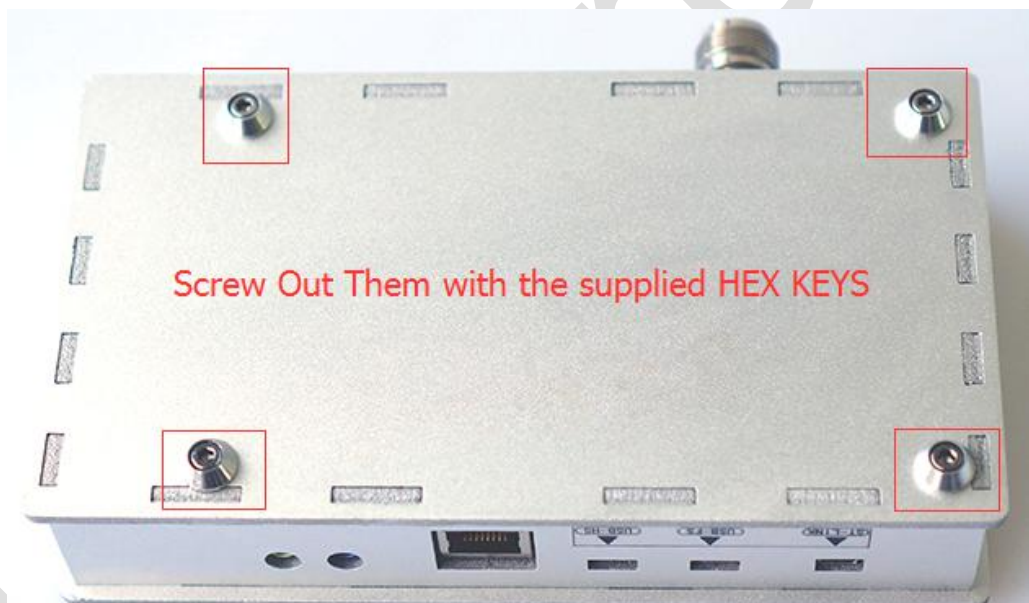


Picture 3: Screw out the 4 socket head cap screws

Then, open the back cover carefully and slowly, if it's tight, use a rubber hammer or wooden hammer or a screw driver's handle to knock the back cover out slightly. Do not use too much strength, as this may make the aluminium sheet deformed.



Picture 4: Knocking out the back cover by the rubber handle

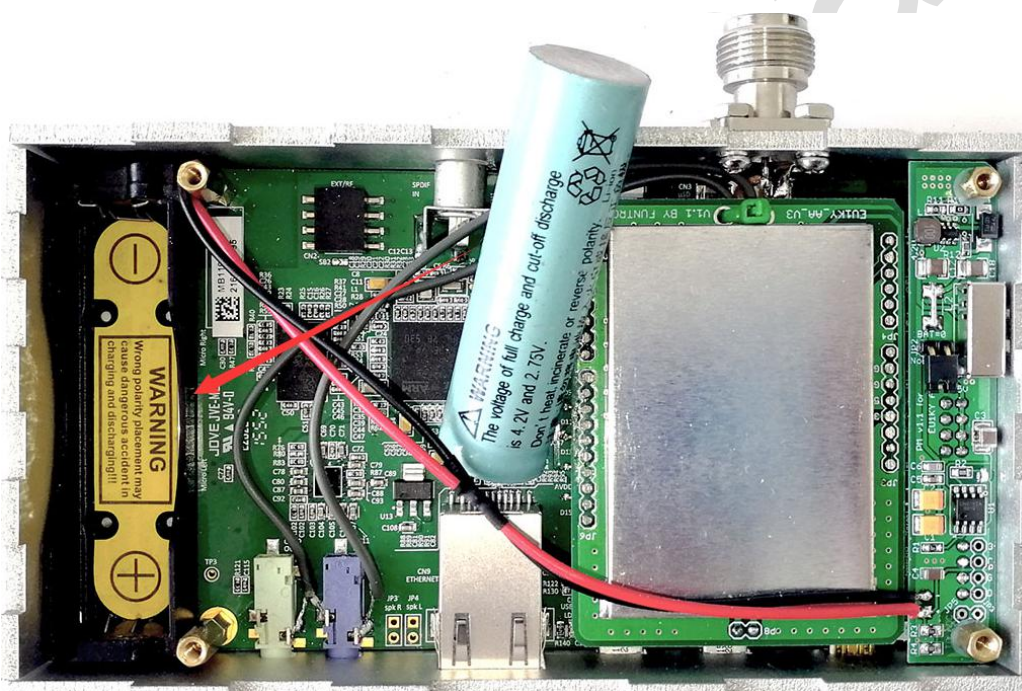

Picture 5: Installing the 18650 battery

The battery holder contains a built-in battery protective circuitry, so an activation procedure is needed before powering the analyzer on, otherwise it will not output voltage, and the analyzer will not be powered on. Please follow the instructions below to **ACTIVATE** the battery holder:


1. Insert the battery to the battery holder, pay attention to the Positive and Negative polarity when doing this.
2. Connect the analyzer to your PC with a mini-USB cable (ST-LINK).
3. Slide the switch to CHG to activate the battery holder. When it is in CHG, the ORANGE led will be light. That says the battery is being charged.
4. To test battery, dis-connect the mini-USB cable and slide the switch to ON, and this will power the analyzer on.

6. Main Screen

The EU1KY FAA-450 analyzer is very different from other antenna analyzers, there is no buttons, switches, tuning pots on the unit, and all of the operations are through the touch screen. When the unit is switched ON, the main screen displays 'EU1KY antenna analyzer V.3' shortly, then goes to the main menu, where we can access all of the functions of this analyzer. See the picture below:



Picture 6: EU1KY antenna analyzer v.3

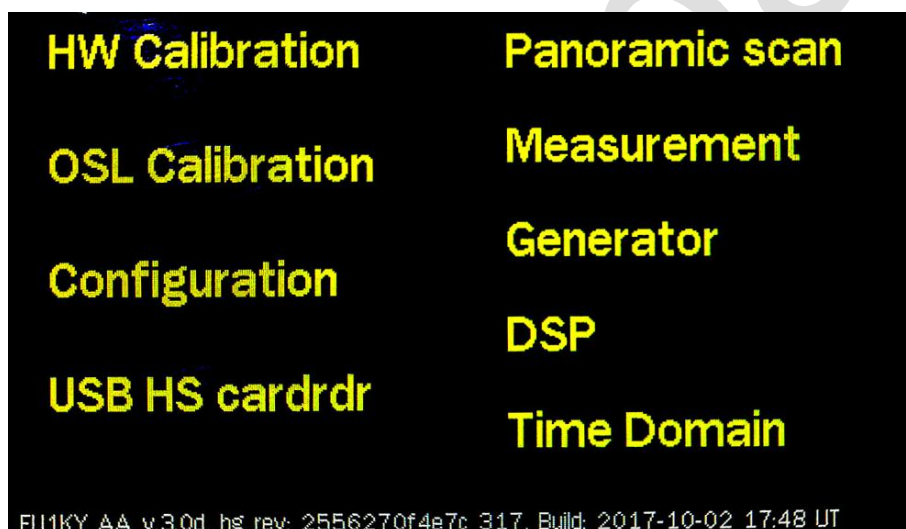

Picture 7: Main screen of FAA-450

There are 9 items on the main screen, click one of them will enter into them or the sub-item. The short description of each item is as the following:

1. **HW Calibration:** This is for Hardware Calibration Process, the jumper on the RF board should be set to 'HWCAL' before this operation. The HWCAL is used when the unit is initially assembled and for testing the RF front end only.
2. **OSL Calibration:** This is for Open-Short-Load calibration. It is really important, and the jumper on RF board should be set to 'Work'. The calibrated file is stored on the SD card for the measurement correction. The calibrated value will be used in the real work.
3. **Configuration:** This sub-menu is used for configuring some physical and operational parameters of this analyzer, all of the parameters set here will be stored in the TF card as file AA/CONFIG/CONFIG.BIN. Please keep in mind that the configurations in this sub-menu is really important, make sure you know what to do here before changing any of the parameters.
4. **USB HS cardrdr:** USB storage access via USB HS port. You can access the on board TF card via this sub-menu by connecting a micro-USB cable to STM32F746G-Disco board's USB-HS port. This item is really useful for access the screen snap file, configuration file, and the calibration file, as you don't need an additional USB card reader to do this.

5. **Panoramic scan:** A panoramic scan can make a measurement really intuitive, especially when measuring an antenna's lowest SWR points, it's really straight-forward, and useful. You can set the scan beginning frequency and the span, and all of the measurement results will be kept in plot on the screen.
6. **Measurement:** Unlike the panoramic scan, which scans the frequency point from one to another, this item takes a single point measurement, but it keeps several measured results in one screen, VSWR, R, X, Z, MCL and Mag Difference etc.
7. **Generator:** In generator, you can view some basic raw values of the DSPed value, such as V_i , V_v , Mag Ratio, Phase Difference, and all of them are RAW value, that says they are not corrected by the calibrated values. These values are useful for diagnostic purpose. You set the frequency point in this mode, and there is a RF square wave output from the antenna port.
8. **DSP:** This is for monitoring the magnitude of the 2-channel 10KHz signals coming from the RF front end, also for the diagnostic only.
9. **Time Domain:** A time domain measurement is a higher-level usage of this instrument. It detects the reflected signal in the cable and measures the distance from the RF feeding point to the reflection point. This is useful as you can determine the broken point of your coax cable, or the length of your coax if there is no broken point. Please keep in mind that all of the measurement results are based on the preset TDR Velocity Factor (0.66 by default), which you can access from the configuration sub-menu.

7. Operation

For a better understanding of this analyzer, this operation section will be divided into 3 parts, according to the different usage levels and instrument functions. They are basic operations, configurations and calibrations, system monitoring.


In Basic Operation, the menu item 'Measurement, Panoramic Scan, and USB HS carddr and Time Domain' will be covered. In Configuration and Calibrations, 'HW Calibration, OSL Calibration, Configuration' will be included, and in System Monitoring, the menu item 'DSP and Generator' will be covered.

7.1 Basic Operation


In this part, we will introduce the menu item 'Measurement, Panoramic Scan, and USB HS carddr and Time Domain', most of which will be accessed when doing the real antenna measurements.

7.11 Measurement

In the main screen, touching 'Measurement' will get into the single frequency point measurement mode. See the pictures below:

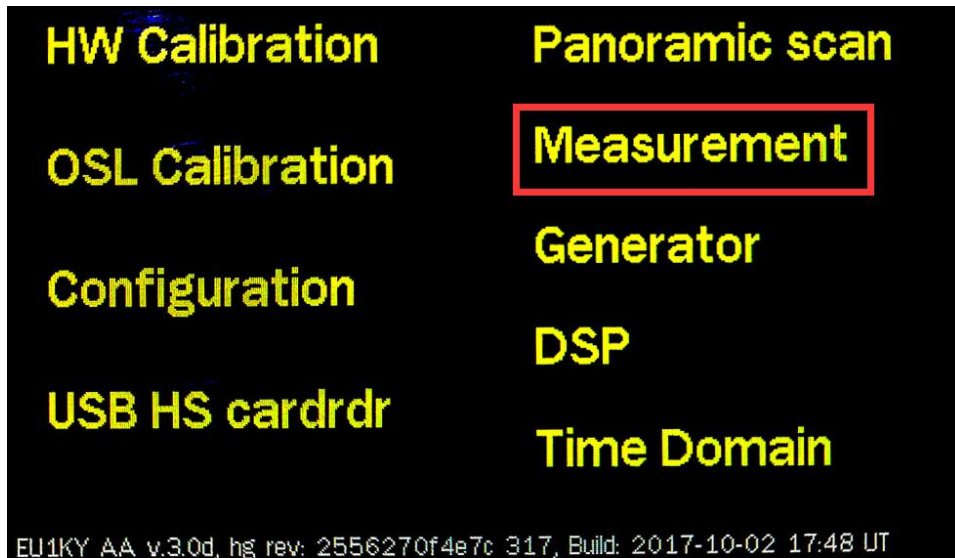

Picture 8: Touching 'Measurement' to get into measurement mode

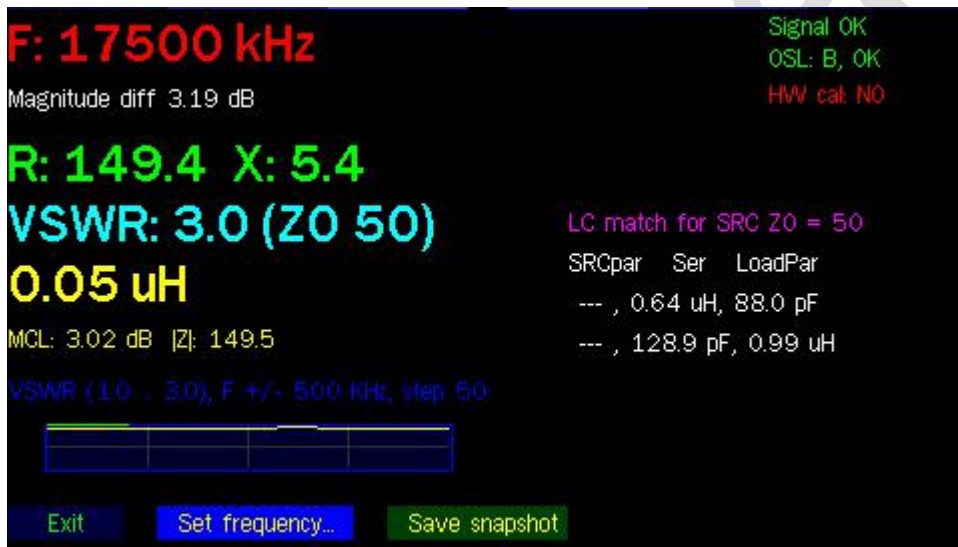


Picture 9: Main display in measurement mode

In the main screen of Measurement mode, the unit measures the connected antenna, and returns several measured values: R, X, VSWR, MCL, |Z|, Equivalent L or C, LC Match Parameters, and Smith Chart.


A. Frequency Tuning:

There are 2 ways to change the frequency in this mode, one is to tap the upper part of the screen for tuning the frequency in 10KHz, 100KHz and 500KHz steps, and the other one is to 'click Set Frequency' button located on the lower part of the screen for directly inputting the desired frequency. See the following pictures:

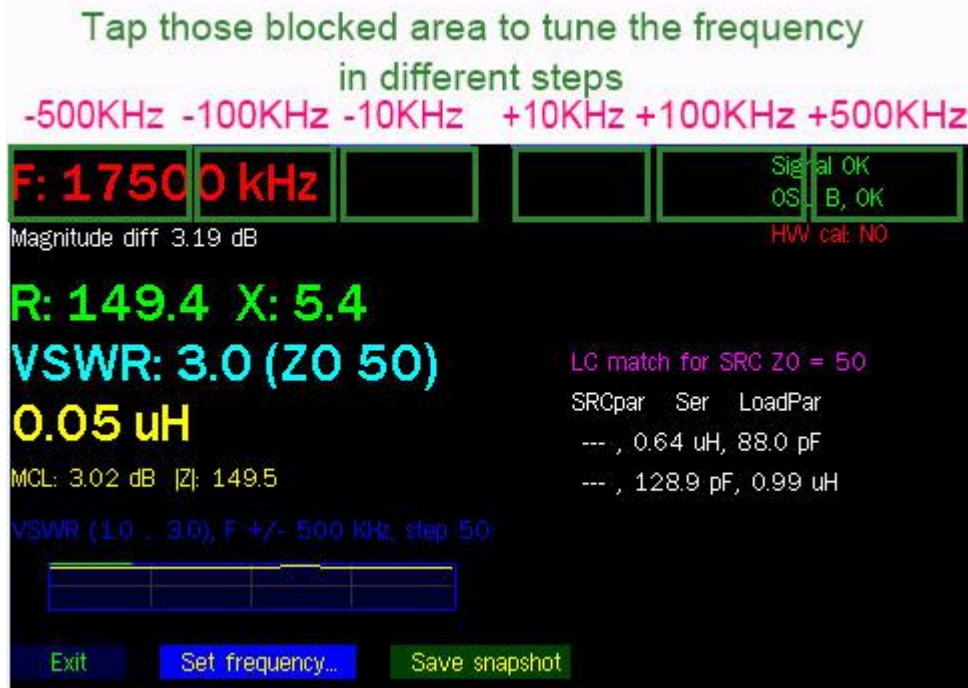

Picture 9: Frequency tuning in measurement mode

If we click the 'Set frequency..' button, the unit will show the direct frequency input screen. Tap the numbers on the screen to input the frequency in KHz, click 'OK' to confirm. Click '<-' to delete the last input. Clicking 'Cancel' will cancel the input and return to the measurement screen.

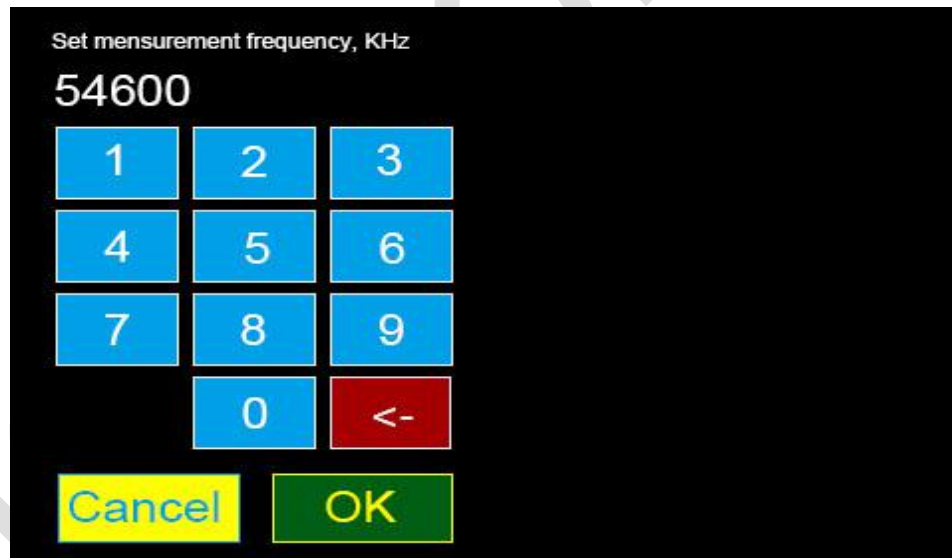

Picture 10: Direct frequency input in measurement mode

B. Measured Parameters:

The explanation of the measured antenna parameters is as the following:

R: The true resistance value of the measured antenna, in OHM. It's part of the complex impedance.

X: The reactance value of the measured antenna, in OHM, could be Positive or Negative. It's part of the complex impedance. The frequency point where X closes to zero is the true resonant point of the antenna. If the measured X is in Positive, that means the reactance part of antenna acts like a inductance, while it is in Negative, it means it acts like a capacitance.


VSWR: SWR ratio, measured range from 1 to 1999. The bigger this value, the more reflected energy in your antenna, and the lower efficiency.

MCL: Measured Cable Loss, in dB, it tells you the loss of your coax. Please note that when measuring the loss of a coax, the far end of the coax should be left open with no loads connected. The bigger number in this value, the more lossy coax.

|Z|: The general complex impedance of an antenna, in OHMs. $|Z| = R \pm j(X)$

Equivalent L or C: When the $X > 3$ or $X < -3$, the unit will give the equivalent L or C value. $X = 2\pi F * L$ or $X = 1 / 2\pi F * C$. When X is positive, it gives the equivalent L in uH. When X is negative, it gives the equivalent C in pF.

LC Match Parameters: It represents the L or C value needed for a good match to 50 ohms. LC match is widely used in a mismatched system for matching the system to $Z_0=50$ OHM. It is commonly used in antenna tuners. The calculated values in FAA-450 could be represented in the following chart:

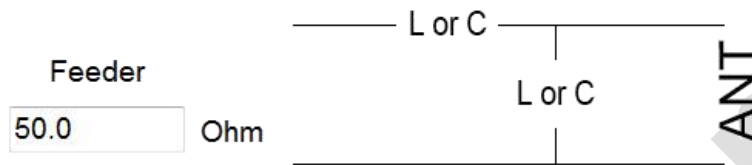

Picture 11: LC match


For example, the calculated LC match for 50 ohms @17.5MHz is 0.64uH, 88pF, or 128.9pF, 0.99uH. In FAA-450, it shows the following chart on the right part of the screen.

```


LC match for SRC Z0 = 50
SRCpar Ser LoadPar
--- , 0.64 uH, 88.0 pF
--- , 128.9 pF, 0.99 uH
    
```

Picture 13: The Calculated LC Match Value on FAA-450

We could use the charts below to represent them. Each set of the values can transform the mismatched impedance to a true 50 OHM system.

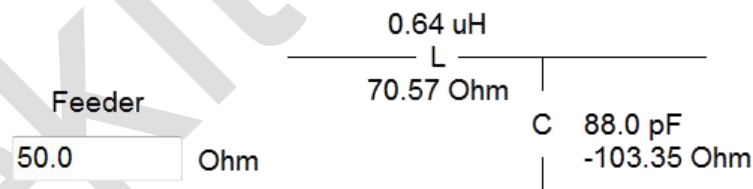


Picture 14A: LC Match in Parallel C Configuration

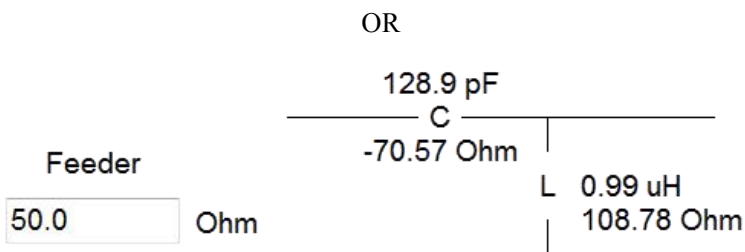

Picture 14B: LC Match in Series C Configuration

Smith Chart: FAA-450 also support the smith chart display. There is a green point mark in the circle (smith chart). The diameter of the circle is labeled 10, 25, 50, 100, 200 ohms. Normally, for a well matched 50 ohm system, the green point mark

should be located rightly on the diameter line of the circle, without any up or down offset, and that says $X = 0$. For a detailed information on how to use smith chart, please read the Smith Chart chapter of ARRL Antenna Book.

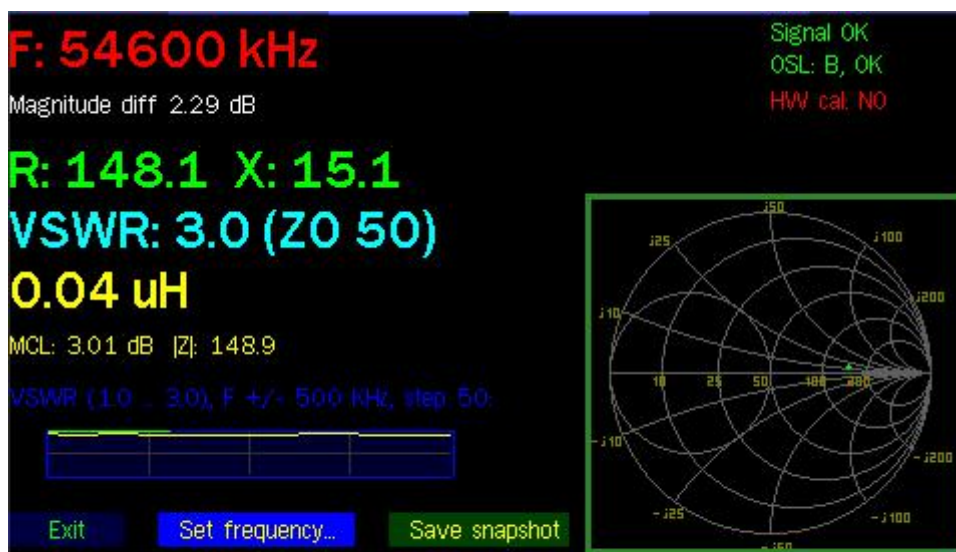

Tap the green block area to switch between the calculated LC match and smith chart display.

Picture 15: LC Match in Series C Configuration

C. Other Information:


There is also a small area of screen that shows the SWR plot in the span of +500KHz, from SWR1.0 to SWR 3.0. It is really convenient for monitoring the band-width of an antenna as you do not need to go to the panoramic scan.



Picture 16: SWR plot view in measurement mode

To exit 'Measurement' mode, just click 'Exit' button, then the unit goes back to the main menu screen.


To snapshot the measurement screen, just click 'Save snapshot' button, it then goes into the file naming screen. Tap the numbers and characters on the screen to name the saved file, and then click 'OK', see the picture below:

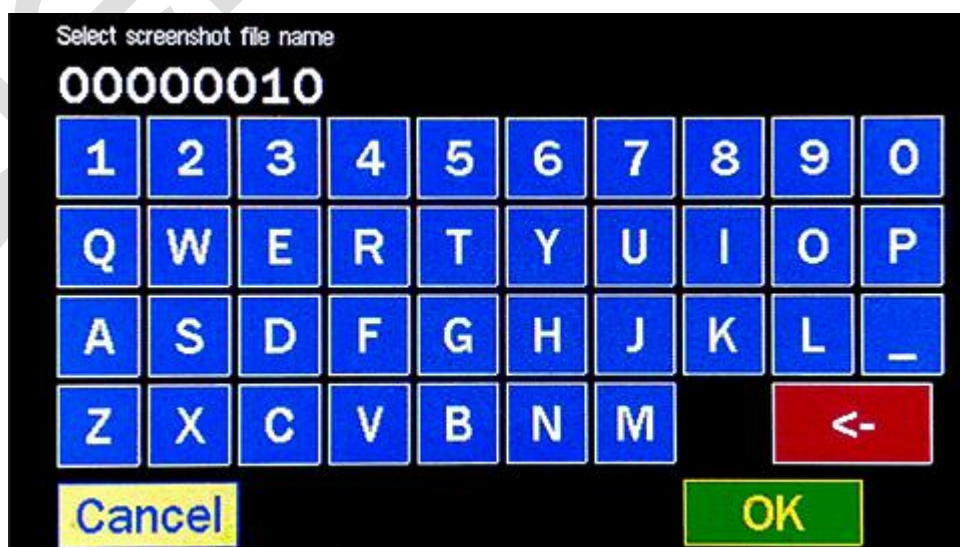

Picture 17: File naming screen in snapshot

7.12 Panoramic Scan

In the main screen, touching ‘Panoramic scan’ will enter the panoramic scan mode. A panoramic scan can make a measurement really intuitive, especially when measuring an antenna’s lowest SWR points, it’s really straight-forward and helpful. You can set the scan beginning frequency and the span, and all of the measurement results will be kept in plot on the screen.

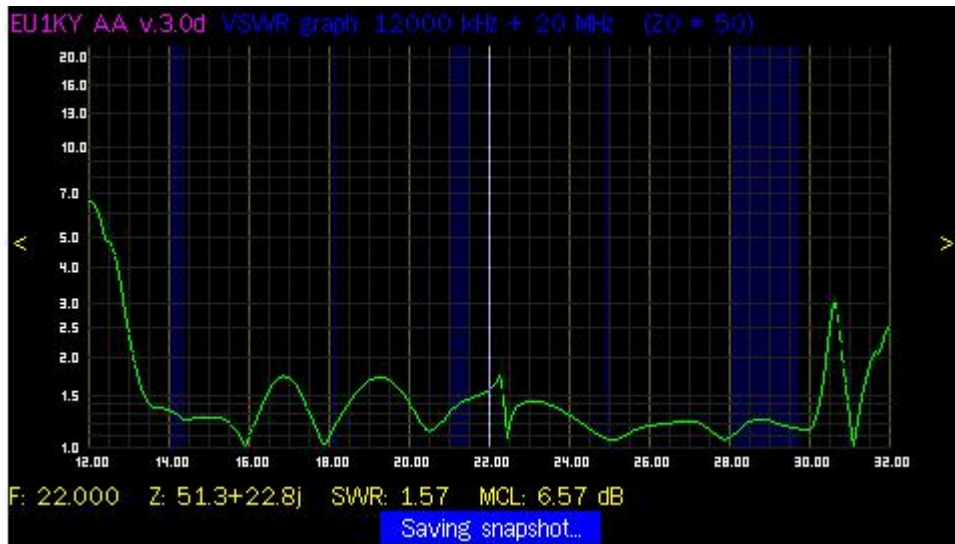

Picture 18: Panoramic scan

In panoramic scan mode, there are 4 types of graphs(plots) could be switched between, and they are VSWR graph, R/X graph, S11 graph, and Smith chart. There are also 2 key parameters for setting in this mode, Starting or Central Frequency and Frequency Span. See the picture below for frequency setting and graph switching. In addition, a marker is also enabled on the screen in panoramic scan mode, to change the maker position, just touch and hold the left or right arrow on the screen.



Picture 19: Changing frequency and graph switching in panoramic scan




Picture 20: Marker operation in panoramic scan

A. Frequency and Span:

To set the frequency, tap the upper green blocked area in picture 19, and then getting into the frequency and span setting screen, see the pictures below. Please note that you can set the scanning frequency as the scanning starting frequency or the central frequency, and you need to configure it in the configuration menu first. By default, the system uses the scanning starting frequency as the default scanning mode in panoramic scan.

If the PAN_CENTER_F is set to Start F in Configuration Editor, the Scanning range = starting frequency + span, and if it is set to Center F, the Scanning range = span/2 + central frequency + span/2.

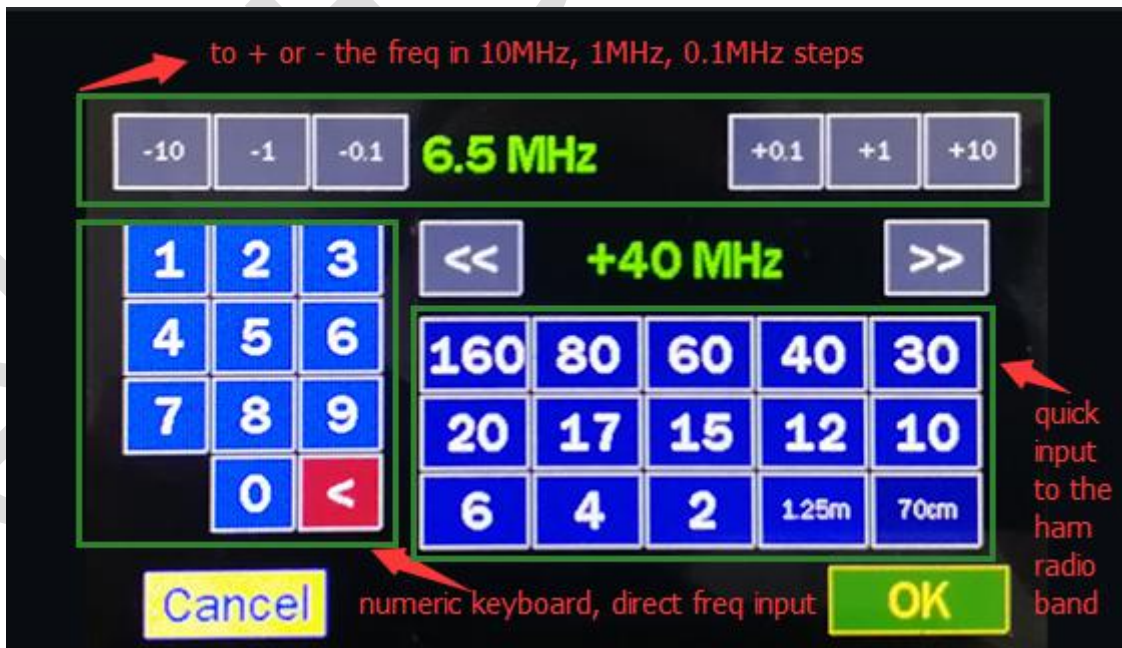

Picture 21: Input frequency in panoramic scan



Picture 22: Setting span in panoramic scan

B. Different Graphs (Plots):

4 types of graphs (plots) could be selected in panoramic scan mode. Tap the central green blocked area to switch between them as it shows in picture 19.

In VSWR graph, x axis is the frequency span, and y axis is the swr value. In R/X graph, x axis is the frequency span, and y axis is the R or X value in OHMs, ranging from -2000 ohms to 2000 ohms. Please also note that the y axis labeled value range could be dynamically changed according to the measured max and min R or X value. In S11 graph, x axis is frequency span, which is the same to the 2 previous graphs, while y axis is the return-loss in dB, whose labeled range can also be dynamically changed according to the measured max values. The final graph is the smith chart, which is very different from the previous 3 graphs. There no x and y axis in this graph. Instead, the horizontal diameter line of the circle shows the R value ranged from 0 to 2000 ohms, while the arc on the circle is the X value ranged from -2000 ohms to 2000 ohms.




Picture 23: Smith chart in panoramic scan

C. Other Information:

To exit the panoramic mode and return to the main screen, just tap 'Exit' button on the lower end of the screen. Tapping the

‘Save snapshot’ will save the current measurement to TF card in PNG format. Tapping ‘Auto (fast, 1/8 pts)’ will perform a automatic real-time continuous scanning. To make a single time scan, tap ‘Scan’ button one time.

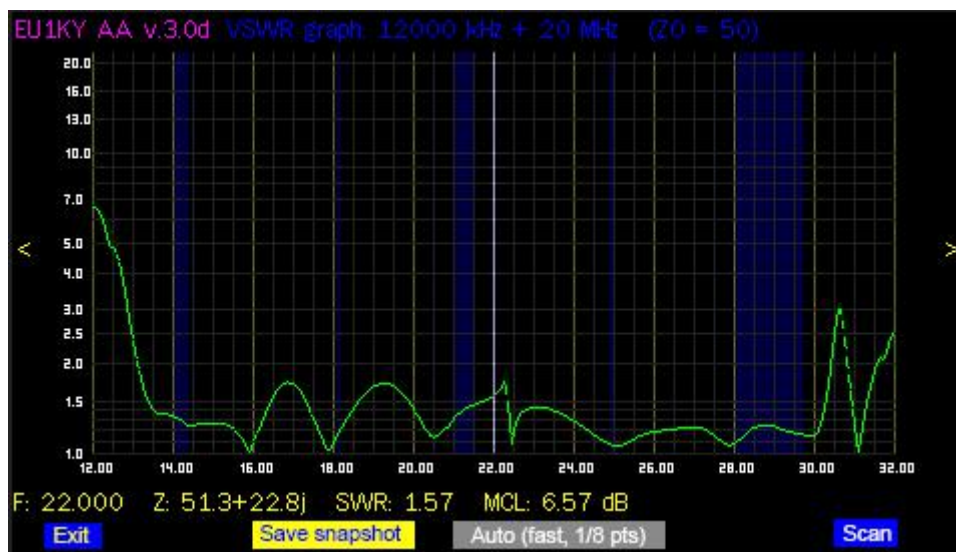

Picture 24: Other buttons on the lower part of the screen in panoramic scan

7.13 USB HS cardrdr

On the main screen, touching ‘USB HS cardrdr’ will enter the usb storage access mode. In this mode, the internal TF card will be emulated to a USB flash disk and listed in your windows explorer. You can access the configuration files, screen shot pictures and calibration files via USB HS port from your PC. There is no need to unplug the TF card from the analyzer and read the card via a USB card reader.



Picture 25: USB HS cardrdr

Please following the instructions below to access the files on the TF card:

- Turn on FAA-450 and make sure it is on the main screen.
- Connect FAA-450 to your PC via USB-HS port by the supplied micro-USB cable
- Tap ‘USB HS cardrdr’ to get into the USB storage access mode.
- When it is in USB storage access mode, wait about 30s until your PC finds a new hardware. The driver will be installed, and a new disk will be added in your disk list in the windows explorer. See the picture below:

e. When finished, eject this new disk just as the normal flash disk does in your PC. Or tap 'Exit(Reset device)' on FAA-450, this will eject the emulated disk automatically and reboot the analyzer.



Picture 26: A new disk is found and labeled ANALYZER



Picture 27: The AA folder contains all of the sub-folders and files used by FAA-450

The analyzer's configuration file is saved in the CONFIG folder as CONFIG.BIN. The OSL calibration files are saved in OSL folder named as A.OSL or B.OSL and ERRCORR.OSL. The screen shot pictures are contained in SNAPSHOT folder as PNG format, also the logged plot file in S1P format.

7.14 Time Domain

Time Domain mode detects the reflected RF signal in the coax and measures the distance from the coax feed point to the reflection point. It is useful as you can determine the broken point of your cable, or the length of your coax if there is no broken point. Please keep in mind that all of the measurement results are based on the preset TDR Velocity Factor (0.66 by default), and you can access TDR setting from the configuration sub-menu.

To get into the TDR mode, tap 'Time Domain' on the main screen, then it shows:



Picture 28: Time Domain mode

Connect a coax cable, and tap 'Scan' to begin scanning. The unit will begin to scan and it will stop scan in about 10s. The picture below is a example scanning of a 5 meter foam coax of which velocity factor is 0.84.



Picture 29: Information given in Time Domain mode

Tap the Left or Right arrow on the screen to make the maker line on the peak position of the plot. We will get the measured values of the marked position as: **T:39.1 ns, Mag: 0.60782 Dist: 4.9m (@Vf = 0.84)**, where T is the time, in Nano Second, Mag is the Magnitude Ratio, Dist is the distance in Meter. So, the Time Domain mode could be used to measure a unknown length cable, but its velocity factor should be known first.



Picture 30: Moving the maker to the peak to find the distance


7.2 Configurations and Calibrations

A calibration process is needed for each initially built FAA-450, including the HW Calibration and the OSL Calibration. They could be accessed from the main screen.

7.21 HW Calibration


For HW Calibration, **the jumper on the RF board should be set to ‘HWCAL’ position.** The HW Calibration is used when the unit is initially assembled and for testing the RF front end only.

To access the HW Calibration, tap ‘HW Calibration’ sub-menu on the main screen, and the unit gets into the HW calibration screen, as it shows on picture 31.

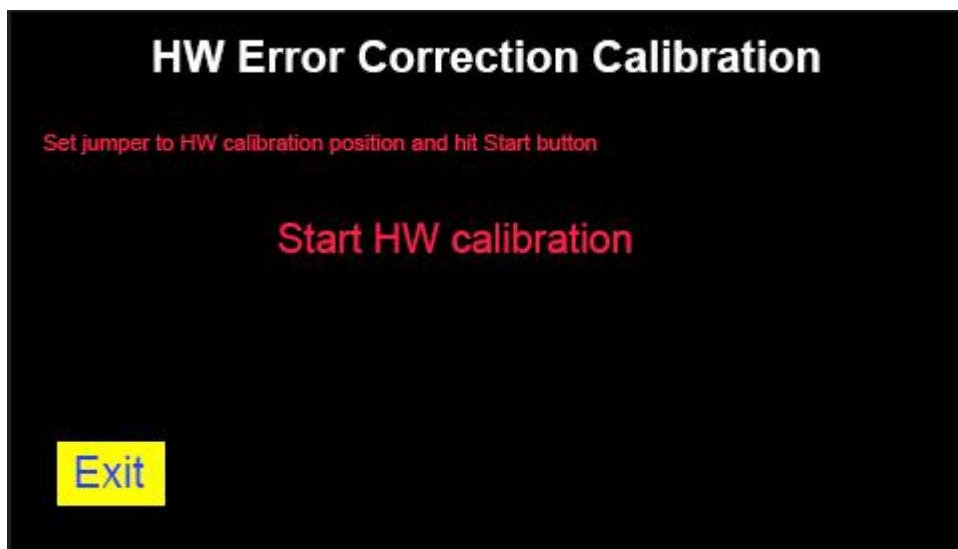

Picture 31: HW Calibration sub-menu

Make sure the jumper on RF board is right on ‘HWCAL’ position, and if everything is OK, tap ‘Start HW calibration’, then the unit begins the HW calibration process, it will take a short while, according to the frequency range and other settings in the configuration menu. The background of button ‘Start HW calibration’ changes to dark yellow while it is in calibration process, and there is also a number showed in percentage on the right upper place of the button to indicate the progress. Never turn off the unit at time. It will finish the HW calibration process and stores the calibrated file in TF card when it is in 100%. Tap ‘Exit’ to exit the HW calibration mode.

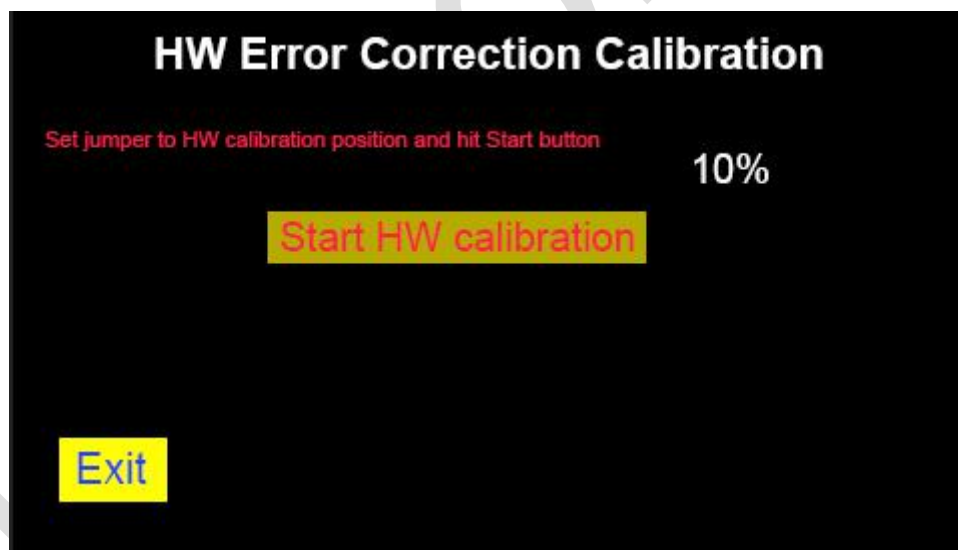

Picture 32: HW Calibration in progress

7.22 OSL Calibration

For OSL Calibration, **the jumper on the RF board should be set to ‘Work’ position**. The calibrated data is stored on the SD card for the future measurement correction and these values will be used in the real work.

To access the OSL calibration, tap ‘OSL Calibration’ sub-menu on the main screen, and the unit gets into the OSL Calibration screen, as it shows on picture 31.


Please check the following things before doing a OSL Calibration:

- ① Jumper on RF board is on ‘Work’ position.

- ② Set the 'OSL_SELECTED' parameter to file A, B or C in Configuration sub-menu, otherwise you can not enter into the OSL Calibration sub-menu.
- ③ Also in Configuration sub-menu, set the correct values to OSL_RLOAD, OSL_RSHORT, OSL_ROPEN. For the calibration set from elekitsorparts store, set OSL_RLOAD = 50, OSL_RSHORT = 0, OSL_ROPEN = Open. These values are truly important, please check them before the further operation.
- ④ Prepare the 3 loads, Short, 50 Ohm and Open.

If everything is fine, connect the 0 Ohm load to the antenna port first of all, and tap the 'Scan short: 0 Ohm' button on the screen, then it begins the 0 Ohm load calibration process. The background of the button will be changed to 'dark yellow', and there also a number showed in percentage on the right of the button. The process may take some times as the unit scans the frequency in 100KHz steps in the whole operational frequency range. When the 0 Ohm calibration is done, a green background is replaced on the button. Now, disconnect the 0 Ohm load and connect the 50 Ohm load to the antenna port, tap the button 'Scan load: 50 Ohm' to start the second step of OSL calibration. And, so on for the final open load.

When all of them are done, tap 'Save and exit' to store the calibrated data on TF card and exit OSL calibration mode.

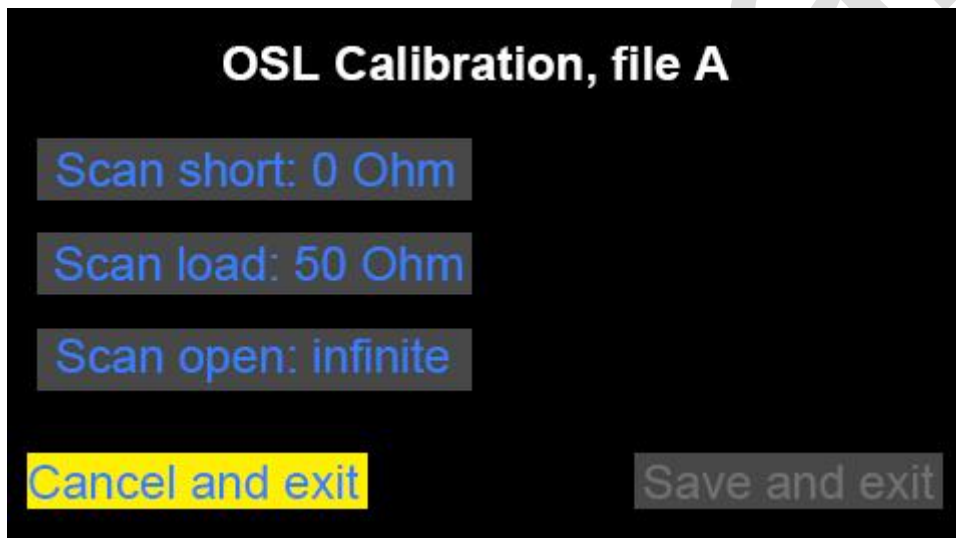

Picture 33: OSL Calibration



Picture 34: Scanning 0 Ohm load is in progress




Picture 35: All of the steps are done

7.23 Configuration

All of the physical and operational parameters of this analyzer are configured through Configuration sub-menu. The parameters configured here will be stored in the TF card as file AA/CONFIG/CONFIG.BIN. Please keep in mind that some of the configurations in this sub-menu is truly important, make sure you know what to do here before changing any of the parameters.

To access the Configuration sub-menu, tap 'Configuration' on the main screen, then the unit gets into 'Configuration editor', as showed in picture 36.

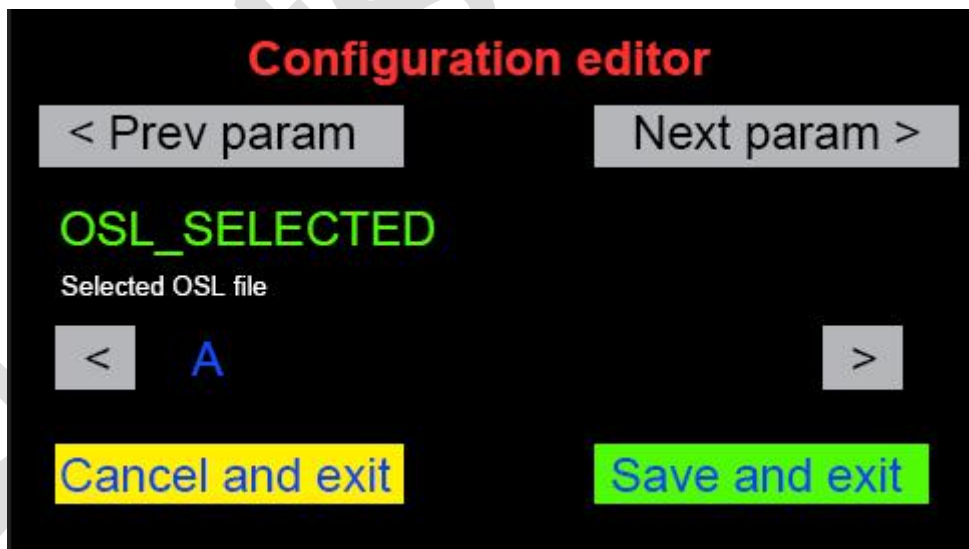

Picture 36: Configuration editor

The configurable parameters and their default values are listed in the table below, but please note that there may be new parameters added in Configuration editor in the future. All of the parameters marked in red color are truly important, make sure you know what to do before change it, otherwise the analyzer may not work correctly.

To make the analyzer work at UHF frequency, you need to set the parameter SHOW_HIDDEN to 1 in order to open up all of

the hidden parameters first of all. Next, set BAND_FMAX to 450MHz. Also keep in mind that a new OSL calibration and a hardware calibration process are required after you change the max workable frequency of this analyzer.


Name	Default Value	Description
VERSION		
PAN_F1	14000	Panoramic window initial frequency, kHz
PAN_SPAN	2	Span for panoramic window (0..9)
MEAS_F	14000000	Measurement window frequency, Hz
SYNTH_TYPE	0	Frequency synthesizer type. 0 for Si5351, do not change: other values are reserved for future use.
SI5351_XTAL_FREQ	27000000	Si5351a's nominal crystal frequency, Hz
SI5351_BUS_BASE_ADDR	00H	Si5351a address on I2C bus. Can be changed to any even number in the range 02h..FEH
SI5351_CORR	0	Si5351a's crystal frequency offset from nominal frequency, Hz
OSL_SELECTED	FFFFFFFFH	Selected OSL file index (0..15 for files A .. P, other values - no OSL file selected)
R0	50	Base Z0 for VSWR measurements and Gamma calculation
OSL_RLOAD	50	OSL calibration standard for the Load measurement, Ohm
OSL_RSHORT	5	OSL calibration standard for the Short measurement, Ohm uint32_t
ROPEN	500	OSL calibration standard for the Open measurement, Ohm. Use value >100000 for purely open load.
OSL_NSCANS	1	Number of scans to average during OSL calibration
MEAS_NSCANS	1	Number of scans to average in measurement window
PAN_NSCANS	1	Number of scans to average in panoramic window
LIN_ATTENUATION	6	Linear audio input attenuation. Applied during audio input device initialization after reset. Sets the linear audio input volume to (100 - ATTENUATION). One unit is approximately 1 dB.
F_LO_DIV_BY_TWO	0	Deprecated, references in the code have been removed. Leave at default setting (0). Set to non zero if LO frequency is divided by two in quadrature mixer. Intended to be used with obsolete version 2 RF front end.
GEN_F	14000000	Frequency for generator window, Hz
PAN_CENTER_F	0	Way of setting panoramic window. 0: F0+band_span, 1: F_center +/- Band_span/2
BRIDGE_RM	5.1	Value of measurement resistor (R4, R11) in bridge, Ohm float
BRIDGE_RADD	200	Value of series resistor (R5, R9) in bridge, Ohm
BRIDGE_RLOAD	51	Value of load resistor in bridge (R7, R10), Ohm
COM_PORT	0	Serial (COM) port to be used: 0 for COM1, 1 for COM2
COM_SPEED	38400	Serial (COM) port speed, bps
LOWPWR_TIME	0	Time in milliseconds after which to lower power consumption by switching off LCD. (0 - disabled)
3RD_HARMONIC_ENABLED	0	Deprecated, references in the code have been removed. Leave at default setting. (1) Enable, above BAND_FMAX to extend frequency range to 450 MHz. (0) Disables. Support is not fully implemented yet.

S11_SHOW	0	Reflection S11 (module in dB) graph in the panoramic window: 1 enabled, 0 disabled
S1P_TYPE	0	Type of Touchstone S1P file saved with panoramic screen shot: 0 - S MA R 50, 1 - S RI R 50.
SHOW_HIDDEN	0	1: Show hidden options in configuration menu. 0: hide.
SCREENSHOT_FOR MAT	0	Screen shot image file format. 1: PNG, 0: BMP.
BAND_FMAX	150000000	Maximum operating frequency of the device, Hz. Must be a multiple of 100000, and not above 450000000.
SI5351_MAX_FREQ	160000000	Maximum frequency in Hz that Si5351a can reliably output. Can be 160MHz or 200 MHz.
SI5351_CAPS	3	Si5351 built-in quartz capacitors setting. 1 for 6pF, 2 for 8pF, 3 for 10 pF
TDR_VF	66	Velocity factor for TDR distance calculation, percent (valid range 1..100)

To select different parameter for configuring, just tap '< Prev Param' or 'Next Param' button to locate your desired parameters. Tap '<' or '>' to change the parameters' default value to your desired value. Tap 'Save and exit' will save the values set for different parameters here and exit to the main screen. Tap 'Cancel and exit' to cancel the settings and go back to the main screen.

7.3 System Monitoring

There are 2 menu items on the main screen for system monitoring purpose, and they are 'Generator' and 'DSP'. In generator, you can view some basic DSPed raw values, such as Vi, Vv, Mag Ratio, Phase Difference, and all of them are RAW value, that says they are not corrected by the calibrated data. These values are useful for diagnostic purpose. You may also change the frequency by same way introduced in 'Measurement'. It also transmits a square wave at your desired frequency out from the antenna port. However, an external filter may be needed for converting the square wave to a sine wave for RF use.

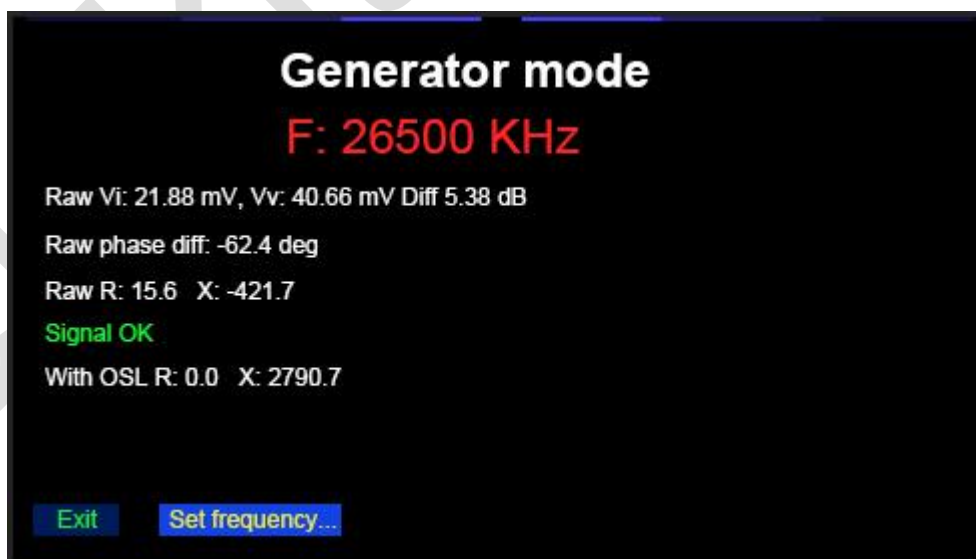


Picture 37: Generator mode


Besides with the generator mode, the DSP sub-item in the main screen is a place for monitoring the RF front end status. It detects the 2 channels of the analog 10KHz signal coming out from the RF end, and digitalizes them into magnitude value. You

may notice that the magnitude information showed in 2 rows, the upper one is for V_v (voltage from the sample resistor on the bridge) and the lower one is for V_i (current from the sample resistor on the bridge). There are also 2 two spectrum windows showing the two 10KHz signals below the Mag information.

You may also change the frequency by tapping the upper part of the screen, which is the same way used in 'Measurement' sub-item. The magnitude of the 2 channels should be very close or equal in an ideal RF front end. However, in a normal system, there should be some difference, but it does not matter because the future OSL calibration will correct this. In FAA-450, the magnitude of the measured signals in DSP window should be around 1200-1600 (ideally they should be equal), the frequency displayed should be 10031 Hz (bin 107). If something is wrong (no signal, too much noise, big difference between the signals, or detected frequency is not 10031 Hz) - the analyzer may be defective and may not work properly.

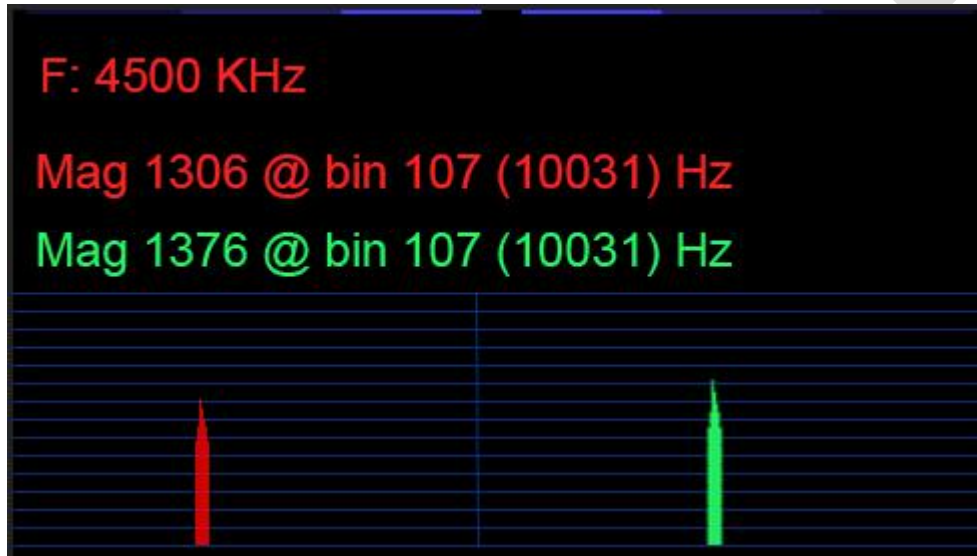

Picture 38: DSP mode

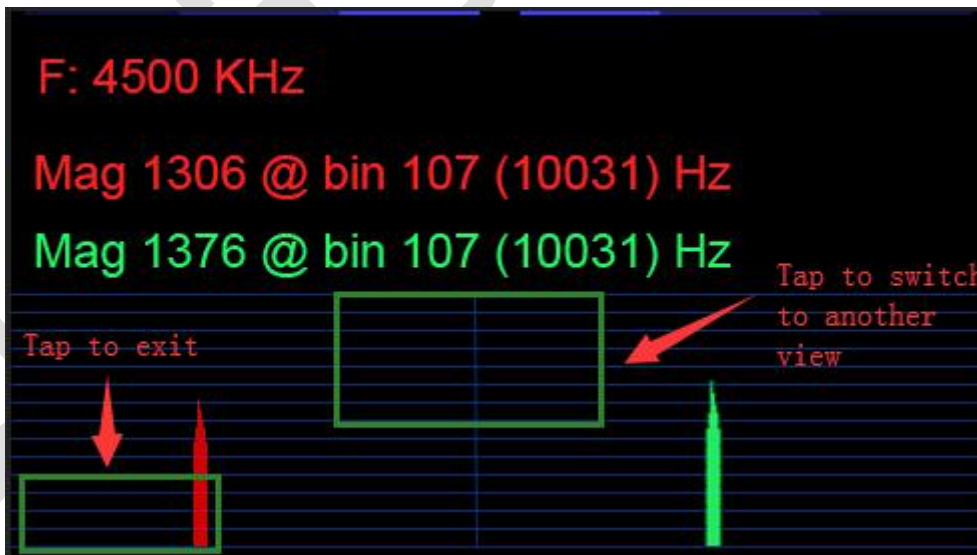

Picture 39: DSP mode

If you tap the central place of the screen, the display will be switched to another style, giving the information of sampling time, and magnitude. Meanwhile, the spectrum window below the mag information is also switched to waveform style. Tapping the central place of the screen again will switch back to the original view. To exit DSP, just tap the lower left corner of the screen.



Picture 40: DSP mode

8. Support

For any questions and problems, please contact support@elekitsorparts.com for help. You may also learn the basic theory of operation from wiki of E1UKY's antenna analyzer, https://bitbucket.org/kuchura/eu1ky_aa_v3/wiki/Home