



## LUXURY VINYL FLOORING

### SPECIFICATIONS

**Dimensions** (nominal): 7" wide x 48" length x 2mm thick

**Construction:** Glue Down Luxury Vinyl Plank

**Wear Layer:** 8mil

**Texture:** Embossed

**Profile:** 4 – Micro Bevel

**Installation:** Glue Down

**Warranty:** 10 Year Residential/ 5 Year Multi-Family/ 5 Year Light Commercial

**Packaging:** 24 pc per box/ 70 box per pallet

**Recommended Adhesive:** WF Taylor Dynamic

**Recommended Cleaner:** WF Taylor FreshFloors


### BENEFITS

FloorScore SCS Certified

Waterproof

Glued Down

Value Construction ideal for contract work

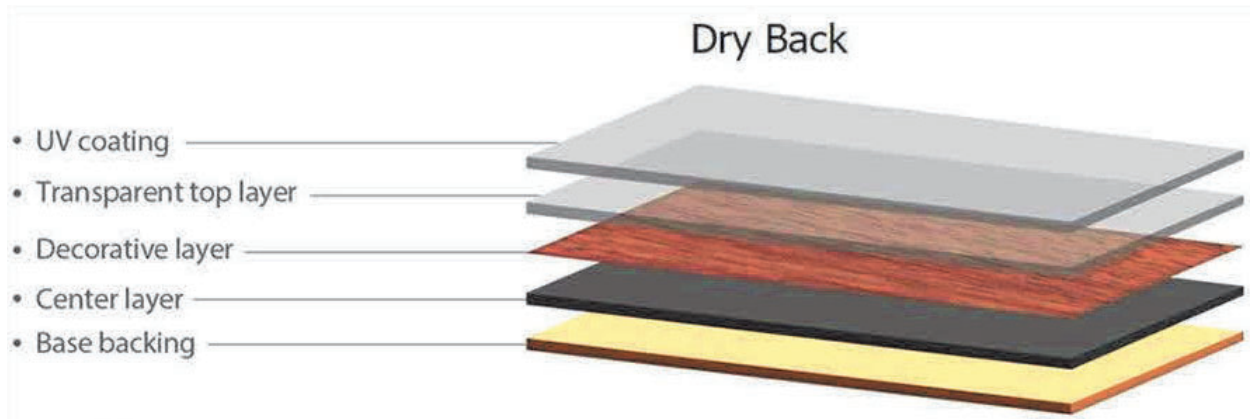

## INSTALLATION FACTS

Acclimate product to normal room conditions

Relative humidity: 35%-55%

Recommended room temp range after installation 60F – 85F

Expansion space ¼" gap

Porosity determination required prior to installation

**Read complete installation instructions prior to installation**



## LUXURY VINYL FLOORING INSTALLATION INSTRUCTIONS

1. Remove thresholds and baseboards before you measure the room to see how much flooring to purchase. Your square footage will be the length times the width of the room plus the area of any nooks and closets. Total the number of square feet and add 10 percent to allow for trimming.
2. Strip the existing flooring if necessary. If you're existing floor surface is solid and fairly smooth you may choose to skip this step. If you remove carpet or old vinyl, make sure any deposits of flooring adhesive are removed as well. You may need to use a power scraper and citrus-based solvent to remove vinyl floor adhesive. Go over the corners and crevices with a sander to remove any adhesive that remains.
3. Use a patching compound to fill in any cracks and holes in your sub floor. Work the compound into the hole with a putty knife and level it off. Once you have a smooth, even surface, sweep and mop it thoroughly. The smoother the sub floor, the better bonding of vinyl planks to sub floor. Finally, lay down a coat of primer to seal the sub floor against moisture.
4. Lay out the room. Choose the wall that is the main line of sight in the room (usually this is the wall opposite the room's main entrance). Lay out a line of planks along this wall and use a T-square to make sure the planks are parallel to it. Mark a line on the floor using a chalk line or felt-tip marker (it's going to be covered up, so permanent marker is okay). The idea is to "square off" the room so you're new flooring is as attractive as possible.
5. Starting in one corner, Be very careful to line up the first plank exactly with your line guide since all the remaining planks will key off the first. Press down firmly to make the adhesive bond to the sub floor. Lay a line of complete planks end to end, the length of the room. Use a small notch trowel to spread a layer of adhesive for regular vinyl plank flooring. Vinyl flooring adhesives are product specific so use only recommended adhesive and follow their instructions for use. A generic adhesive may not bond the vinyl planks to the floor properly. Please use a water based glue for temperature controlled room with low humidity; for high moisture areas such as basements, bathrooms and not well temperature controlled rooms please use polyurethane based glue. Please use a respiratory mask certified for polyurethane based glues during installation.
6. Cut a vinyl plank in half to begin your second line of planks. Use a vinyl tile cutter (recommended) or a utility knife and T-square to cut the plank at a 90-degree to its length. Use this half plank to start the next line. Staggering the vinyl planks creates a more authentic wood appearance. Alternate each line with a full-length and a half-length plank. At the opposite end of the room you will

need to install partial planks to finish off each plank line. Measure each space carefully and cut the pieces the same way.

7. Locate any gaps between planks. Don't worry about finding gaps, because there are always small uneven spots in a floor. Use a putty knife to fill gaps with wood putty and wipe away any excess.
8. Use a floor roller to ensure all the planks are firmly bonded to the floor. Replace thresholds and baseboards or molding to finish up installing your vinyl plank flooring.

#### After the Install:

For a minimum of 24 hours after your new vinyl floor is installed, please do not walk on the seamed areas.

To allow the adhesives to setup properly, keep the room at 68° F or greater for at least 2 days.

Ventilate the area well for 48 to 72 hours.



## LUXURY VINYL FLOORING WARRANTY

### 10yr Residential/5yr Multi-Family/5yr Light Commercial

#### EXCLUSIVE 10 YEAR WARRANTY

The Manufacturer warrants that from the date of original purchase the Luxury Vinyl product:

- Will be free of manufacturing defects.
- Will not stain from normal household consumable items such as food or drinks.
- Will not wear through the decorative surface (scratches or loss of gloss is not considered wear)

#### 5 YEAR LIGHT COMMERCIAL & MULTI-FAMILY WARRANTY

The Manufacturer warrants that for 5 years of light commercial\* and Multi-family use from the date of original purchase the Luxury Vinyl product:

- Will not wear through the decorative surface (scratches or loss of gloss is not considered wear)
- Will be free of manufacturing defects.

\*Light commercial is defined as light traffic commercial areas such as business offices and boutique shops. Heavier traffic areas, entry foyers, or any area where food is prepared or objects are rolled or dragged around are not recommend and not covered by this warranty.

#### PRE-INSTALLATION WARRANTY

It is the duty of the installer, whether professional or DIY (do it yourself), to inspect all flooring before installation. If during inspection the installer or buyer feels the floors is the wrong color, improperly manufactured, is off-grade or is the wrong gloss level, he/she should NOT install the flooring. Please immediately contact the retailer from which the flooring was purchased. No claims will be accepted for flooring which is visibly wrong if such flooring is installed. Installed flooring is deemed to be visibly acceptable.

#### INSTALLATION OVER RADIANT HEAT SUBFLOORS

The Manufacturer warrants to you (the original purchaser) that this Luxury Vinyl flooring may be installed over water-based radiant-heated subfloors, provided the surface temperature of the system does not exceed 81° F.

IMPORTANT: Due to the speed of sudden temperature changes, which has potential to negatively affect vinyl flooring construction,

it is not recommended to install over electrical radiant heating systems. This will not be covered by the manufacturer's warranty. Only radiant heating system using water are acceptable. Before installing over newly constructed radiant heat systems, operate the system at maximum capacity to force any residual moisture from the cementitious topping of the radiant heat system. Then set the thermostat to a comfortable room temperature for the installation. It is recommended that the radiant heat be applied in a gradual manner after installing the Luxury Vinyl flooring. Refer to the radiant heat system's manufacturer recommendations for additional guidance.

What you should do if any of the above listed problems occur:

The original residential purchaser should notify their authorized dealer from which the original purchase was made of any defect no later than 30 days after discovering the defect, but within the same time period of this limited warranty. The original residential purchaser must present to that Authorized dealer the following items for a limited warranty claim to be considered:

- A valid proof of purchase in the form of sales receipt which establishes proof of purchase;
- A detailed description of the problem and/or a photograph/sample that clearly shows the warranty problem.

#### WHAT THE MANUFACTURER WILL DO

If The Manufacturer honors a claim under this limited warranty, they will authorize repair or replacement at the pro-rated percentage cost of the material. This percentage is determined by the number of years remaining on the warranty and the length of the warranty.

For example, if the claim is made 3 years after purchase on The Manufacturer's product warranted for 15 years, then The Manufacturer will pay 80% (12/15th) of the material.

If professionally installed by a certified LVP/LVT installer, The Manufacturer will pay the reasonable labor costs to perform the replacement or repair during the first 3 years from the date of the original purchase. No labor is included for claims later than 36 months after original purchase.

#### LIMITATIONS AND EXCLUSIONS

If the original design/color/style is no longer available, The Manufacturer reserves the right to substitute another design of similar structure and value by The Manufacturer from which the consumer may select. This warranty does not apply to any product or products designated or sold as "B" grade, cabin grades, seconds, closeout or nonstandard items. This warranty does not apply to any product or products designated or sold "As Is".

This limited warranty is valid only in North America, is not transferable and extends only to the original purchaser of flooring installed in the house for which was originally installed. The affected area must be visible and cover an area greater than one square inch. The flooring must be installed in accordance with The Manufacturer's recommended installation instructions. This limited warranty will not apply to damage arising from any of the following:

- Installation in outdoor areas, sun rooms, solariums, porches, garages or other areas subject to excessive moisture or extremes of temperature;
- Installation in areas where temperature falls below 50° F or goes above 104° F.
- Exposure to excessive sunlight;
- Accidents, abuse or misuse;
- Extreme heat or cold;

- Scratching, impact or cutting;
- Improper workmanship or installation not in accordance with The Manufacturer's installation instructions;
- Improper maintenance;
- Improper fabrication;
- Freight damage;
- Water damage from excessive moisture in a concrete slab, hydrostatic pressure, flooding caused by ice makers, refrigerators, sinks, dishwashers, leaking pipes, flooding, standing water, spills when not promptly removed; household mechanical failures, damage caused by water underneath the flooring, including damage from sub floor hydrostatic pressure of other conditions that result in water being below the flooring or natural disasters;
- Planks coming apart at the seams because they have been engaged/disengaged more than 2 times;
- Installation cost of flooring that contains any manufacturing defect is not covered by this warranty.

The Manufacturer excludes and will not pay incidental or consequential damages under this warranty. By this we mean any loss, expense, or damages other than to the flooring itself that may result from a defect in the flooring. No implied warranties extend beyond the term of this written warranty.

The Manufacturer assumes no liability for incidental or consequential damages. Some states do not allow the exclusion of limitation

for incidental or consequential damages. In that case, these exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state. The Manufacturer reserves the right to have a representative inspect the floor and remove samples for additional evaluation if needed. The Manufacturer may repair, refinish or replace any defective product at its sole discretion.

As the sole remedy provided by this warranty, any attempt to repair, replace, or refinish prior to The Manufacturer's optional inspection will void this warranty. No installer, retailer, agent or employee of The Manufacturer has the authority to increase or alter the obligations or limitations of this warranty. The Manufacturer assumes no liability for incidental or consequential damages. Some states do not allow the exclusion of limitation for incidental or consequential damages. In that case, these exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state. The Manufacturer reserves the right to have a representative inspect the floor and remove samples for additional evaluation if needed. The Manufacturer may repair, refinish or replace any defective product at its sole discretion.

- Freight damage;
- Water damage from excessive moisture in a concrete slab, hydrostatic pressure, flooding caused by ice makers, refrigerators, sinks, dishwashers, leaking pipes, flooding, standing water, spills when not promptly removed; household mechanical failures, damage caused by water underneath the flooring, including damage from sub floor hydrostatic pressure of other conditions that result in water being below the flooring or natural disasters;
- Planks coming apart at the seams because they have been engaged/disengaged more than 2 times;
- Installation cost of flooring that contains any manufacturing defect is not covered by this warranty.

