

WARRIORS OFF ROAD

FUSE BOX AND ECU LOCATION

HiSUN STRIKE AND SECTOR 250 UTV



UNOFFICIAL GUIDE



This guide will assist you in locating the fuse box and ECU on both the Strike and Sector 250 UTV's.

Strike 250:

The fuse box is located in the battery box area. It is under the drivers seat. You will need to first remove the drivers seat by sliding it forward out of the track. Then you need to remove the seat track with the 4 bolts. Then you will find a plastic cover (pic 1) Open that cover and you will see the battery, ECU and fuse box. (pic 2)

1



Battery cover

2



ECU

Battery area

Fuse box



Remove the 4 screws on the fuse box cover to gain access to the fuses to replace a blown fuse.

Sector 250:

You will need to remove the lower seat cushion. Lift upwards and it will pop out of the groments. Under the seat you will see a couple of plastic covers. Remove the center one and it will give you access to the ECU and the fuse box. (pic 3)

Remove the smaller plastic cover under the drivers side to revel the battery compartment. (pic 4)

ECU and fuse box
location



Battery
compartment

Inside the main compartment you will see the ECU mounted next to the voltage regulator. The fuse box is mounted next to it with three connectors. The ECU has two connectors.

ECU



Fuse box

You can open the
fuse box with 4
screws on the cover
to replace a blown
fuse.