



1. OVERVIEW ⁽¹⁾

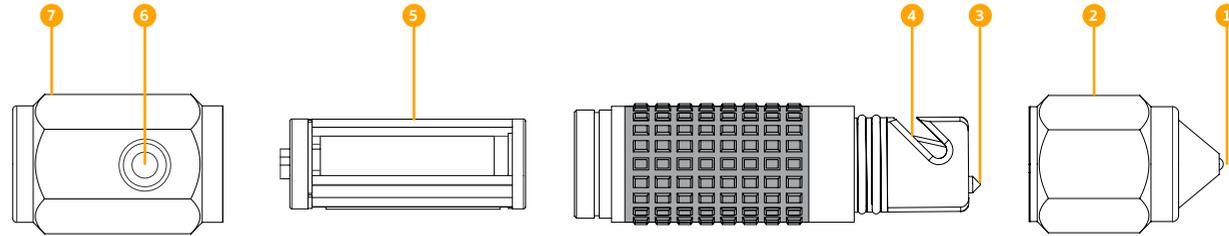

- 1 Window hammer ⁽²⁾
- 2 Rear cap ⁽³⁾
- 3 Secondary window hammer ⁽⁴⁾
- 4 Seatbelt knife ⁽⁵⁾
- 5 Battery tray ⁽⁶⁾
- 6 On/off switch ⁽⁷⁾
- 7 Front cap ⁽⁸⁾


2. INSTALL BATTERIES ⁽⁹⁾

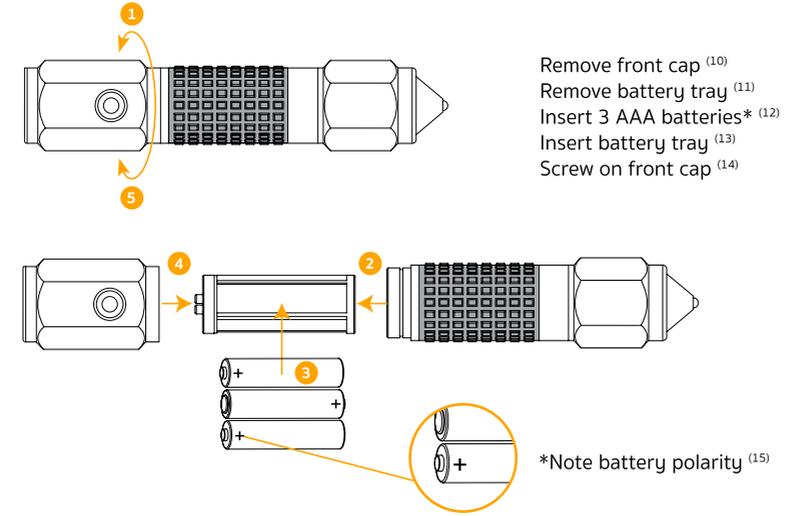

Remove front cap ⁽¹⁰⁾
Remove battery tray ⁽¹¹⁾
Insert 3 AAA batteries* ⁽¹²⁾
Insert battery tray ⁽¹³⁾
Screw on front cap ⁽¹⁴⁾

*Note battery polarity ⁽¹⁵⁾

3. LIGHT MODES ⁽¹⁶⁾

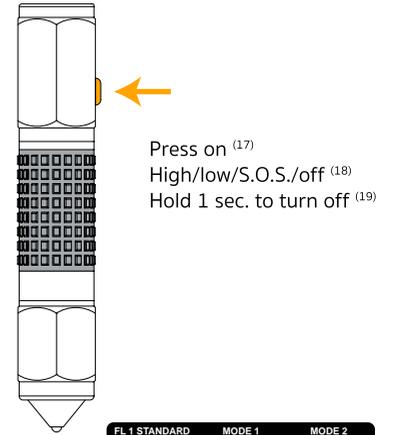


Press on ⁽¹⁷⁾
High/low/S.O.S./off ⁽¹⁸⁾
Hold 1 sec. to turn off ⁽¹⁹⁾


FL 1 STANDARD	MODE 1	MODE 2
	135 LUMENS	50 LUMENS
	4h15min	20h

4. SEATBELT KNIFE ⁽²⁰⁾

Remove rear cap ⁽²¹⁾
Hold light, with knife edge away from body ⁽²²⁾
Place knife edge on seatbelt and hold belt firmly in opposite hand ⁽²³⁾
Pull knife across belt at a diagonal angle ⁽²⁴⁾

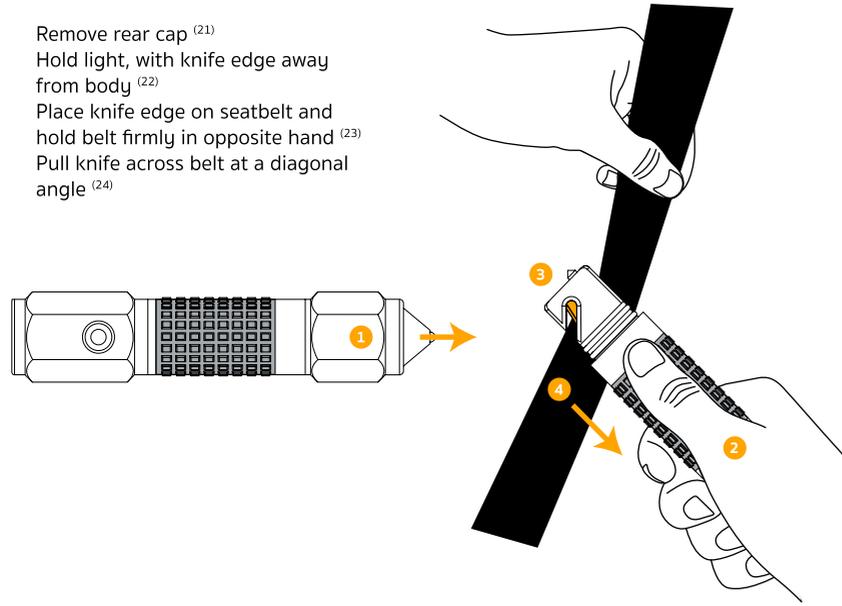


5. WINDOW HAMMER ⁽²⁶⁾

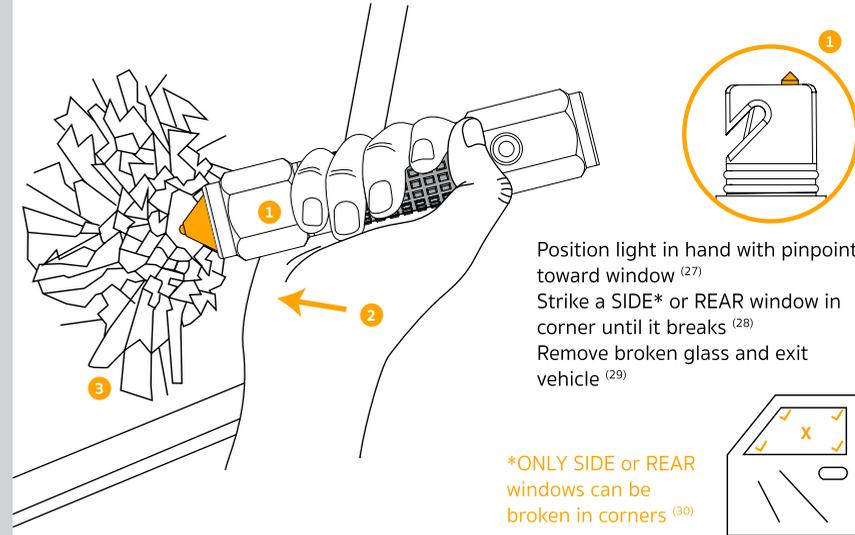

Position light in hand with pinpoint toward window ⁽²⁷⁾
Strike a SIDE* or REAR window in corner until it breaks ⁽²⁸⁾
Remove broken glass and exit vehicle ⁽²⁹⁾

*ONLY SIDE or REAR windows can be broken in corners ⁽³⁰⁾

6. MOUNTING BRACKET ⁽³¹⁾

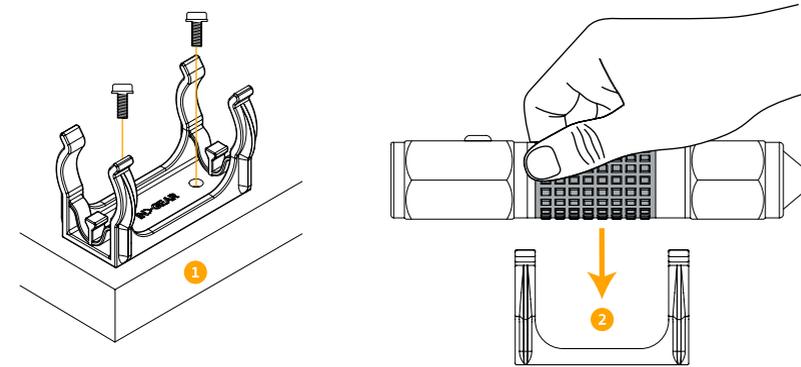

Option 1: Using provided adhesive pad, attach to any flat and smooth surface* inside vehicle. Remove backing and hold for 30 sec. to adhere ⁽³²⁾
Option 2: Using provided self-tapping screws, attach to vehicle surface* ⁽³³⁾
Press light into bracket to store securely ⁽³⁴⁾

*Do not mount light near, or in the path of a vehicle air bag ⁽³⁵⁾

7. TROUBLESHOOT ⁽³⁶⁾

If the light does not work: ⁽³⁷⁾
Check battery orientation ⁽³⁸⁾
Replace batteries ⁽³⁹⁾
Check contacts for proper connection. If corrosion is present, clean contacts ⁽⁴⁰⁾
Work the switch several times ⁽⁴¹⁾

