

GLOBALSTAR AEROSPACE LLC

CAPABILITY LISTING



172 Black Forest Dr.
Ozark, Al. 36360
334-479-0311

<u>Description</u>	<u>Part Number</u>	<u>Aircraft Model</u>
AFT LONGITUDE SERVO BELLCRANK ASSY	70400-08102-044/045	60
		60
COLLECTIVE BOOST SERVO ASSY	274600-1033/1045/1047	60
YAW BOOST SERVO ASSY		
AXIAL FAN	70361-03005-103/104/105/ 106/107	60
	70361-03700-101	60
SWASHPLATE CONTROL LINK AND PUSH ROD ASSEMBLIES	70400-08100-049/050	60
BELLCRANK SUPPORT ASSEMBLY	70400-08100-053/054/060/061	60
PUSH ROD ASSEMBLIES	70400-08151-048/051/061	60
	70400-08155-053/054/055/056	60
BELL CRANK SUPPORT ASSY	70400-08162-041/042/043	60
PRIMARY SERVO TRANSFER MODULE	60900-3/11	60
	70652-02415-042	60
	70652-22455-044	60
MAIN EXTENSION ASSY.	70351-08186-043	60
EYE ROTATING BRACKET	70103-08103-041/045	60
HUB PRESSURE PLATE	70103-08112-041/047	60
DAMPER BRACKET ASSEMBLY	70103-08010-048/050	60
ELECTRO-HYDRAULIC SERVO VALVE	72120-01	60
FLIGHT CONTROL MIXER ASSY	70400-02300-041/043	60
	70400-02300-044/045/046/048	60
MAIN GEARBOX ACCESSORY MODULE	70351-08080-043/045	60

<u>Description</u>	<u>Part Number</u>	<u>Aircraft Model</u>
INTERMEDIATE GEAR BOX ASSY	70357-06300-042/043/044	60
LINEAR ACTUATOR	DL2155M9/M15	60
MAIN ROTOR BLADE ASSY	70150-09100-041/043	60
MAIN GEARBOX ACCESSORY MODULE	70351-08080-043/045	60
MAIN GEARBOX MAIN MODULE	70351-08100-053/054/055/ 056/057/058/059/060/061/ 062/063/064/065/066/ 067/068/069/070/071/ 072/073/074/075/076	60
MAIN GEARBOX INPUT MODULE ASSEMBLY	70351-08001-043/045/046/ 047/049	60
MAIN MODULE ASSEMBLY	70351-38100-042/044/046/ 047/048/050	60
MAIN LANDING GEAR SHOCK STRUT ASSY	70250-12051-042/043/044/045	60
ENGINE OUTPUT SHAFT ASSEMBLY	70351-08042-041	60
FAN EXIT DRIVES SHAFT ASSY,DRIVE	70361-03001-045	60
SHAFT ASSEMBLIES, SECTIONS I,II,III	70361-03009-045/047	60
AND IV AND INPUT QUILL SHAFT ASSY	70361-05001-045/051	60
	70361-05002-045	60
	70361-06002-045/047	60
	70361-08004-042/043	60
MOTOR ASSEMBLY	70550-02046-105/106	60
MAIN ROTOR HEAD BIFILAR ASSEMBLY	70107-08400-043/044/045/046	60
MAIN LANDING GEAR BEAM/AXEL ASSY	DRAG 70250-12057-045/046/ 047/048/049	60
	70250-12105-041/042	60
TWO-POSITION RETRACTABLE LANDING GEAR	14-41600-501/503	F5
	7829186-110/130/150/170/190	F5
	7829194-30/70	F5
PILOT -ASSIST HYDRAULIC MODULE ASSY.	70652-02620-044/046	60
TAIL ROTOR SERVO ASSEMBLY	2227000-13/17	60

<u>Description</u>	<u>Part Number</u>	<u>Aircraft Model</u>
PILOT'S/ CO-PILOT'S PEDAL ADJUSTER LEVER ASSY	70400-01613-042/043/044/ 051/052	60
BLADE DEICE CONTROL PANEL	70902-01099-041/045	60
ROTOR BRAKE MASTER CYLINDER ASSY	70651-21110-104	60
ROTARY WING HEAD HUB ASSY PART	70103-28100-041/042/043/ 044/045/046/048/050/054	60
	70070-10046-050/051/ 052/053/054	
SERVO COPUPLING ASSEMBLY	70400-06100-042	60
DAMPER ASSEMBLY	70106-08100-042/043/044/046	60
SAS ACTUATOR ASSEMBLY	70410-02500-048/049/050	60
SERVO ASSY COLLECTIVE	70410-02920-053	60
SERVO CONTROL	SC7112-1C/7117-1C	PUMA 330
STABILATOR ASSEMBLY	70200-07050-043/044/045/ 046/047/048/049/051	60
SWASHPLATE AND ROTATING	70104-08000-044/046/050	60
SPINDLE ASSEMBLY	70102-08200-041/042/043/ 044/053/054/055/056/063/ 068/069	60
	70070-10030-041/042/045/046	60
TAIL GEARBOX ASSEMBLY	70358-26600-042/043/044/045	60
	70358-06600-042/043/044/ 045/046/050	60
OUTBOARD RETENTION PLATE ASSY	70102-11101-043	60
TAIL LANDING GEAR SHOCK STRUT ASSY	70250-13101-041/043/046	60
	70251-13101-042	60
STARTER ENGINE AIR	3505300-4-1/4-2/8-1/9-1	60
TAIL GEAR BOX ASSEMBLY AND OUTBOARD RETENTION PLATE ASSY	70358-06600-042/043/044/046	60
UTILITY PUMP MODULE ASSEMBLY	70652-02300-048/049/050	60
PUMP MODULE ASSEMBLY	70652-22250-049	60

<u>Description</u>	<u>Part Number</u>	<u>Aircraft Model</u>
YOKE AND HOUSING ASSEMBLY	70400-01201-043/044	60
AFT LANDING GEAR		
FORWARD LANDING GEAR	114L1010-7	CH47
PUMP/MOTOR ASSEMBLY	PMF062L006	CH47
	(114HS128-3)	CH47
TRANSFER MODULE ASSEMBLY	70652-02455-046/047	60
	70652-22455-043/044	60
PITCH TRIM ACTUATOR ASSY.	A22785-1/2	60
	1615-01-159-4698	60
LUBE AND SCAVENGE PUMP	70351-38800-101	60
MAIN GEARBOX MAIN MODULE ASSY	70351-48100-041/042	60
	70351-58100-041/046	60
ROTARY WING HEAD SERVO ASSEMBLY	274000-1027/1031	60
STABILATOR ELECTRO/MECHANICAL LINEAR ACTUATOR	DL2155M20	60
BLADE LAG SHOCK ABSORBER	114H6800-11	60
ELECTRO MECHANICAL LINEAR ACTUATOR	541604-3-1/-4-1/-8-1/-9-1	60
	AL2432M3-1(114VS800-3)	60
ACCUMULATOR	A10-23444/23445	60
BOOST PUMPS	RG11920-1/2	60
HAND PUMP	71-43656	60
PNEUMATIC ENGINE STARTER	3505300-5-1/6-1	60
TWO POSITION RETRACTABLE	14-41600-501/503	60
	7289186-110/130/150/170/190	60
	7829194-30/70	60
SERVO CONTROL	SC7112-1/7112-1	60
	SC7112-2/7112-2	60
	SC7112-3/7112-3	60
HYDRAULIC STARTER	407711	60
ROTOR BRAKE ASSY	70351-28501-104	60

<u>Description</u>	<u>Part Number</u>	<u>Aircraft Model</u>
MAIN ROTOR HEAD 65.125	330A31-1001-05 DAMPER	60
	330A31-1369-05 BLADE HORN	60
	330A31-1785-07 SPINDLE ASSY	60
	330A31-376-13 SLEEVE ASSY	60
	330A31-3194-35 EYEBOLT	60
MANUAL PUMA SA 330FGJ TOME 4	C22092-106	60
CHAPTER 32 LANDING GEAR		
NOSE LANDING GEAR 32-21-12	C22092-107	60
EUROCOPTER COMPONENT	C22903-2-3-4-5-6-106	60
MANUAL REAR UNDER CARRIAGE LEGS LEFT/RIGHT	10-2-1003/1005/1006/2006	60
AIRFRAME INTERGRATED MAINTENANCE MANUAL	MODELS	
	SH-60B/SH-60F/HH-60H/MH-60R/MH-60S/COAST GUARD MODEL/HH-60J	
SELF-DISPLACING HYDRAULIC ACCUMULATOR	3197170-2/5	60
HYDRAULIC RESERVOIR FILL PUMP	70652-02950-105	60
ENVIRONMENTAL CONTROL SYSTEM MODULATING VALVE	70309-23900-103	60
STRUT ASSEMBLY MAIN LANDING GEAR SHOCK	695001-9A	60
	370438-1	60
	3316498-1/7	60
	388058-1/9/19	60
	3316500-15	60
	3302196-13/15/19	60
MAINTENANCE OF AERONAUTICAL ANTIFRICTION BEARINGS FOR ORGANIZATIONAL, INTERMEDIATE AND DEPOT MAINTENANCE LEVELS	BEARING	
TAIL LANDING GEAR STRUT SERVICING MANIFOLD ASSY	70250-93101-043	60
AIRFRAME INTERMEDIATE MAINTENANCE MANUAL	MODELS	
	SH-60B/SH-60F/HH-60H/MH-60R/MH-60S/COAST GUARD MODEL/HH-60J	
PRIMARY SERVO ASSY	70410-02820-054/053	60

<u>Description</u>	<u>Part Number</u>	<u>Aircraft Model</u>
MAIN ROTOR HEAD DAMPER ASSEMBLY	70106-28000-045/046/047/048	60
	70106-08100-046	60
MAIN LANDING GEAR SHOCK STRUT ASSY	70250-32101-043	60
STRUCTURAL REPAIR NAVY MODEL SH-60B/F/R	70200-27000-046	60
STAY-JACK NOSE GEAR	A20-23753-10/1001	60
RADIATOR ASSY	70361-03004-103	60
ACTUATOR TRIM TAB	70410-02760-047	60
POWER SUPPLY	70553-05002-110	60
SUPPORT	70361-05060-041	60
	70361-05060-042	60
STRUT ASSY, SHOCK	OMP4092-3	60
SERVO ASSY	70410-22910-045	60