



GLOBALSTAR AEROSPACE LLC. CAPABILITY LISTING

172 Black Forest Drive
OZARK, AL. 36360
334-479-0311
WWW.GLOBALSTARAERO.COM
FAA# 8PFR578C

No.	Description	Part Number	Platform
1	ANTI- ICE MODULATING VALVE	3214072-3 /-4	H60
2	HYDRAULIC STARTER	407711	H60
3	TAIL ROTOR SERVO ASSEMBLY	2227000-13	H60
4		2227000-17	H60
5	ROTARY WING HEAD SERVO ASSEMBLY	274000-1027/-1031	H60
6	AFT LONGITUDE SERVO BELLCRANK ASSEMBLY	70400-08102-044/-045	H60
7	COLLECTIVE BOOST SERVO ASSY	274600-1033	H60
8	YAW BOOST SERVO ASSY.	274600-1045/-1047	H60
9	AXIAL FAN	70361-03005-XXX SERIES	H60
10	AXIAL FAN	70361-03700-101	H60
11	STARTER ENGINE AIR	3505300-4-1/ 4-2/8-1/9-1	H60
12	PRIMARY SERVO TRANSFER MODULE	60900-3/60900-11	H60
13	PRIMARY SERVO TRANSFER MODULE	70652-02415-042	H60
14	PRIMARY SERVO TRANSFER MODULE	70652-22455-044	H60
15	SPINDLE ASSEMBLY	70108-28100-XXX Series	H60
16	SPINDLE ASSEMBLY	70102-08200-XXX Series	H60
17	SERVO, PRIMARY	412-076-005-XX SERIES	H-1
18	SERVO, PRIMARY	212-076-005-XX SERIES	H-1
19	BELL 205, 212, 412 SKID TUBES	205-050-400-XX SERIES	H-1
20		412-320-123 LH	H-1
21		412-320-124 RH	H-1
22	BELL 205, 212, 412 CROSS TUBES	212-320-103 FWD	H-1
23		212-320-104 AFT	H-1
24		70070-10030-046	H60
25	OUTBOARD RETENTION PLATE	70102-11101-043	H60
26	SWASHPLATE CONTROL LINK AND	70400-08100-049	H60
27	PUSH ROD ASSEMBLIES	70400-08100-050	H60
28	BELLCRANK SUPPORT ASSEMBLY	70400-08100-053/054	H60
29	SUPPORT ASSEMBLIES	70400-08100-060/061/	H60
30	PUSH ROD ASSEMBLIES	70400-08151-048/051/061	H60
31		70400-08155-053/054/055/056	H60
32	ROTARY HUB ASSEMBLY	70103-08010-048/050	H60
33	EYE ROTATING BRACKET	70103-08103-041/045	H60
34	HUB PRESSURE PLATE	70103-08112-041/047	H60
35	ROTARY WING HEAD HUB ASSY PART	70103-28100-041/042/043/044/	H60
36		70103-28100-045/046/048	H60
37		70070-10046-050/051/052/053	H60
38		70070-10046-054	H60
39		70103-28100-041/048/050/054	H60
40	SWASHPLATE AND ROTATING SCISSORS ASSEMBLIES	70104-08000-044/046/050	H60
41		70104-08020-045	H60
42	DAMPER ASSEMBLY	70106-08100-042/043/044/046	H60
43	MAIN ROTOR HEAD 65.125 DAMPER	330A31-1001-xx series	Puma
44	MAIN ROTOR HEAD DAMPER ASSEMBLY	70106-28000-045	H60

45		70106-28000-046	H60
46		70106-28000-047	H60
47		70106-28000-048	H60
48		70106-08100-xxx series	H60
49	MAIN ROTOR HEAD BIFILAR ASSEMBLY	70107-08400-043	H60
50		70107-08400-044	H60
51		70107-08400-045	H60
52		70107-08400-046	H60
53	STABILATOR ASSEMBLY	70200-07050-043/044/045/046	H60
54		70200-07050-047/048/049/051	H60
55		70200-07050-043/051	H60
56		70200-27000-XXX SERIES	H60
57		70200-27001-XXX SERIES	H60
58	MAIN LANDING GEAR	70250-12051-042/043	H60
59	SHOCK STRUT ASSEMBLY	70250-12051-044/045	H60
60	MAIN LANDING GEAR DRAG BEAM/AXLE ASSEMBLY	70250-12057-045/046	H60
61		70250-12057-047/048/049	H60
62		70250-12105-041/042	H60
63	TAIL LANDING GEAR SHOCK STRUT ASSY.	70250-13101-XXX SERIES	H60
64	MAIN LANDIN GEAR SHOCK STRUT	70250-32101-XXX SERIES	H60
65	MAIN GEARBOX INPUT MODULE ASSEMBLY	70351-08001-XXX SERIES	H60
66	ENGINE OUTPUT SHAFT ASSEMBLY,	70351-08042-041	H60
67	MAIN GEARBOX ACCESSORY MODULE	70351-08080-043/045	H60
68	MAIN EXTENSION ASSY.	70351-08186-XXX SERIES	H60
69	MAIN MODULE ASSEMBLY	70351-38100-XXX SERIES	H60
70	MAIN MODULE ASSEMBLY	70351-08100-XXXSERIES	H60
71	MAIN MODULE ASSEMBLY	70351-48100-XXX SERIES	H60
72	MAIN MODULE ASSEMBLY	70351-58100-XXX SERIES	H60
73	LUBE AND SCAVENGE PUMP	70351-38800-101	H60
74	INTERMEDIATE GEAR BOX ASSY	70357-06300-SERIES	H60
75	BEAM ASSY	70219-02133-xxx SERIES	H60
76	FAN EXIT DRIVES SHAFT ASSY	70361-03001-045	H60
77		70361-03009-045/047	H60
78		70361-05001-045/051	H60
79		70361-05002-045	H60
80	SUPPORT	70361-05060-XXX SERIES	H60
81	SUPPORT	70361-08004--XXX SERIES	H60
82	YOKE AND HOUSING ASSEMBLY	70400-01201-XXX SERIES	H60
83	PILOT'S/ CO-PILOT'S PEDAL ADJUSTER LEVER ASSY	70400-01613-051	H60
84		70400-01613-052	H60
85		70400-21613-043	H60
86		70400-21613-044	H60
87	FLIGHT CONTROL MIXER ASSY	70400-02300-XXX SERIES	H60
88	SERVO COPUPLING ASSEMBLY	70400-06100-042	H60
89	SERVO COPUPLING ASSEMBLY	70400-26100-042	H60
90	BELL CRANK SUPPORT ASSY	70400-08162-041/042/043/044	H60
91	SAS ACTUATOR ASSEMBLY	704100-02500-048 /-049/-050	H60
92	SERVO ASSY COLLECTIVE	70410-02920-053	H60
93	ROTOR BRAKE MASTER CYLINDER	70651-21110-104	H60
94	UTILITY PUMP MODULE ASSEMBLY	70652-02300-XXX SERIES	H60

95	TRANSFER MODULE ASSEMBLY	70652-02455-046	H60
96		70652-02455-047	H60
97		70652-22455-043	H60
98		70652-22455-044	H60
99	PILOT -ASSIST HYDRAULIC MODULE ASSY.	70652-02620-044	H60
100		70652-02620-046	H60
101	LINEAR ACTUATOR	DL2155M15	H60
102		DL2155M9	H60
103	ROTARY WING HEAD HUB ASSY	70103-28100-041/042/043/044/	H60
104		70103-28100-045/046/048	H60
105		70070-10046-050/051/052/053	H60
106		70070-10046-054	H60
107		70103-28100-041/048/050/054	H60
108	INTERMEDIATE GEAR BOX ASSY	70357-26300-042	H60
109	TAIL GEARBOX ASSEMBLY	70358-26600-XXX SERIES	H60
110	TAIL GEAR BOX ASSEMBLY AND	70358-06600-042/043/044/046	H60
111	RADIATOR ASSY	70361-03004-103	H60
112	PITCH TRIM ACTUATOR ASSY.	A22785-1	H60
113		A22785-2	H60
114	ROTOR BRAKE ASSY	70351-28501-104	H60
115	STRUCTURAL COMPONENT	70200-27000-046	H60
116	SELF-DISPLACING HYDRAULIC	3197170-2	H60
117	ACCUMULATOR	3197170-5	H60
118	HYDRAULIC RESERVOIR FILL PUMP	70652-02950-105	H60
119	MAIN LANDING GEAR SHOCK STRUT	70250-32101-043	H60
120	SERVO ROLL TRIM	70400-02260-120	H60
121	ACTUATOR TRIM TAB	70410-02760-047	H60
122	UTILITY PUMP MODULE ASSEMBLY	70654-23801-103	H60