

Scan QR Code to access lessons on how to use the Tee Helper Pro Plus on the tee and green. On the website menu. Select Product Showcase for FREE videos.





 Hold TeeHelper horizontally and put golf ball and tee into cup.



Squeeze handle to enclose ball & tee.



Hold TeeHelper up & down while pushing to insert tee'd ball into turf.



 Slowly release handle to open the TeeHelper and release tee'd ball.

Easy To Use

Unfolding & Preparing To Tee Up the Ball

Loosen the velcro strap. Begin unfolding where the hinge is. Pull up and out towards the cup on the jaw system. Pull up just enough to insert a ball and tee. Then refold and secure it with the velcro strap. For type of tee used, recommend to use tees that have a Magnum Top like the Martini © or similar type of tees. It is easier to replace the ball on this type of tee in case the ball is knocked off.

Going To The Tee Box & Tee Up Ball

Carry the folded Tee Helper Pro Plus with ball and tee still locked. With one hand on the grip apply pressure on trigger. Unfold but keep pressure on the trigger so cup is closed with the ball and tee inside. Tee up the ball procedure.

The Tee Helper Pro Plus should hang vertically and then slowly push down until the ball is placed at the height you desire. Do Not forcibly stab the device as it could break the lower arms Release the grip pressure to open the cups and leave the ball on the tee; ready to hit...

Ball & Tee Turf Entry

Practice a few times. So when ball is released tee into ground the ball isn't accidentally knocked off the tee. If this happens, pick up the ball with the cup and place back on the tee.

Close The Tee Helper & Put On Ground

Or place the Tee Helper Pro Plus upright on a club holder. If not using a club holder make sure its folded enough on the ground. So club being used can insert grip shaft through the closed jaw to pick it up, to retrieve the tee after hitting the ball. Fold the Tee Helper Pro Plus to be ready to use again on the course.

Using On The Green

On the green use it to mark the ball placement pickup the ball to clean. Place any type of marker in the cup. Place marker behind the ball. when ready to putt pick up marker with cup or magnet. Place Tee Helper Pro Plus on green or on club holder. Putt and use the Tee Helper Pro Plus to pick up the ball from the hole.