

Double button sabers and box sabers

Power on

Press top button to turn on

Motion activation while sabers off

Smooth quick in-out twist motion with your wrist to power on.

Color changing

Motion activation

Point saber towards the ground on an angle, hold the bottom button in and turn your wrist until you get to the color you want.

Power off

Manual- press top button to power off

Motion control- Smooth in out Motion
twist with wrist.

Sound control while saber is off single
button.

Mute- Hold button in for 1 second to mute,
Repeat for low and high volume

Character saber mode change-

Push bottom button to change between 16
different character sounds

Motion control- Hold button in, point saber
up and twist wrist to rotate through
characters.

Play 1 of 3 themes on saber

Hold bottom button down, point saber
down and twist wrist to turn theme on.

