

Single button sabers

Power on

Hold button in until it flashes blue

Once button is on blue

Manual

Press button once to turn on

Motion activation while sabers off

Smooth quick in-out twist motion with your wrist to power on.

Flash mode

Turn on

Hold button in until it blinks once and release.

Off- Press button once to Turn off

Color changing

Hold button in for 2 blinks then release.

Press the button to rotate through until you get to color you want.

Hold button for 1 blink to lock color into place.

Repeat whenever you want to change colors.

Motion activation

Point saber towards the ground on an angle, hold the button in and turn your wrist until you get to the color you want.

Power off

Manual

Hold button in for 4 blinks until saber turns off

Motion activation

Smooth in out Motion twist with wrist.

Sound control while saber is off single button.

Mute- Hold button in for 1 blink to mute,
Repeat for low and high volume

Character saber mode change-

Hold button in for 2 blinks to change
between 16 different character sounds

Motion control- Hold button in, point saber
up and twist wrist to rotate through
characters.

Play 1 of 3 themes on saber

Hold button in for 3 blinks, release to turn
theme on. Repeat to change to other
themes.

Motion control- point saber down, Hold
button in and twist wrist to rotate between
themes.

Clash on/off

Hold button in for 4 blinks will deactivate clash feature. Repeat process to turn back on.

Motion activation on/off

Hold button in for 5 blinks will deactivate Motion control features. Repeat process to turn back on

Put saber into sleep mode.

Hold button in for 6 blinks until blue button turns off.