

SABER INSTRUCTIONS: HOW TO USE (WHITE BUTTON)

SABER INSTRUCTIONS: HOW TO USE (WHITE BUTTON RGB)

ASSEMBLY: Take the small bag with the L shaped allen key wrench and the very tiny fastening screws. There are small holes around the top of your lightsaber hilt (handle). Put your blade into your DX Saber Hilt (handle) and screw the small screws into the holes until they are nice and tight against the blade. Then you are ready to go!!

TURN ON SABER: Hold down the button for 3-4 seconds until you hear a noise and the RED circle is lit. Once the saber is in use you just need to click once and it will turn on.

CHANGE SOUND FONTS: While the saber is not lit, hold down the button for one blink of the button until you hear the next number of font speak indicating the character's lightsaber sounds you have chosen.

CHANGE COLORS: While the saber is lit, hold down the button for two blinks of the circle button (2 seconds) and then let go of the button and then hold the button down and the colors will change! Once you have chosen the color you want, hold the button until it turns off and this will save the color setting as well.

BLASTER REFLECTION EFFECT: While the saber is lit, hold the button for one blink of the button to make a blaster reflection effect!

LIGHTSABER FLASH ON CLASH EFFECT: When the lightsaber experiences contact it will emit a noise and a point on the blade where there is an impact.

LOCKUP (LIGHTSABER AGAINST LIGHTSABER EFFECT): When the lightsaber is lit, hold the button down and the lightsaber will create a lockup effect upon impact and keep the button held to continue the effect! To release the effect just release your finger from the button.