

## Telephone Features For Norstar 824 w/DR5

The following feature codes can be activated manually, or can be programmed to an available memory button by dialing Feature \*3, touching the memory button desired, and dialing the feature code desired.

<u>Feature</u>	<u>Feature Code</u>	<u>Cancel Feature</u>
Autobumping	F815	F#815
Background Music	F86	F#86
Button Inquiry	F*0	
Call Duration Timer	F77	
Call Forward	F4	F#4
Call Information (CID)	F811	
Call Log	F812	
Call Log Password	F*85	
Call Park	F74	
Call Pickup – Directed	F76	
Call Pickup – Group	F75	
Call Pickup – Trunk Answer	F800	
Call Queuing	F801	
Camp On	F82	
Class Of Service	F68	
Conference	F3	
Contrast Adjustment	F*7	
Dialing Modes	F*82	
Do Not Disturb	F85	F#85
Exclusive Hold	F79 or F-HOLD	
Group Listening	F802	
Language – English	F*501	
Language – Alternate	F*502	
Last Number Redial	F5	
Line Pools	F64	
Line Redirection	F84	
Link (Flash)	F71	
Logit	F813	
Long Tones	F808	
Message – Reply	F65	
Message – Send	F1	
Moving Line Buttons	F*81	
Page – External	F62	
Page – Internal	F63	
Page – Internal Zone	F61 + Zone (0-6)	
Priority Call	F69	
Privacy	F83	
Programming Call Log	F*84	
Ring Again	F2	

## Telephone Features For Norstar 824 w/DR5

<u>Feature</u>	<u>Feature Code</u>	<u>Cancel Feature</u>
Ring Type	F*6	
Ring Volume	F*80	
Saved Number Redial	F67	
Service Modes (Night Key)	F87	
Speed Dial	F0	
Time Display	F803	
Transfer	F70	
Voice Call	F66	
Voice Call Deny	F88	F#88

### External Autodial

- 1 – Dial Feature \*1
- 2 – Press an available memory button
- 3 – Dial the phone number desired

### Internal Autodial

- 1 – Dial Feature \*2
- 2 – Press an available memory button
- 3 – Dial the intercom number desired

### Personal Speed Dial

- 1 – Dial Feature \*4
- 2 – Dial a speed dial code (71-94)
- 3 – Press a line button or pool button
- 4 – Dial the phone number desired
- 5 – Press HOLD or OK to finish

**J & J Communications**  
770-795-5462 or 888-552-6665  
[www.jandjcommunications.com](http://www.jandjcommunications.com)