


# CURRENT SENSOR— Wiring Diagram for Simplex 120VAC

PANEL MOUNTED 8 PIN SOCKET

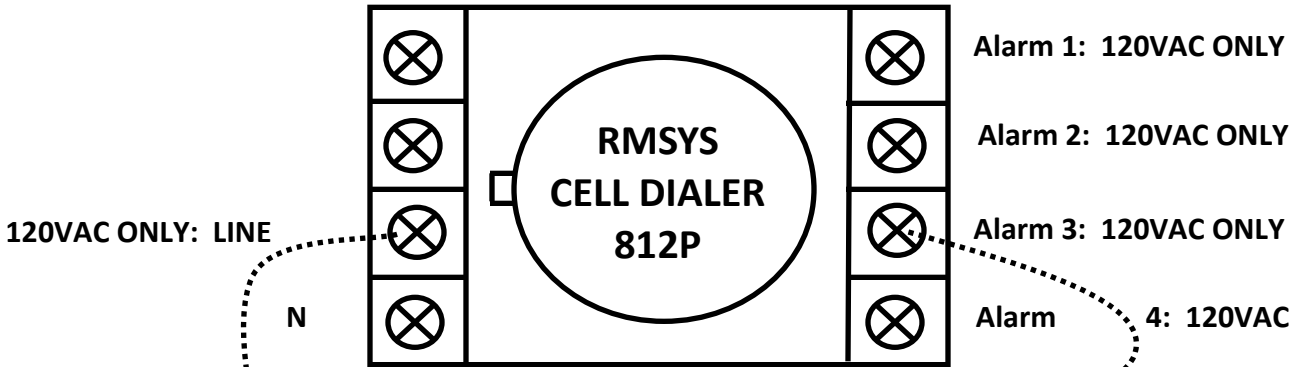

(2)

(3)

The RMS-812P Cell Dialer comes standard with 2 alarm inputs and 2 pump counter inputs. It is programmable to have 3 alarm inputs and 1 pump counter with Channel 3 or 4 selectable as counter. Please contact RMSYS for more details.

## CLEARSTREAM PANEL:

- (1) Insert thru sensor ring the wire lead from the power relay to terminal strip P1.
- (2) Connect one wire of sensor to Line In 120VAC of cell dialer.
- (3) Connect other wire of sensor to cell dialer Pump 1.

SENSOR  
(1)

