

# Childtrac CHI Smart GPS Watch

## User Manual

### 3G Waterproof Watches



## 1. Before using

- a. Check box content: GPS Watch with silicon wristband, 1 USB Cable clip and user manual.
- b. Your device has the full initial
- c. Charge the battery at the end of each day by connecting the charging cable and wall plug. Do not charge over 3 hours.

Note: Charging the battery should only be under adult supervision.

## 2. Watch interface



## Product information

## 2.1 Product function

- GPS+LBS+WIFI+AGPS multiple way real-time Positioning
- 1.4 inch TFT color touch screen
- Support 3G network
- IP67 Water resistance
- Support Taken off alert
- 0.3MP Camera
- GEO fence safety area
- SOS Phone call and alert
- Two-way phone call and voice chat
- History: record history route
- Setting no disturbing time when kids are in classes
- Remote shutdown


**Note: Therefor the watch is waterproof IP67 it can only be submerged a few seconds. It's better not to wear the watch swimming.**

### 3. Watch function interface


3.1 **Main interface:** small icons on the interface top left to right represents: Volume, GSM signal, Battery, Time & date and love icon.




3.2 **Contact:** Click to enter and select the number to dial (10 contacts number can be set by app)

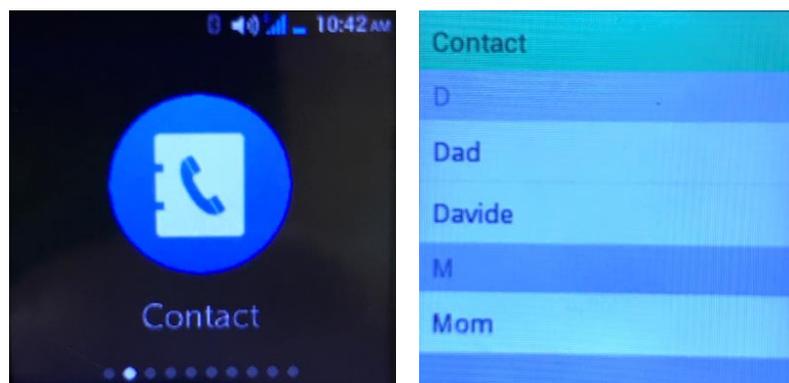


3.3 **WeChat:** Enter to WeChat interface, press the button to start recording voice chat and released to send to app, the maximum voice message is 15 seconds.

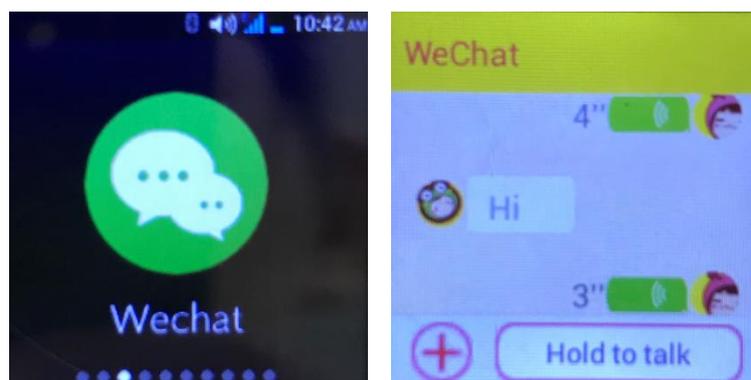


3.4 **Steps counter:** Turn on the step switch in the app, when pedometer is working steps data will be synchronized.

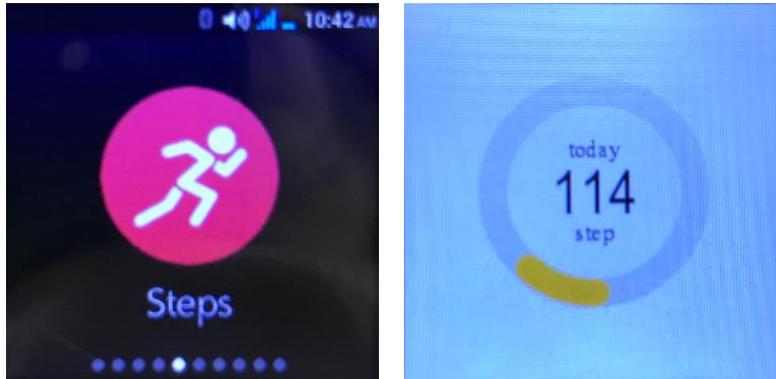


3.5 **Camera:** 0.3MP Camera support picture & video mode.

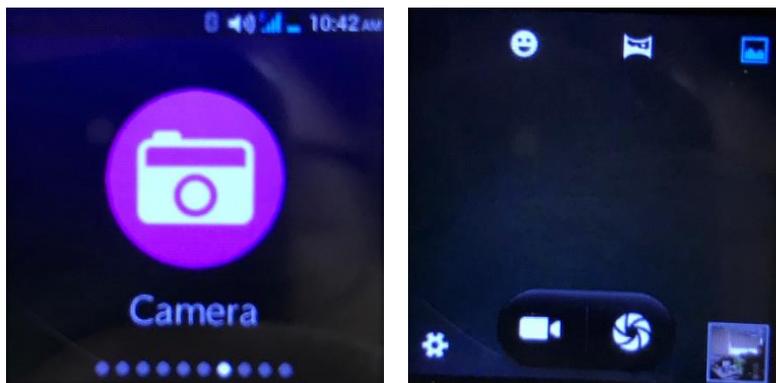

3.6 **Gallery:** To view the pictures and videos from camera takes.

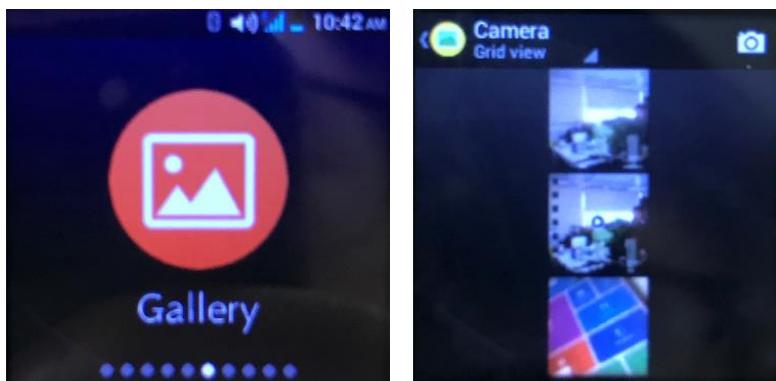


3.7 **Settings:** To check device details and customize personal setting.

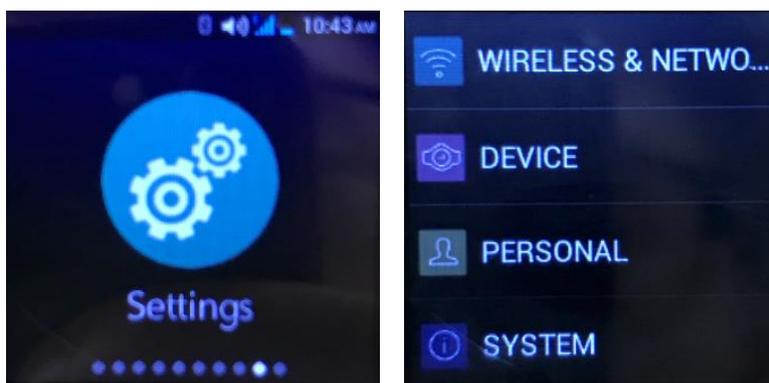

You have 4 Face plate to choose from: go in settings of the watch and click DEVICE, DISPLAY, Analogue display 1 to 4


3.8 QR Code: Click to choose QR code for App download or Register. You do not need to do that if already set up.

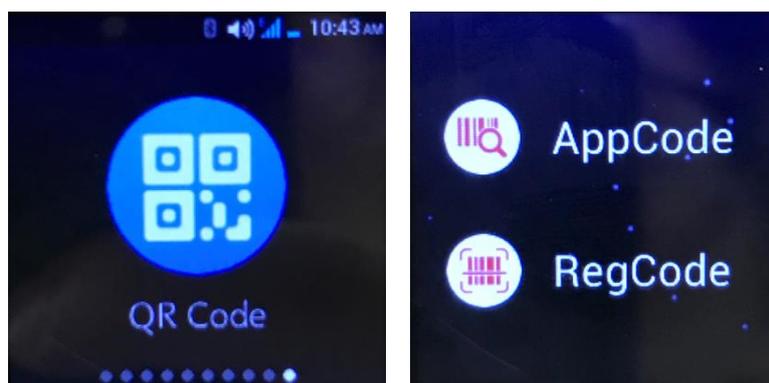

## 4. Set up watch with App


### 4.1 Registration and login

We have already registered and provided your user password. The App only available on IOS and Android ,”Setracker” on App store and or scan the bar code under the box.

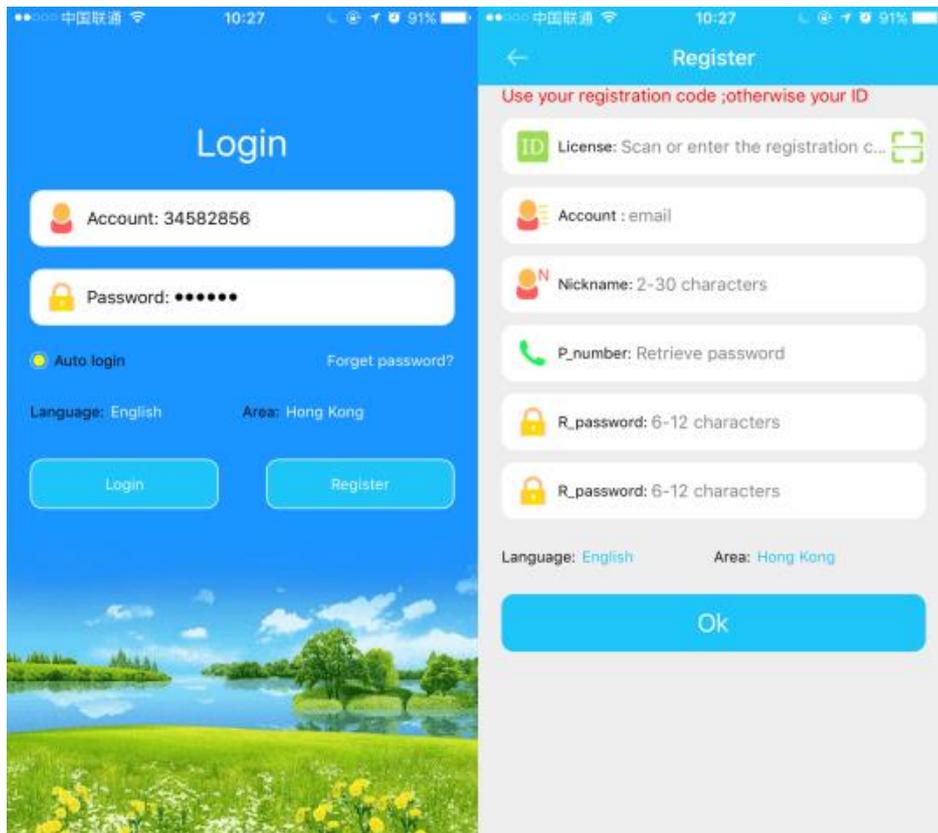

## 4.2 Introduction of APP main interface

Enter the correct account and password on the login interface, click to login and enter the main interface. The main interface is shown as below:

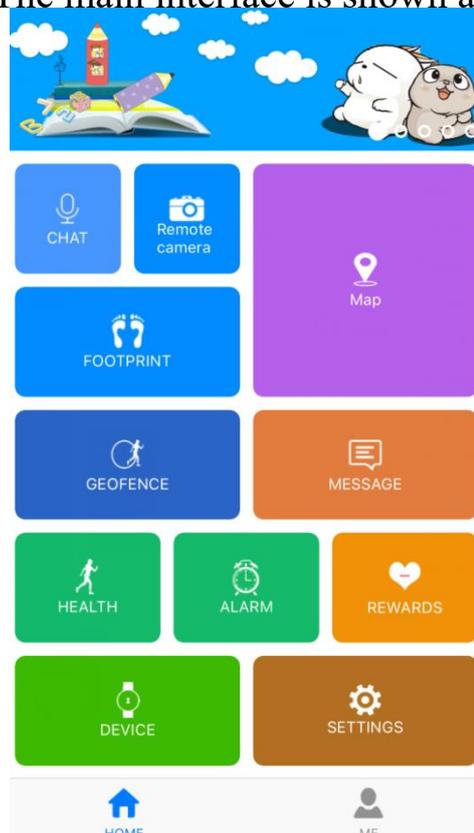


## Description of APP functions:

(1) **Voice chat:** Click “Long press and speak” to start recording. Release the button to send the message. The longest voice message can be 15 seconds.

(2) **Map:** Check the position of the watch in real time. Each positioning working time is 3 minutes. The interval time for location data updating need 20 seconds. After 3 minutes, device will back to the default working mode. You can know the real-time location in the map.

(3) **Settings:** you can set all parameters of the watch, settings interface shown as below:

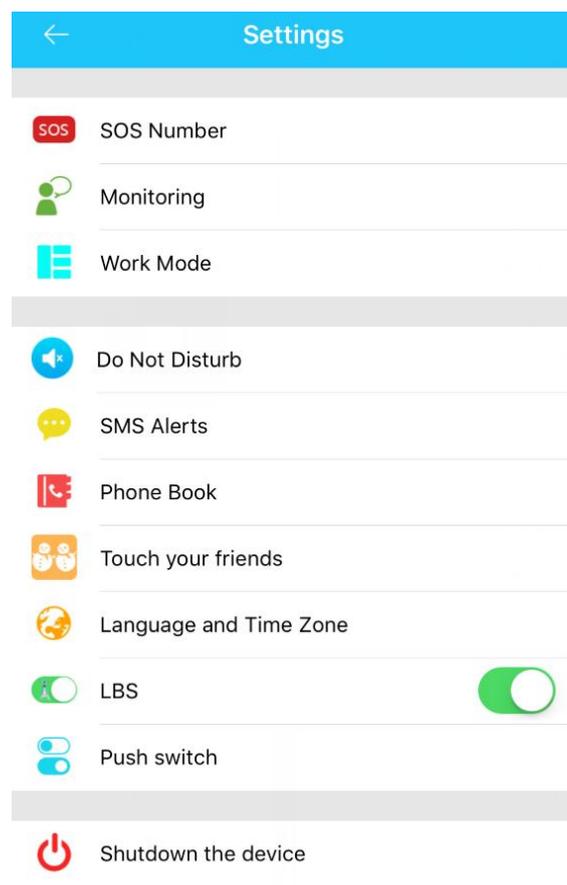

a. **SOS number:** three numbers can be set up, the watch will calling to the phone automatically by pressing the watch SOS button for 3 seconds in case of an emergency, and there will have alert message sent to APP. Three phone numbers will be called one after another twice (unless the call is answered).

b. **Synchronization intervals:** three models can be chosen according to customer's requirements, the default working mode is every 10 minutes; power saving mode to update location is every 1 hour, and the real-time positioning mode is 1 minute. Please note that the more frequent the more the battery usage.

c. **No disturbing time:** you can set three periods, all incoming calls will be shielded during three periods, watch locked only SOS calling work, this function is suitable for kids on class. Class mode only works from Monday to Friday, weekends are excluded.

d. **Notification settings:** with low power, SOS alarm messages switches. If the power less than 20% press SOS button over 3 minutes, alert shown on the watch (default off), at the same time send SOS alert to phone.

e. **Phone book:** There are 10 numbers can be added and the number and name display on watch, these number will be allowed to call the watch and vice versa.

f. **Language and Region:** If the time display on the watch is not correct, you can choose the time zone to fix. But this function only works when the watch is connecting to the APP.

g. **LBS:** Click the switch and open the base station positioning. This position the device by using Cell Tower Triangulation when the watch cannot get the Satellite GPS position. LBS is less accurate but provides the area of interest.

**(4) GEO fence safety area:** it's minimum radius is 200 meters, when users go in and out of the geofence, there will has alarm information when kids is out of the geofence zone.

**Note:** (Geofence) fence alarm is triggered only when the watch capture Satellite GPS position.

**(5) Love rewards:** select the number of red hearts on the app, click the number send to watch, then watch will display the number of love heart.

**(6) Watch alarm:** can set up three alarm clock alert, and alarm clock can be set according to your requirements.


**(7) Find Device:** it is to search the watch, when watch is not around, click this function key and the watch will ring for a minute unless your press any key to stop.

**(8) Footprint:** This function is used to check the history route of kids in different period. The location data can be saved up to 90 days.


**(9) Display activities:** you can see the records of step count, amount of exercise, distance and sleep monitor.

**(10) Notification overview:** you can see all the list of earlier notifications.


5. "ME" interface : Click "ME" function key at main page and the page shown as below:

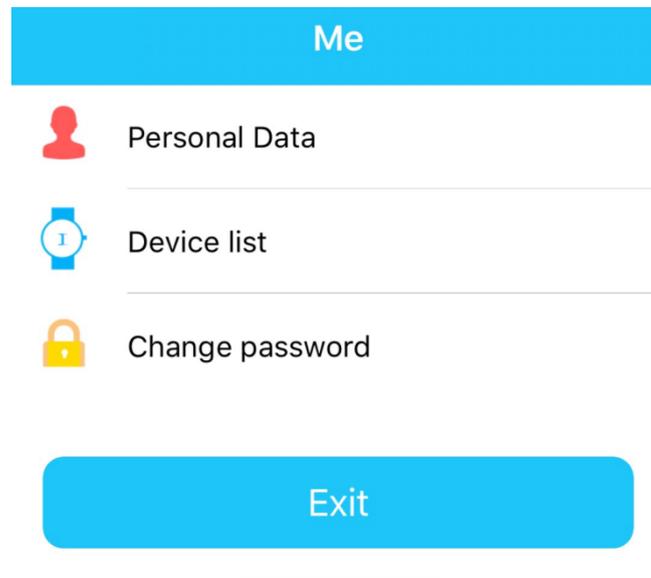


a. On the personal data, you can see your account, ID and phone number. We suggest you fill the email address.

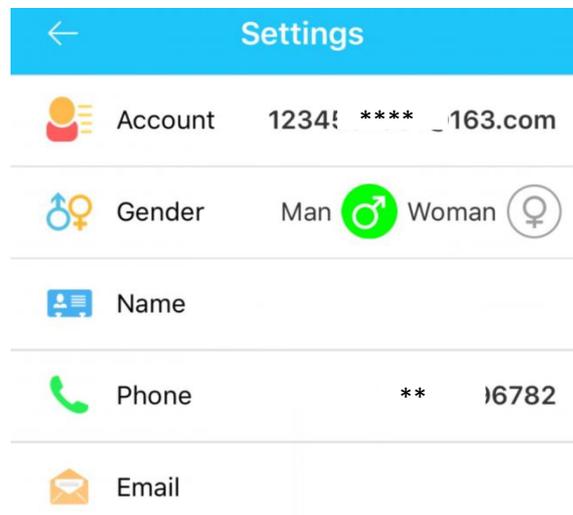

- b. **The device list:** If you have more than one device to monitor, then you can add them in one account. **Please notice, you just need register one watch then add the watch ID here. (already done for you)**

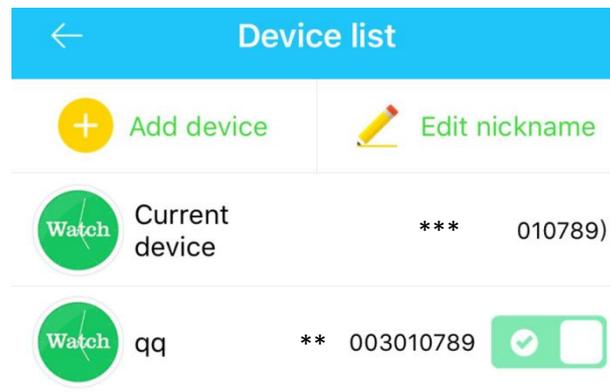

- c. **“Change the password”** function.

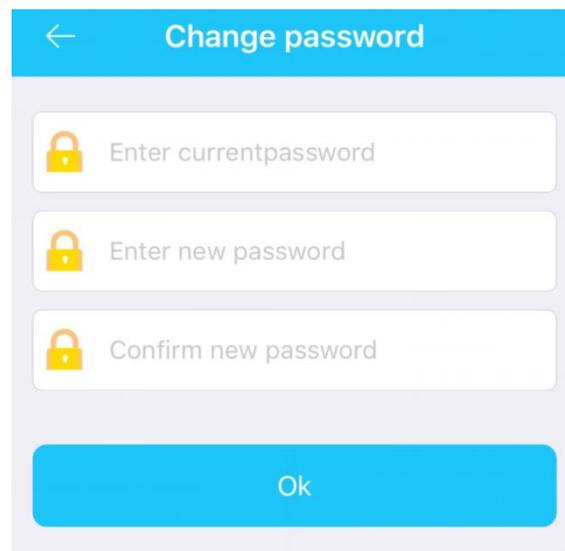

## 6. Working mode of the watch

Three basic working modes include normal mode, power saving mode and real-time positioning mode. Upload interval is different on different working modes.

**Normal mode:** upload interval is 10 minutes; preferred mode

**Power saving mode:** upload interval is 1 hour;

**Real-time positioning:** upload interval is 1 minute.

If you have any questions, please do not hesitate to contact us

[support@childtrac.com](mailto:support@childtrac.com) or call us during weekdays business hours from 9 am to 5pm

Eastern Standard time.