
How To Read A Capacitor's Value

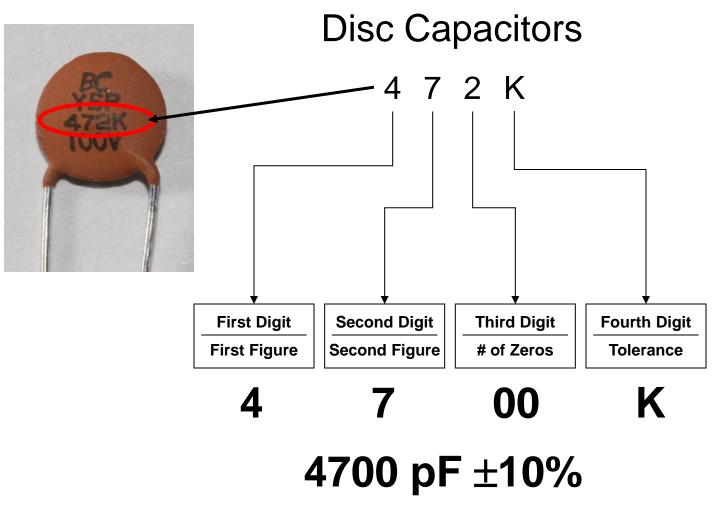

Code	Tolerance
А	±0.05%
В	±0.1%
С	±0.25%
D	±0.5%
F	±1%
G	±2%
J	±5%
K	±10%
M or NONE	±20%
N	±30%
Q	−10%, +30%
S	−20%, +50%
Т	−10%, +50%
Z	-20%, +80%

16