LVP Care & Maintenance Guide

To help protect and keep your floor clean, follow these proper care and maintenance guidelines:

Preventative Measures:

- Prevent indentations and scratches by using non-staining floor protectors on the legs of chairs, appliances and all heavy furniture.
 - o Floor protectors should be at least one inch in diameter
- Do not flood floor or subject to standing water.
- Protect your floor from tracked-in dirt by using mats at all outside entrances. Mats should have a non-rubberized backing and be marked as non-staining.
- Avoid tracking- in tar or asphalt from driveways
- Avoid high heel shoes on your floor as they can cause permanent indentations.
- Protect your floors against burns. This can cause permanent damage
- Avoid exposure to direct sunlight for prolonged periods, as this can cause decolorization.

Cleaning and Maintenance:

- Sweep the floor regularly with a soft bristle broom to remove loose dirt. For everyday maintenance, a mop moistened/damp with warm water will suffice/
- For a heavier cleaning you can use a ph (neutral) cleaner.
- Spills should be cleaned up immediately.

Do NOT use the following on your LVP floor:

- Soap based detergents
- Abrasive or mop and shine products
- Floor was
- Ammonia or bleaches
- Vacuum cleaner with a rotating beater bar
- Steam mop
- Always read the cautionary information on all cleaners proper to use.

IMPORTANT: Never push, pull or drag furniture, appliances or other items across the floor.

- When moving furniture or heavy items, always lift and carry the items. Place hardboards between the flooring and object to move.