

After installing your cartridges, you'll notice the printer still thinks they're empty, despite having just been refilled. This will not prevent you prevent you from printing, but you will get a few friendly reminders from the printer that you are using "empty" or refilled cartridges. Simply click "OK" to these warnings.

If there is no option to continue printing (see message below), read the message and follow the steps outlined. You will be prompted to do this once for each of the cartridges refilled. After you have done this, you will not be prompted for that cartridge again.



Notice this message asks you to hold the printer's "STOP" button for 5 seconds, we recommend holding the "STOP" button until the message disappears. Follow these instructions and you can continue printing without difficulty.

Make sure you monitor the print quality from these cartridges. Once they start to print improperly, the ink is likely running low and then it's time to refill them again.