



DISABLING AUTOMATIC FIRMWARE UPDATES


Step 1 | Click "Setup" on printer

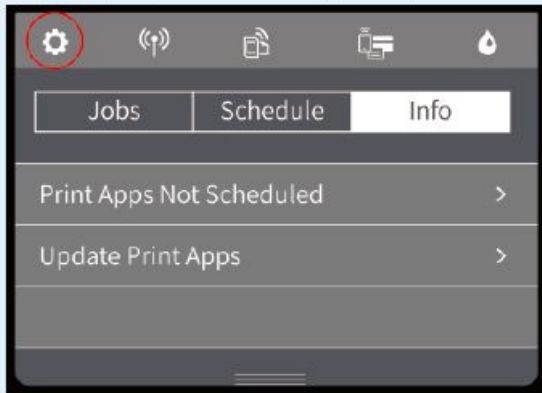


Step 2 | Click on "Printer Maintenance"

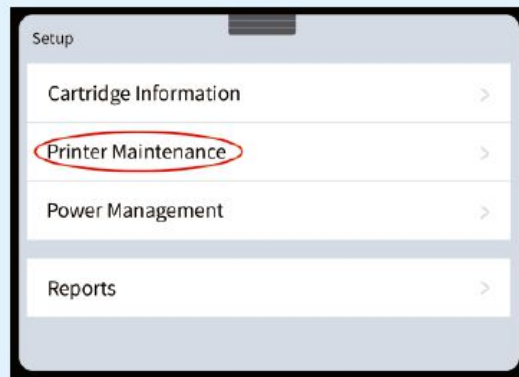


Step 3 | Click on "Update the Printer"

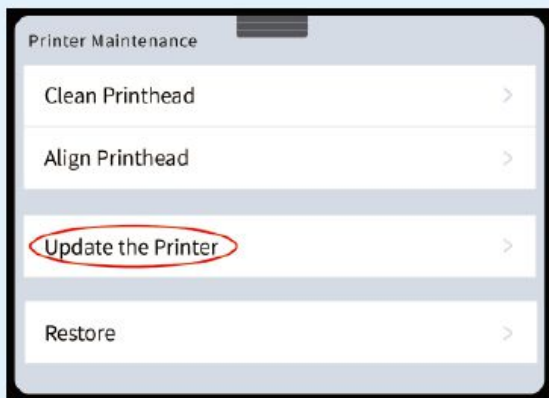

Step 4 | Click on "Printer Update Options"

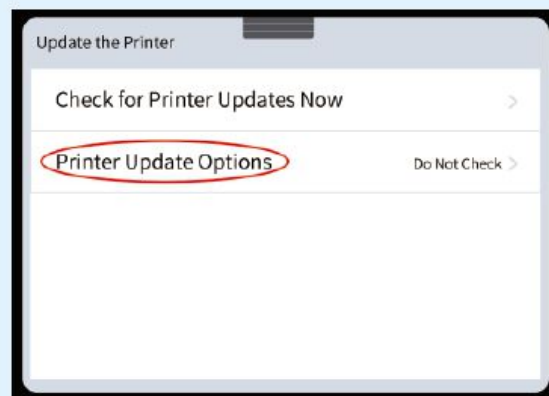

Step 5 | Click on "Do Not Check"

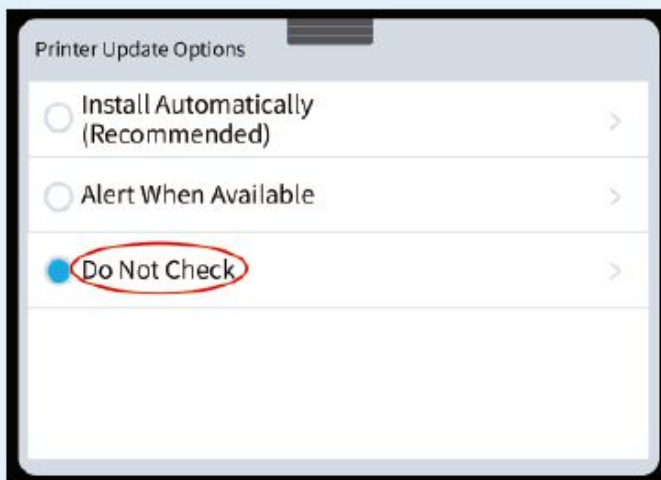

Click "No" for Printer Update

