


HS250UTV/HS200UTV WIRING DIAGRAM

12v Accessory plug

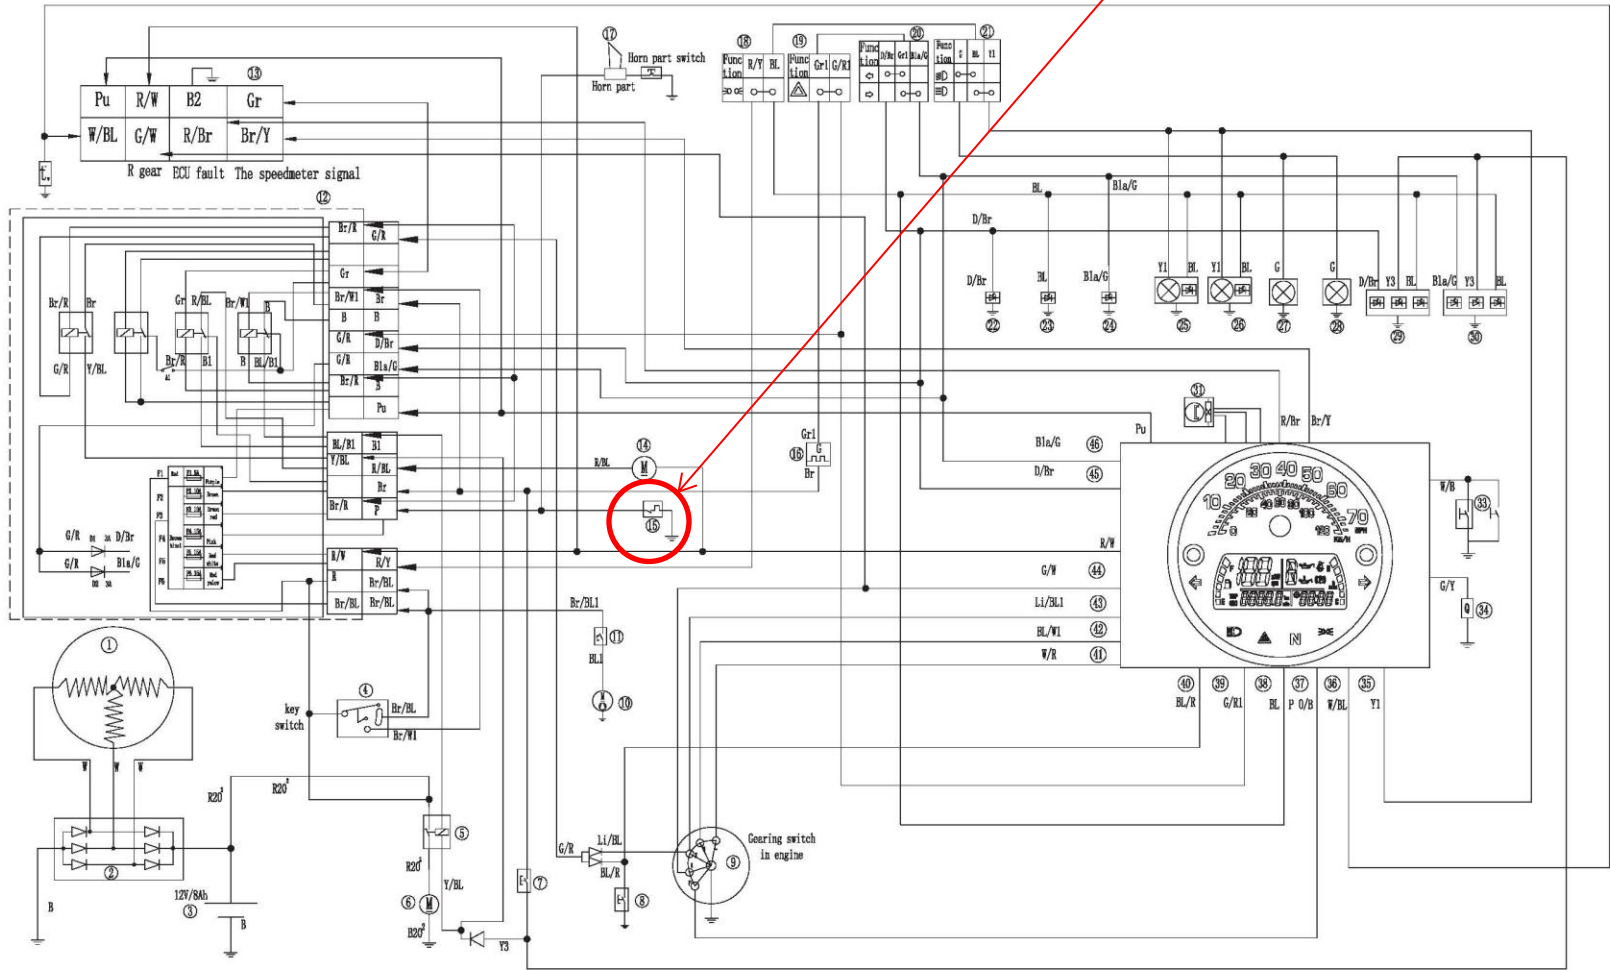

- ① Magnetic motor
- ② Regulator/rectifier
- ③ Battery
- ④ Ignition switch
- ⑤ Stator relay
- ⑥ Starter motor
- ⑦ Brake switch
- ⑧ Parking switch

- ⑨ Gear switch
- ⑩ Fan motor
- ⑪ Water temperature switch
- ⑫ Relay assy.
- ⑬ TO ECU interface
- ⑭ Fuel pump
- ⑮ DC auxiliary socket
- ⑯ Flasher

- ⑰ Horn part
- ⑱ Head light switch
- ⑲ Emergency lamp switch
- ⑳ Turn light switch
- ㉑ Low/high beam light switch
- ㉒ Front left turn light
- ㉓ Front low beam light
- ㉔ Front right turn light

- ㉕ Front high beam light
- ㉖ Front high beam light
- ㉗ Front low beam light
- ㉘ Front low beam light
- ㉙ Water temperature lamp
- ㉚ Fuel lamp
- ㉛ Front low beam light
- ㉜ Speed sensor
- ㉝ Speedometer

- ㉞ Safety belt switch
- ㉟ Fuel level sensor
- ㊱ Night beam
- ㊲ Water temperature lamp
- ㊳ Position lamp
- ㊴ Emergency lamp
- ㊵ Parking lamp

- ㊶ L gear lamp
- ㊷ H gear lamp
- ㊸ Neutral gear lamp
- ㊹ Reverse gear lamp
- ㊺ Right direction lamp
- ㊻ Left direction lamp

Note:
 B-Red Pu-Purple Li-Light W-White D-Dark Bla-Blackish
 Br-Brown Y-Yellow BL-Blue B-Black Gr-Grey P-Pink
 O-Orange G-Green