



PRODUCT INSTRUCTIONS

PRODUCT:	JACKING PUCK
PART NUMBERS COVERED:	HP1008
LAST UPDATE:	1/7/2021

1. Inspect jacking puck for any damage before use.
2. Insert jacking puck into the t-slot hole and turn 90 degrees
3. Only use in vehicles where the jacking puck makes complete contact with the frame on the cushioning washer and the jacking puck bottom face is parallel to the ground.
4. Use one puck with a floor jack or four pucks on a hoist.
5. If the vehicle is very low it may be necessary to drive the vehicle onto ramps to raise the vehicle enough to get hoist arms under the jacking pucks.
6. Remove jacking pucks before operating the vehicle. Jacking pucks are not intended to be permanently installed.