


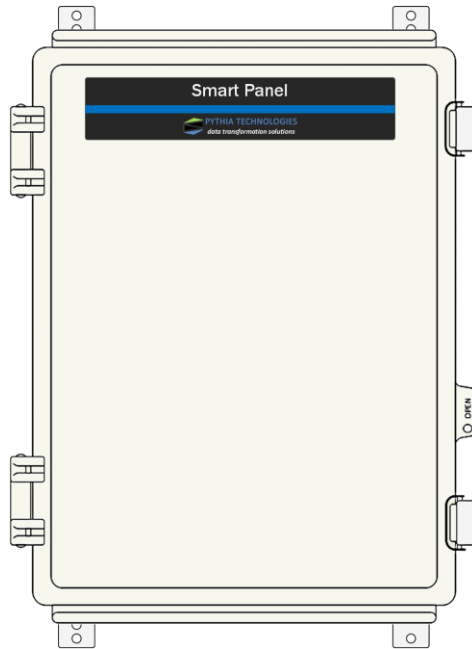

GUIDE

**Smart Panel IGM
SPIGM
7/15/2025**

Table of Contents

1. FAQS.....

1.1 TECHNICAL SUPPORT.....

2. ASSEMBLY

2.1 POWER SUPPLY.....

3. LOW VOLTAGE CONNECTIONS

4. NETWORK CONNECTION.....

3

3

4

5

5


6

1. FAQs

1.1 Technical Support

Technical support is available at 740-363-2272 on regular business days from 8:00 a.m. to 3:00 p.m. ET.

2. Assembly

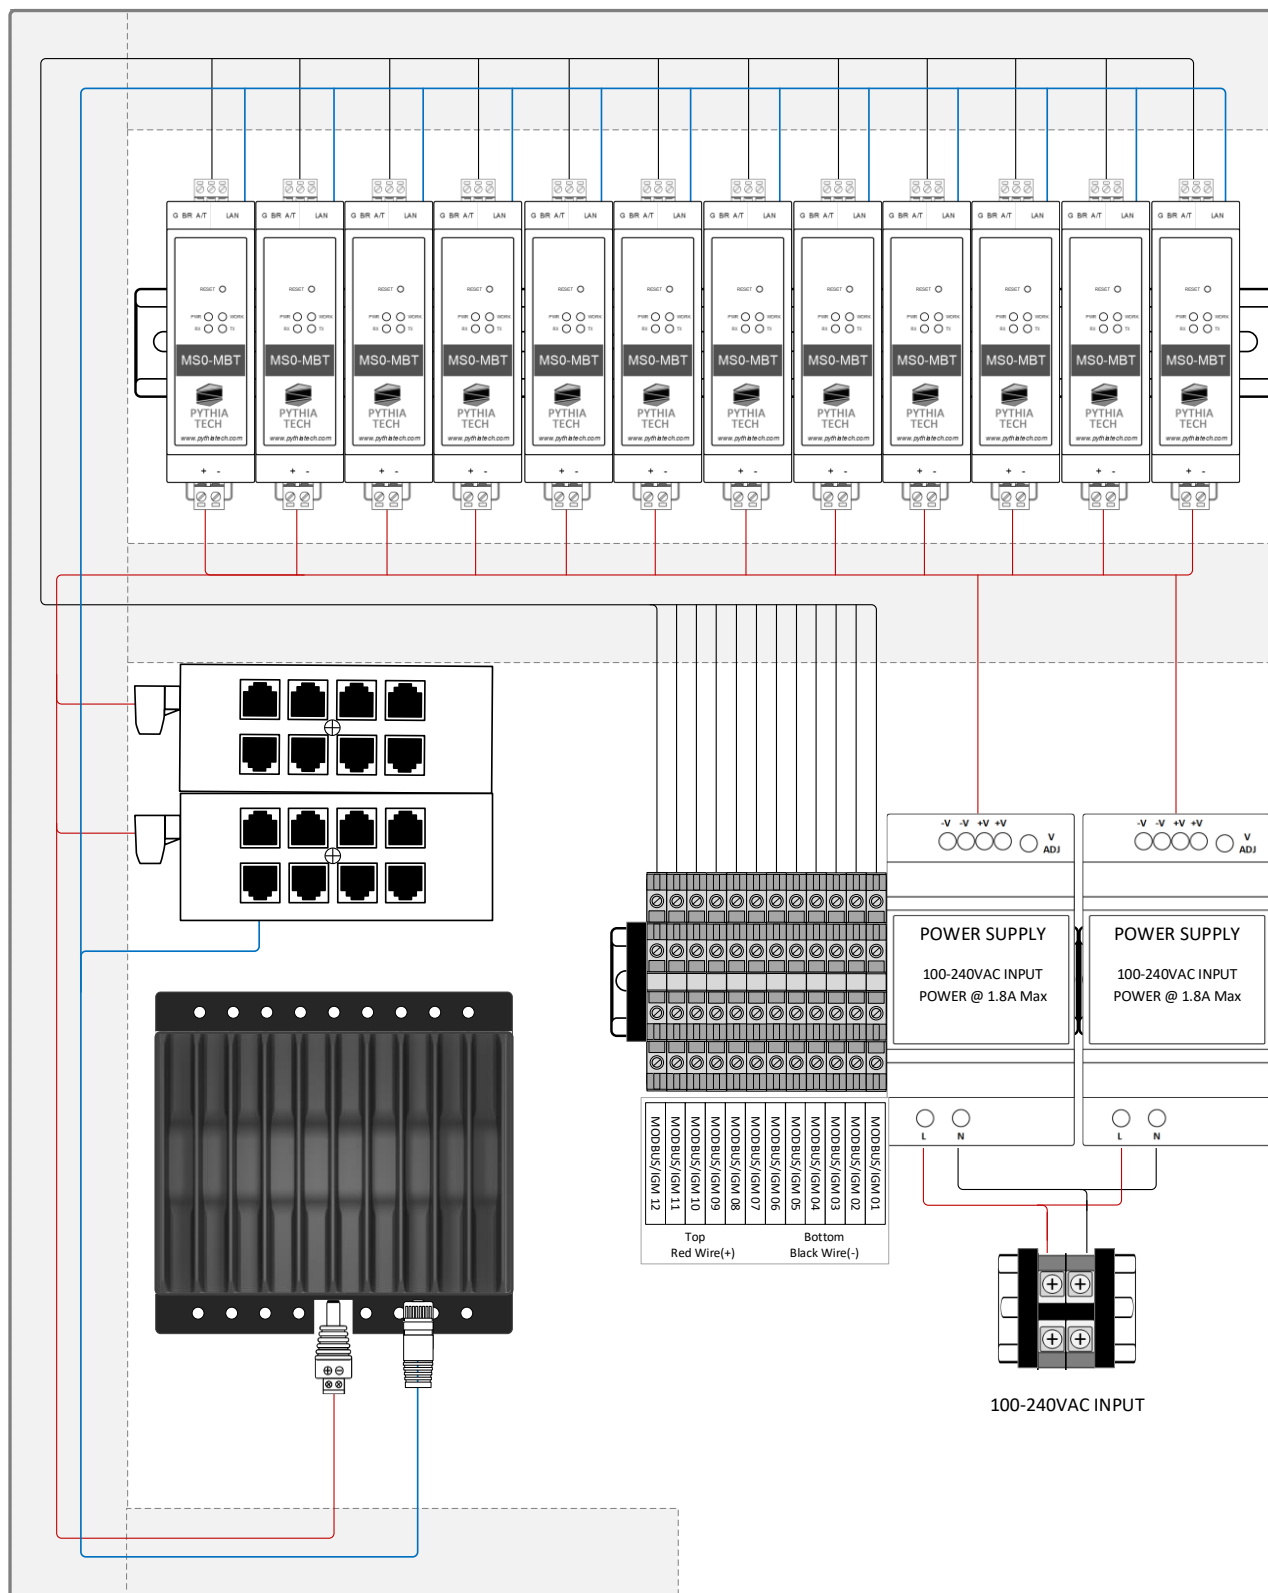


2.1 Power Supply

The 120VAC power supply is the Meanwell HDR-60-24. Refer to <https://www.meanwell.com/productPdf.aspx?i=753> for specifications.

3. Low Voltage Connections

The panel includes 12 Modbus/IGM communication inputs. Custom configurations are available—please contact Pythia Tech to discuss tailored solutions.

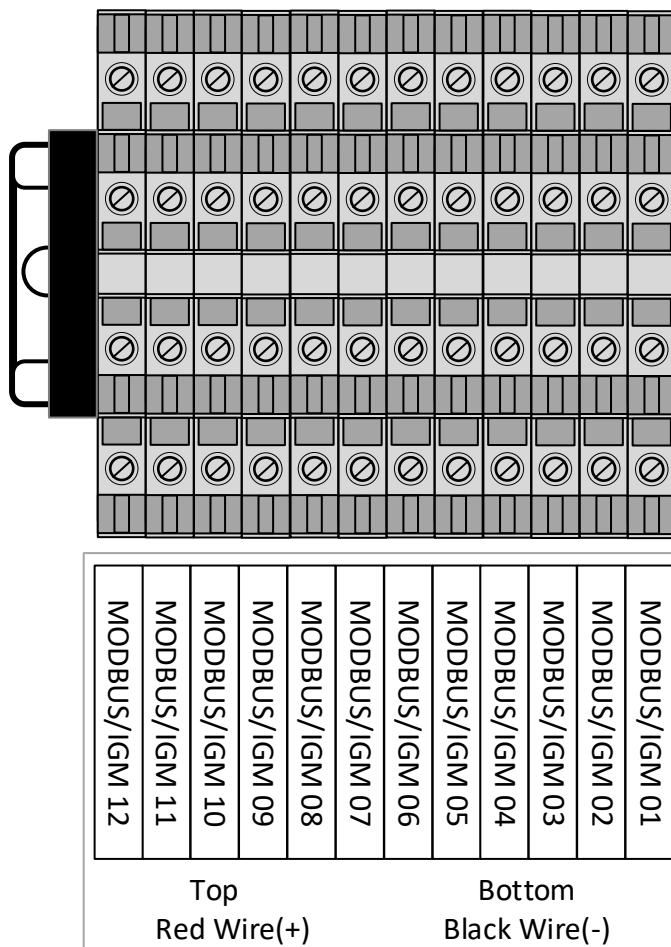

4. Network Connection


The default user is “admin”. The default password is “admin”. Users will connect to Port 0 network interface port on the bottom of the Smart Panel processor. Configure your laptop or desktop PC with an address on the same logical subnet as noted below.

Panel Default IP Address: 192.168.0.221

Your PC IP Address Example: 192.168.0.100, 255.255.0.0, 192.168.0.221



Go to <http://192.168.0.221> to view the following screen which is for viewing only. If the web page does not appear, verify your network settings, cable, etc. Click on the “URL” link icon as shown below to launch the configuration web page.

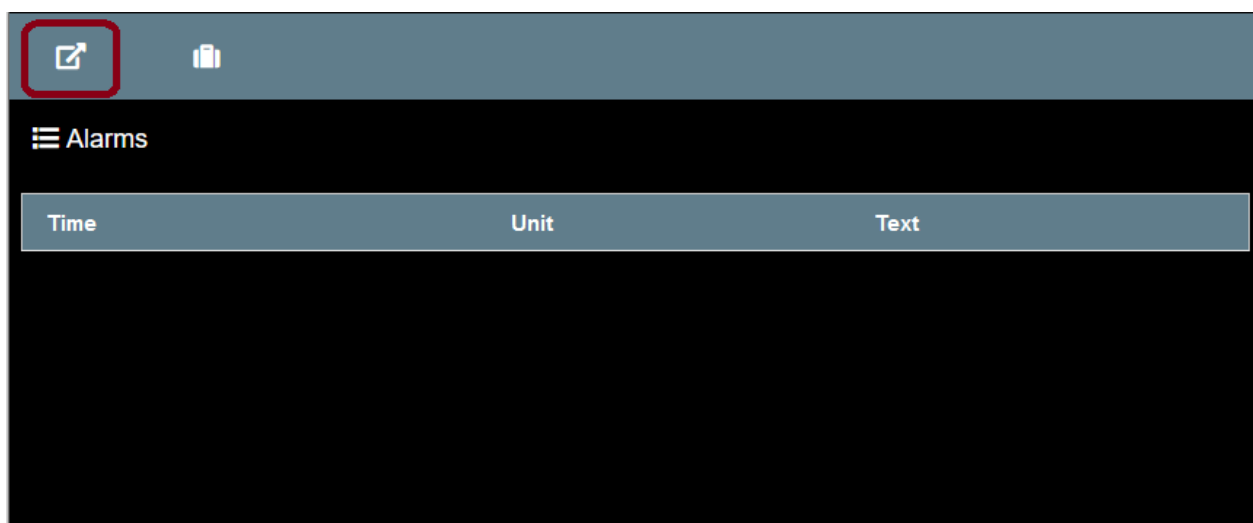

The following web page should appear. Login with the default user and password.



The login page features a background image of a server room aisle with rows of server racks on both sides, illuminated by overhead lights. The text "DATA MONITORING" is centered in a bold, blue font. Below it is the Pythia Technologies logo, which consists of a stylized green and blue cube icon followed by the text "PYTHIA TECHNOLOGIES" in blue and "data transformation solutions" in a smaller, grey font.

User:

Password: