


## **Model Configurator**

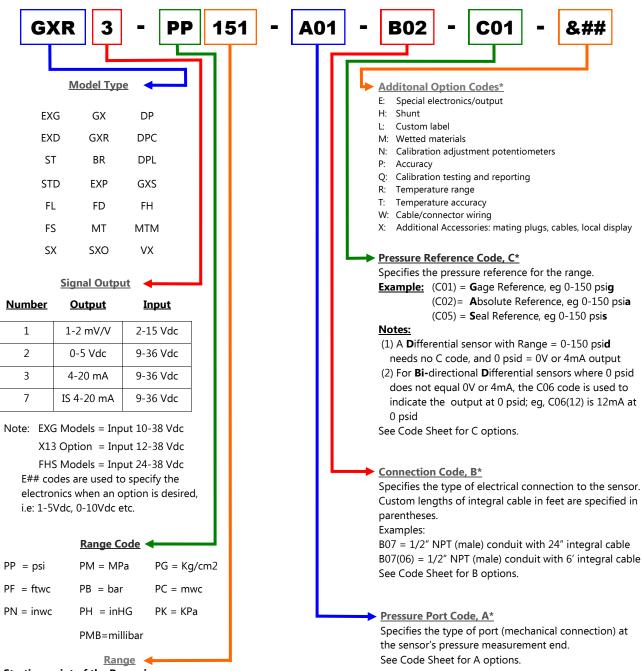

## Starting point of the Range is zero.

(Unless Reference Code specifies otherwise) General designation: **xxy** 

General designation. XXY

 $\mathbf{x}\mathbf{x}$  are the first two digits of the Range.

**y** is the number of zeros in the Range.

**Examples:** PP050 = 0-5 psi PP100 = 0-10 psi

PP151 = 0-150 psi

PP152 = 0-1,500 psi

PP153 = 0-15,000 psi

Dylix Corporation 347 Lang Blvd Grand Island, NY 14072 \* contact Dylix Corp for other codes

www.dylixcorp.com Tel 716.773.2985 Fax 716.773.2786