



connect to soap tank

connect to soap valve
on proportioning unit

connect to SH tank

connect to SH valve
on proportioning unit

connect to water tank,
use dedicated line