

# Pedal

P

The pedal is the foot electrical pad that is pressed to operate the sewing machine. The speed of the machine is controlled by how hard the pedal is pressed. The handwheel can still be used to make a single stitch.

