

Stitch Selector



The stitch selector is a button, knob or panel on the front of the sewing machine which allows the sewist to change the stitch style. The number of stitch styles available is pre-set in the sewing machine.

