

# Operation

## Urge to Move (AutoLaunch)

- Urge to Move allows the vehicle to automatically start moving at engine idle speed when the transmission system is in a forward or reverse mode and the driver releases the vehicle service brake. After the vehicle has launched and begun moving, the transmission system will transition into Creep Mode.
- This feature is useful for stop and go applications allowing the vehicle to launch and creep without driver application of the vehicle accelerator pedal.

**Note:** The Urge to Move feature is configured in the Transmission Control Module (TCM) at the OEM. The configuration can be changed using ServiceRanger.

## Creep Mode

- Creep Mode allows the vehicle to be driven at engine idle speed (no vehicle accelerator input). Upshifts and Downshifts can be requested by the driver using the transmission driver interface device to increase or decrease the vehicle speed for existing vehicle operating conditions. Creep Mode becomes inactive once the accelerator pedal is applied.
- This feature is useful for slow speed applications where slow and steady vehicle speed is required.

**Note:** The Creep Mode feature is configured in the Transmission Control Module (TCM) at the OEM. The configuration can be changed using ServiceRanger.