


Brake Hold Mode



Brake Hold keeps service brakes applied without requiring driver to maintain pressure on the brake pedal

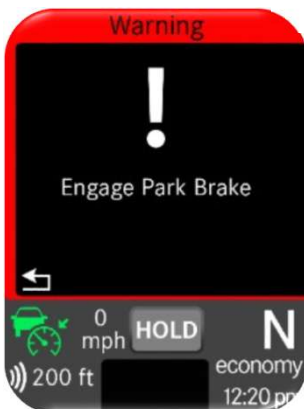

How does it work?

- After the truck comes to a complete stop, the driver presses the brake pedal further
- A visual will be displayed in the dash that Brake Hold is activated. The driver can then remove their foot from the brake pedal without the service brakes releasing
- To end a Brake Hold event, the driver must press the accelerator or press the brake pedal. Turning off Hill Start Aid also ends the event.
- If a driver stays in Brake Hold for 4 minutes, visual and audible warnings get issued for the driver to engage parking brakes
- If a driver leaves the truck while Brake Hold is engaged without parking brakes activated, the horn will sound as usual
- **Installed on a small number of tractors built after 1-1-2022**
Installed on all tractors built after 1-1-2023