

Auto Neutral

- Auto Neutral automatically shifts the transmission system into a neutral state if the vehicle is left in a forward or reverse mode and the vehicle parking brake is set. When this occurs, an “AN” is indicated in the gear display and an audible tone is emitted. A notification message may also appear in the dashboard display depending upon specific OEM implementation.
- To continue normal operation the driver must perform the following using the transmission driver interface device:
 - If Pushbutton controlled, select the desired forward or reverse mode with the vehicle service brake applied.
 - If stalk shifter controlled, select Neutral (N) mode then select the desired forward or reverse mode with the vehicle service brake applied.

Note: Gear display indicators, messages, and tones will vary based on how the transmission system features and functions are configured in the Transmission Control Module (TCM) and how the OEM has implemented them. Refer to OEM for more information on the dashboard display.

Load Based Shifting

- The transmission system constantly monitors the vehicle operating conditions and adapts the shift points to ensure the appropriate gear ratio is requested.