


Operation

Gear Display

The gear display indicates the current gear position of the transmission. During an Upshift or Downshift the display may momentarily flash the target gear position.

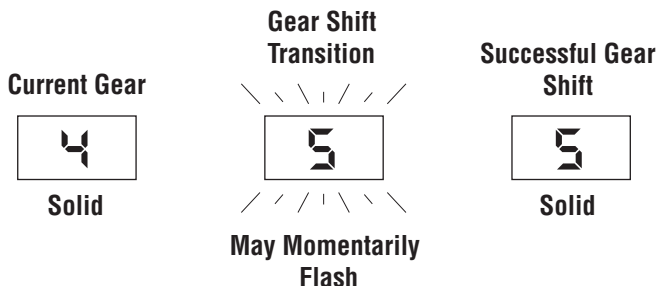

A dash “-” appears in the gear display when the transmission system cannot achieve Neutral gear position.



“CA” appears in the gear display when a clutch abuse protection event is occurring.



“AN” appears in the gear display when the transmission system goes into Auto Neutral.



“CC” appears in the gear display when the transmission system is performing a clutch calibration.

