Operation of Trap Machine and Voice Call

- 1.) Open front of Trap. Stay on the side, do not go directly in front. Machine is armed.
- 2.) At each shooting station is a green Transceiver on a stand. Turn on the power to all 5.
- 3.) Turn on the Power to the Score Keepers Transceiver. Power light should stay on. If it, doesn't you may have to get closer to the Trap House for it to connect. Once connected keep it near the Scorekeepers chair or someplace out of the way behind the shooting line. (For now, when not in use it will be stored in the file box located in the shelter near the 5-Stand. Please return after use.)
- 4.) Place target card into the WI-Card reader and you should be ready to go.
- 5.) Voice calling is now active. Say "pull" and a target will be thrown.
- 6.) When finished turn off Power to all 5 units and the Scorekeepers Transceiver. Remember to take your Shooting card and return Score Keepers Transceiver to the file box. From one side close front of Trap house.

Note: Score Keepers Transceiver automatically shuts down after 2 minutes of inactivity. Turn Power back on to connect to the 5 units again.

Tips

- Talking can set off targets.
- Voice stand may need to be repositioned if not always throwing a target especially if moving back in yardage.
- No Target thrown. Check Scorekeepers Transceiver if it timed out after 2 minutes. Repeat Step 3.
- Remember to turn off all Power when finished to save battery life. The 5 Transceivers at each station do not power down like the Scorekeepers Transceiver.
- Any questions, concerns or suggestions please email the Rocky Range at the website or rockyabshotgun@gmail.com
 We will try to get back to you as soon as possible.