

Rocky 5-Stand Quick Start Guide

WI Card Multitrap Claymate will display this:

Insert your Card and ignore F2 for 25 Birds.

Sporting
Insert Card

Switch to WI Parcours Handset and it will display this:

Press Set button located on top right of Handset.

^Scroll^ ^Set^
Sporting

Solo delay is a built in 3 second delay when a target button is pressed.

“Adjust” button will turn this OFF or ON.

ON is good if you are pulling your own targets and OFF if someone pulls for you.

^Menu^ ^Adjust^
Sporting
Solo Delay OFF

Now any target button you press will throw a target.

Singles: press one button

Doubles True Pair: press both buttons at same time

Doubles Following Pair: press one button then the second button. This feature only works when in Solo delay mode.

Every time you throw a target it will be deducted from the Target card.