

Motion

CONNEX

Parts List



Contents



Front

Page 3



Rear

Page 7



Seat

Page 8



Batteries

Page 9



| Front Parts | | Part Number |
|-------------|-----------------------------------|-------------|
| 1 | Front Wheel Fixing Tube | CX.103 |
| 2 | Footrest Assembly | CX.104 |
| 3 | Footrest Shroud Burgundy | CX.105 |
| 4 | Footrest Shroud Sand | CX.106 |
| 5 | Front Light Shroud Burgundy | CX.107 |
| 6 | Front Light Shroud Sand | CX.108 |
| 7 | Front Under Shroud Black | CX.109 |
| 8 | Front Frame Welding | CX.110 |
| 9 | Steering Stem Bearing | CX.111 |
| 10 | Push Tube Assembly | CX.112 |
| 11 | Push Tube Inner Pin Assembly | CX.113 |
| 12 | Carpet | CX.114 |
| 13 | Tiller Shroud Upper Black | CX.115 |
| 14 | Tiller Shroud Front Burgundy | CX.116 |
| 15 | Tiller Shroud Front Sand | CX.117 |
| 16 | Right Throttle Lever (w/ Bracket) | CX.118 |
| 17 | Left Throttle Lever (w/ Bracket) | CX.119 |
| 18 | Upper Tiller (w/ Handlebars) | CX.122 |
| 19 | Right Handlebar Grip | CX.123 |
| 20 | Left Handlebar Grip | CX.124 |




| Front Parts | | Part Number |
|-------------|-----------------------------------|-------------|
| 21 | Tiller Rear Shroud Black | CX.126 |
| 22 | Tiller Adjustment Knob | CX.127 |
| 23 | Tiller Adjustment Clamp | CX.128 |
| 24 | Lower Tiller Stem | CX.129 |
| 25 | Lower Tiller Rubber Dustcover | CX.130 |
| 26 | Front Wheel Shaft Assembly (each) | CX.131 |
| 27 | Front Mudguard Right | CX.132 |
| 28 | Front Mudguard Left | CX.133 |
| 29 | Stub Axle Left | CX.134 |
| 30 | Front Axle | CX.136 |
| 31 | Rubber Bolt Cap Front Axle (each) | CX.137 |
| 32 | Front Tyre (each) | CX.138 |
| 33 | Front Tyre Inner Tube (each) | CX.139 |
| 34 | Front Wheel Inner Rim (each) | CX.140 |
| 35 | Front Wheel Outer Rim (each) | CX.141 |
| 36 | Underbody Cover | CX.143 |
| 37 | Mid Shroud Burgundy | CX.144 |
| 38 | Mid Shroud Sand | CX.145 |
| 39 | Controller Access Hatch | CX.146 |
| 40 | Battery Shroud Burgundy | CX.147 |



| Front Parts | | Part Number |
|-------------|---------------------------------------|-------------|
| 41 | Battery Shroud Sand | CX.148 |
| 42 | Sliding Tube | CX.149 |
| 43 | Hubcap | CX.168 |
| 44 | Tiller LED Display | CX.169 |
| 45 | Speed Knob | CX.170 |
| 46 | Speed Pot | CX.171 |
| 47 | Throttle Assembly | CX.172 |
| 48 | Remote Fob Receiver | CX.173 |
| 49 | Horn | CX.174 |
| 50 | Folding Button/Light | CX.175 |
| 51 | Headlight | CX.176 |
| 52 | Tiller Light Wiring Harness | CX.177 |
| 53 | Tiller To Controller Wiring Loom | CX.178 |
| 54 | Tiller Light Wiring Harness Extension | CX.179 |
| 55 | Main Controller | CX.180 |
| 56 | Folding Control Wiring Harness | CX.182 |
| 57 | Remote Receiver | CX.183 |
| 58 | Linear Actuator | CX.184 |
| 59 | Actuator Shaft | CX.185 |
| 60 | Brake Shaft | CX.187 |



| Front Parts | Part Number |
|--------------------------------------|-------------|
| 61 Locking Pin Motor | CX.188 |
| 62 Front Chassis Connector (Female) | CX.189 |
| 63 Turning Speed Reduction Sensor | CX.192 |
| 64 Remote Fob | CX.196 |
| 65 Tiller Rubber Buttons | CX.197 |
| 66 Stub Axle (Right) | CX.198 |
| 67 Front Wheel Fixing Tube Connector | CX.199 |

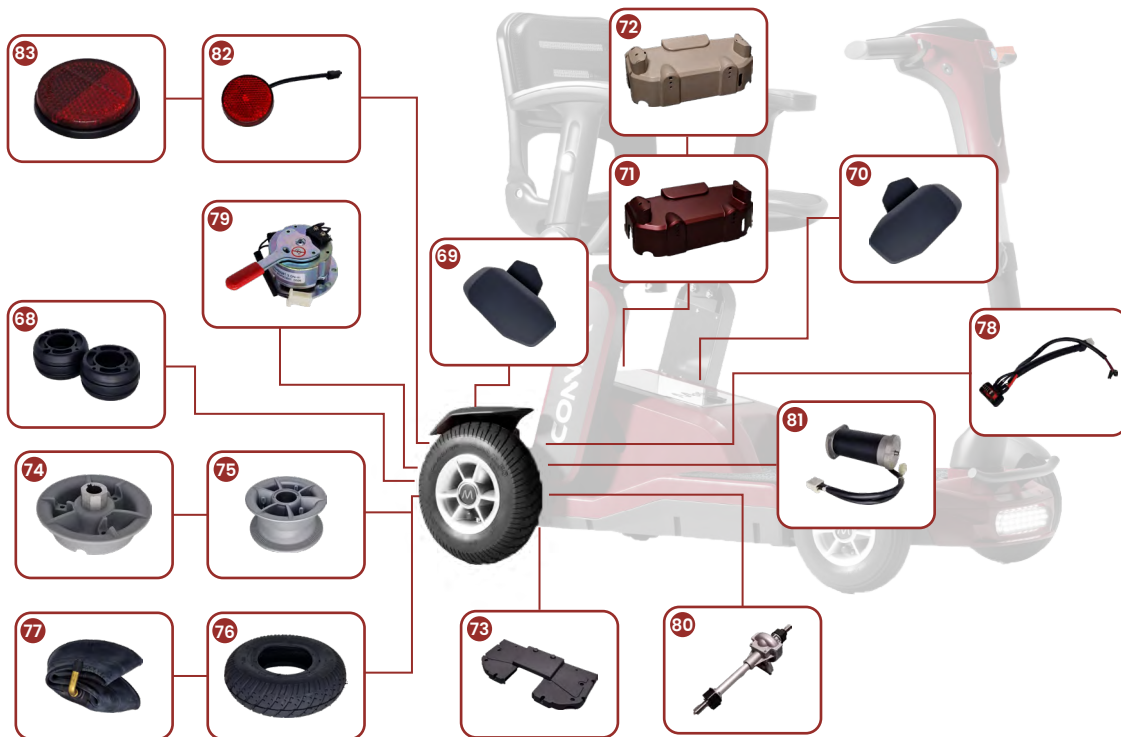

| Rear Parts | Part Number |
|----------------------------------|-------------|
| 68 Anti-Tip Wheel (Pair) | CX.158 |
| 69 Rear Mudguard Right | CX.159 |
| 70 Rear Mudguard Left | CX.160 |
| 71 Rear Shroud Burgundy | CX.161 |
| 72 Rear Shroud Sand | CX.162 |
| 73 Rear Underbody Cover | CX.163 |
| 74 Rear Wheel Inner Rim | CX.164 |
| 75 Rear Wheel Outer Rim | CX.165 |
| 76 Rear Tyre | CX.166 |
| 77 Rear Tyre Inner Tube | CX.167 |
| 78 Rear Chassis Connector (Male) | CX.190 |
| 79 Brake | CX.193 |
| 80 Transaxle | CX.194 |
| 81 Motor | CX.195 |
| 82 Rear Light | CX.204 |
| 83 Red Rear Reflector | CX.206 |



| Seat Parts | Part Number |
|-------------------------------------|-------------|
| 84 Seat Base Support Cover Burgundy | CX.150 |
| 85 Seat Base Support Cover Sand | CX.151 |
| 86 Seat Base | CX.152 |
| 87 Seat Post | CX.153 |
| 88 Rotating Seat Base (w/ Post) | CX.154 |
| 89 Seat | CX.155 |
| 90 Armrest (Left) | CX.156 |
| 91 Armrest (Right) | CX.157 |
| 92 Armrest Pad (Left) | CX.200 |
| 93 Armrest Pad (Right) | CX.201 |
| 94 Yellow Side Reflector | CX.205 |



| Battery Parts | Part Number |
|------------------------------|-------------|
| 95 13.4ah Battery (w/ Case) | CX.101 |
| 96 Battery Charger | CX.102 |
| 97 Battery Connector | CX.181 |
| 98 Battery Case Top | CX.202 |
| 99 Battery Case Bottom | CX.203 |
| 100 10.5ah Battery (w/ Case) | CX.207 |