

Motion

ALUMINA

Parts List



Mk 1 & Mk2

Contents



Front

Page 3



Rear

Page 6



Seat

Page 7



Batteries

Page 8




Front Parts	Part Number
1 Tiller Shroud (Top) Mk1 Grey	AL.104
2 Front Shroud Mk1 Grey	AL.105
3 Tiller Adjustment Assembly	AL.112
4 Front Wiring Loom	AL.113
5 Front Wheel Fixing Tube	AL.116
6 Tiller Adjustment Knob	AL.117
7 Steering Rod	AL.120
8 Tracking Rod	AL.121
9 Tiller T-Shape Steering Handle Bar	AL.122
10 Tiller Shroud (Top) Mk2 Charcoal	AL.126
11 Tiller Shroud (Top) Mk2 Grey	AL.127
12 Front Shroud Charcoal	AL.128
13 Front Shroud Grey	AL.129
14 Front Chassis	AL.137
15 Front Wheel (Hard Compound)	LL.109
16 Basket	LL.110
17 Speed Knob	LL.121
18 Wig Wag	LL.122
19 Key Barrel	LL.123
20 Key	LL.126



Front Parts		Part Number
21	Voltmeter	LL.127
22	Throttle Pot	LL.128
23	Speed Pot	LL.129
24	Horn Button	LL.130
25	Main Wiring Loom Mk1	LL.137
26	Horn	LL.139
27	Basket Bracket	LL.140
28	Steering Locking Lever Knob	LL.142
29	Hub Cap	LL.146
30	Wheel Bearing	LL.158
31	Front Stub Axle	LL.159
32	Tiller Boot	LL.162
33	Tiller Bar Assembly	LL.165
34	Handle Grips	LL.166
35	Universal Delta Handlebar Kit	LL.169
36	Voltmeter Mk2	LL.172
37	Head Light Cover Mk2	LL.173
38	Head Light Mk2	LL.174
39	LED Running Light Mk2	LL.175




Front Parts		Part Number
40	Head Light Button Mk2	LL.176
41	Tiller Shroud (Bottom) Mk2	LL.179
42	Front Wheel Grey (Soft Compound)	LL.168
43	Tiller Shroud (Bottom) (Black)	LL.138
44	Super Soft Wheel Set	LL.187
45	Main Wiring Loom Mk2	LL.186
46	Splitter Pin & Knob Assembly	LL.131
47	Splitter Pin T-Shape	LL.188
48	Controller	LL.118
49	Controller Mk2	LL.185
50	Rear Chassis Connector (Female)	LL.148

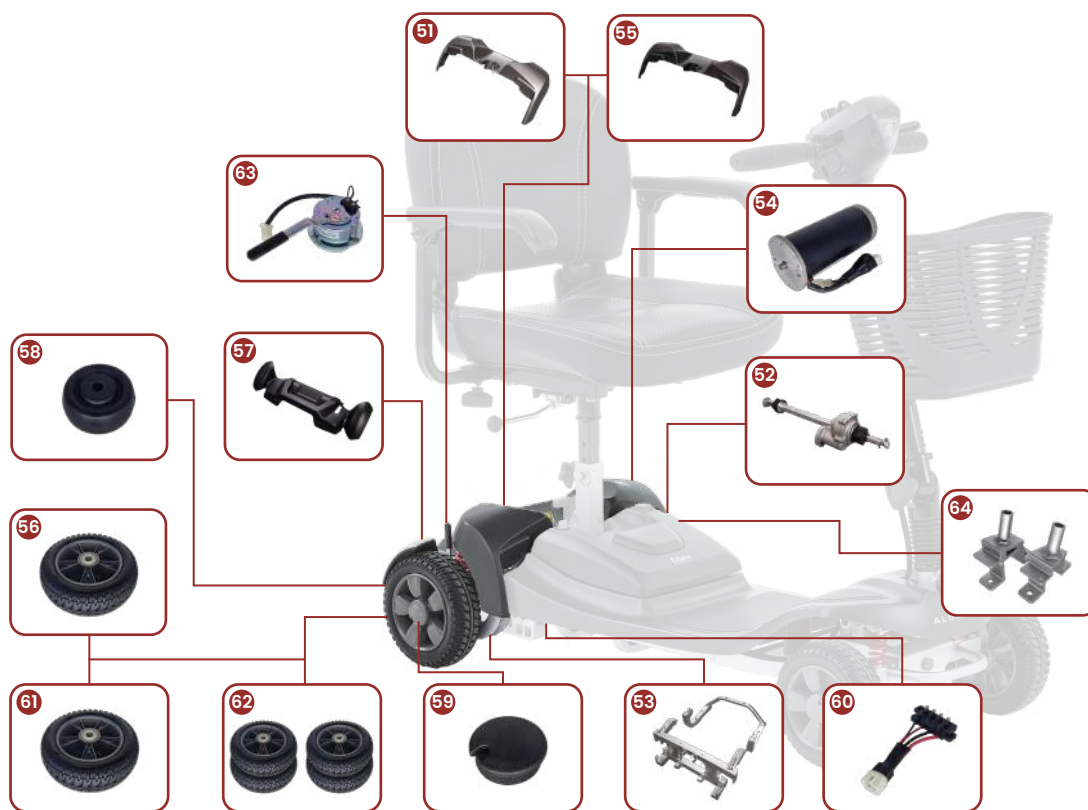

Rear Parts		Part Number
51	Rear Shroud Grey Mk1 & Mk2	AL.106
52	Transaxle	AL.108
53	Rear Chassis	AL.111
54	Motor	AL.115
55	Rear Shroud Charcoal Mk2	AL.130
56	Rear Wheel (Hard Compound)	LL.106
57	Motor Shroud	LL.113
58	Anti-Tip Wheel	LL.117
59	Hub Cap	LL.146
60	Rear Chassis Connector (Male)	LL.147
61	Rear Wheel Grey (Soft Compound)	LL.167
62	Super Soft Wheel Set	LL.187
63	EM Brake	AL.114
64	Chassis Transaxle Supports (Set)	AL.132



Seat Parts	Part Number
65 Seat Cover (Base)	AL.109
66 Seat Cover (Back)	AL.110
67 Seat Base Left Handed	AL.118
68 Seat Back Cover Without Logo	AL.119
69 Seat Base Mk1	AL.135
70 Left Armrest	LL.111
71 Right Armrest	LL.112
72 Seat Post	LL.115
73 Seat Post Pin	LL.116
74 Arm Pad	LL.143
75 Armrest Securing Knob (Set)	LL.144
76 Seat Post Securing Knob	LL.145
77 Seat Lever Knob	LL.152
78 Seat Assembly Mk2	LL.182
79 Seat Base Mk2	LL.189

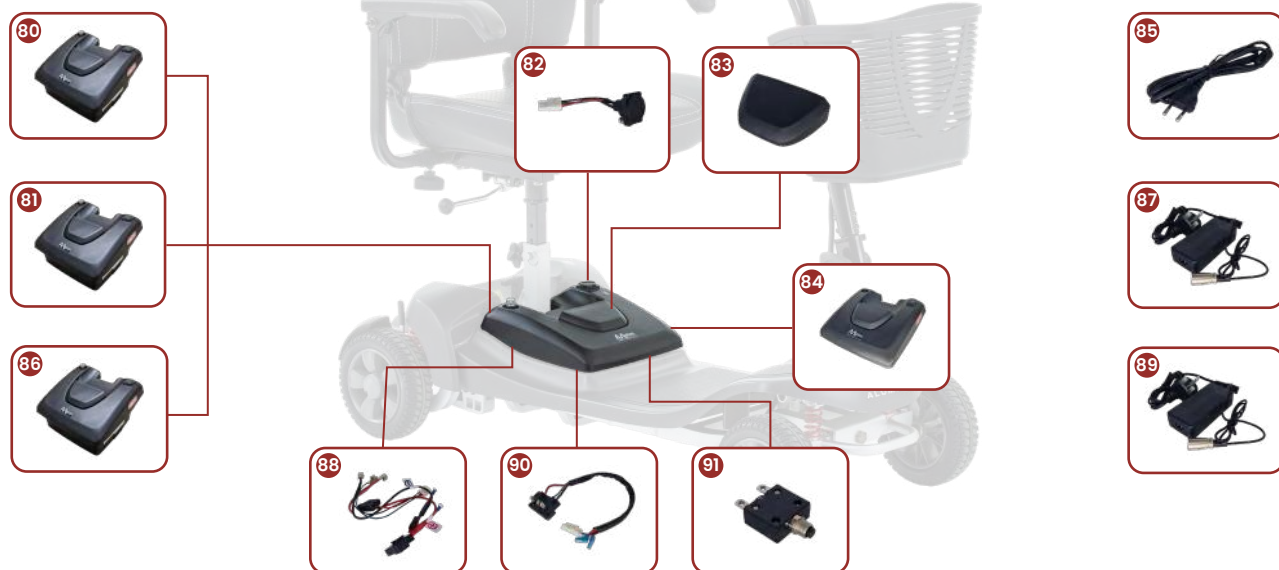

Battery Parts	Part Number
80 20ah Battery Pack (Standard)	AL.102
81 40ah Battery Pack (Pro)	AL.103
82 Battery Charging Port	AL.123
83 Battery Box Handle	AL.131
84 Battery Lid Set	AL.133
85 EU Power Cord (2ah)	CAB.001
86 10.75ah Battery Pack (Air)	LL.103
87 Alumina Battery Charger (2ah - Air & Std)	LL.104
88 Battery Pack Connector (Female)	LL.149
89 Alumina Battery Charger (3ah - Pro)	LL.150
90 Battery Pack Connector (Male)	LL.151
91 Circuit Breaker	LL.119