

Motion

AIRSCAPE

Parts List



Contents



Front

Page 3



Rear

Page 4



Seat

Page 5



Batteries


Page 8



Front Parts	Part Number
1 Tiller Shroud (Top)	AS.102
2 Tiller Shroud (Bottom)	AS.103
3 Front Shroud	AS.104
4 Front Wheel	AS.105
5 Hub Cap	AS.106
6 Front Chassis	AS.113
7 Tiller Adjustment Assembly	LL.107
8 Basket	LL.110
9 Speed Knob	LL.121
10 Wig Wag	LL.122
11 Key Barrel	LL.123
12 Key	LL.126
13 Voltmeter	LL.127
14 Throttle Pot	LL.128
15 Speed Pot	LL.129
16 Horn Button	LL.130
17 Main Wiring Loom Mk1	LL.137
18 Horn	LL.139
19 Basket Bracket	LL.140
20 Tiller Adjustment Knob	LL.141



Front Parts	Part Number
21 Front Wheel Fixing Tube	LL.157
22 Tiller Bar Assembly	LL.165
23 Handle Grips	LL.166
24 Front Wheel (Soft Compound)	LL.168
25 Universal Delta Handlebar	LL.169
26 Controller	LL.185
27 Super Soft Wheel Set	LL.187

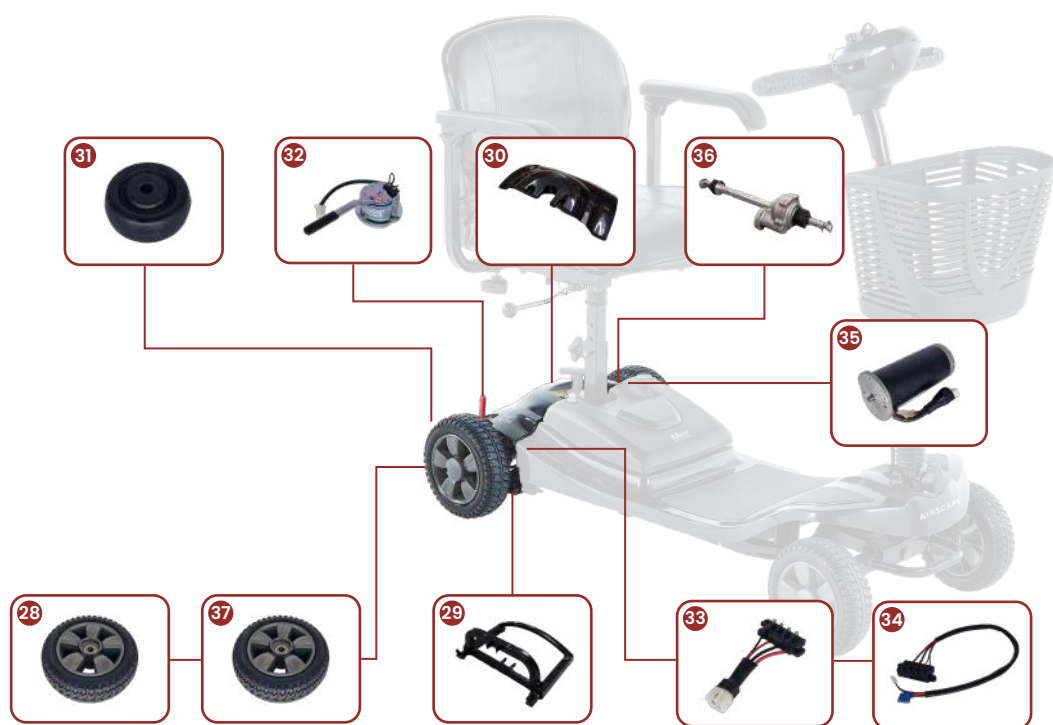

Rear Parts	Part Number
28 Rear Wheel	AS.107
29 Rear Chassis	AS.108
30 Rear Shroud	AS.109
31 Anti-Tip Wheel	LL.117
32 Electromagnetic Brake	LL.120
33 Rear Chassis Connector (Male)	LL.147
34 Rear Chassis Connector (Female)	LL.148
35 Motor	LL.160
36 Transaxle	LL.161
37 Rear Wheel (Soft Compound)	LL.167



Seat Parts	Part Number
38 Seat Cover (Back)	AS.110
39 Seat Cover (Base)	AS.111
40 Seat Assembly	AS.112
41 Left Armrest	LL.111
42 Right Armrest	LL.112
43 Seat Post	LL.115
44 Seat Post Pin	LL.116
45 Arm Pad	LL.143
46 Armrest Securing Knob (Set)	LL.144
47 Seat Post Securing Knob	LL.145



Battery Parts	Part Number
48 Battery Charging Port	AL.123
49 Battery Box Handle	AL.131
50 Battery Lid Set	AL.133
51 EU Power Cord (2ah)	CAB.001
52 10.75ah Battery Pack	LL.103
53 Battery Charger (2ah)	LL.104
54 Circuit Breaker	LL.119
55 Battery Connector (Female)	LL.149
56 Battery Connector (Male)	LL.151