

Motion

LITHILITE

Parts List



Mk 1 & Mk2

Contents



Front

Page 3



Rear

Page 6



Seat

Page 7



Batteries

Page 8




Front Parts	Part Number
1 Front Wiring Loom	AL.113
2 Tiller Adjustment Assembly	LL.107
3 Front Shroud Mk1 Red	LL.108
4 Front Wheel (Hard Compound)	LL.109
5 Basket	LL.110
6 Controller Mk1	LL.118
7 Speed Knob	LL.121
8 Wig Wag	LL.122
9 Key Barrel	LL.123
10 Key	LL.126
11 Voltmeter Mk1	LL.127
12 Throttle Pot	LL.128
13 Speed Pot	LL.129
14 Horn Button	LL.130
15 Splitter Pin & Knob Assembly	LL.131
16 Tiller Shroud Top Mk1 Blue	LL.132
17 Tiller Shroud Top Mk1 Red	LL.133
18 Front Shroud Mk1 Blue	LL.134
19 Main Wiring Loom Mk1	LL.137
20 Tiller Shroud Bottom Mk1 Black	LL.138



Front Parts		Part Number
21	Horn	LL.139
22	Basket Bracket	LL.140
23	Tiller Adjustment Knob	LL.141
24	Steering Locking Lever Knob	LL.142
25	Hub Cap	LL.146
26	Front Wheel Fixing Tube	LL.157
27	Wheel Bearing	LL.158
28	Front Stub Axle Set	LL.159
29	Tiller Boot	LL.162
30	Steering Rod	LL.163
31	Tracking Rod	LL.164
32	Tiller Bar Assembly	LL.165
33	Handle Grips	LL.166
34	Front Wheel (Soft Compound)	LL.168
35	Universal Delta Handlebar Kit	LL.169
36	Voltmeter Mk2	LL.172
37	Head Light Cover Mk2	LL.173
38	Head Light Mk2	LL.174
39	LED Running Light Mk2	LL.175
40	Head Light Button Mk2	LL.176




Front Parts		Part Number
41	Tiller Shroud Top Blue Mk2	LL.177
42	Tiller Shroud Top Sand Mk2	LL.178
43	Tiller Shroud Bottom Mk2	LL.179
44	Front Shroud Blue Mk2	LL.180
45	Front Shroud Sand Mk2	LL.181
46	Controller Mk2	LL.185
47	Main Wiring Loom Mk2	LL.186
48	Super Soft Wheel Set	LL.187
49	Splitter Pin T-Shape	LL.188
50	Front Chassis	LL.190

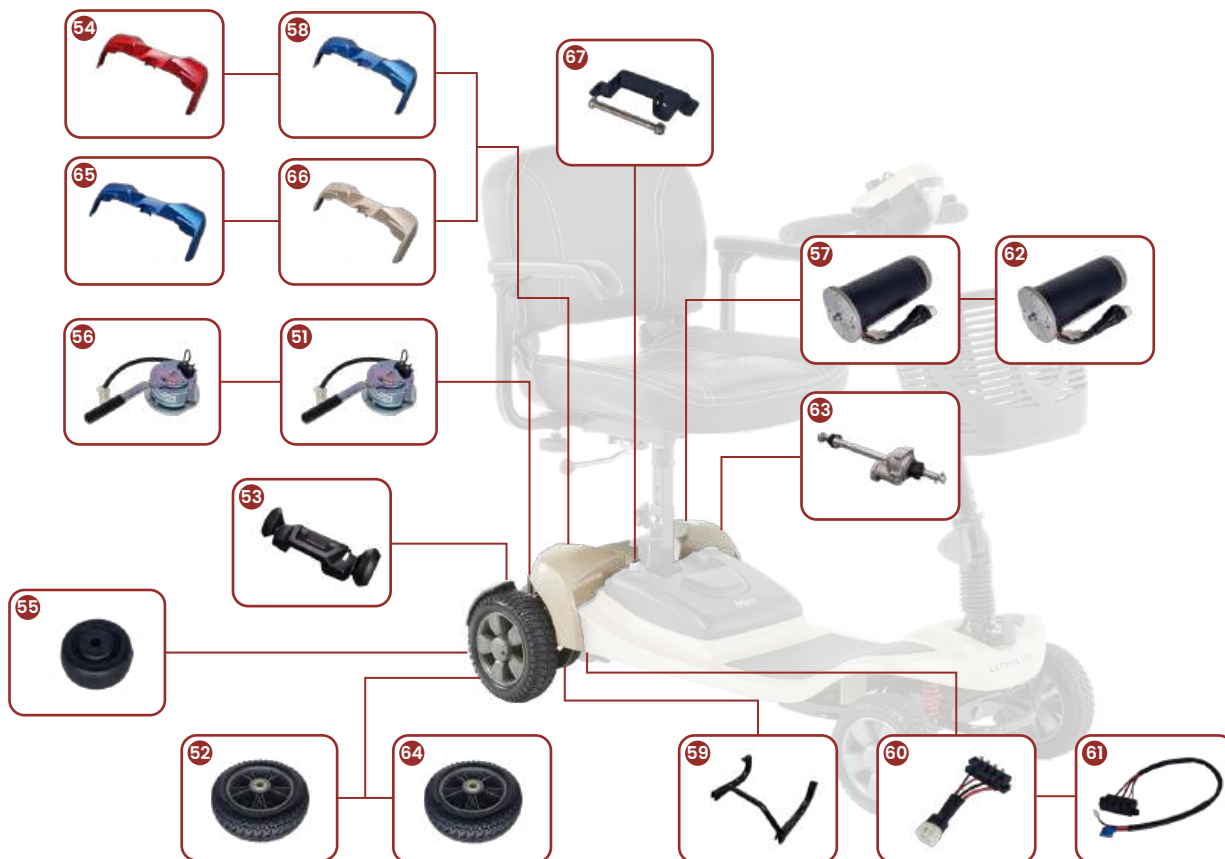

Rear Parts		Part Number
51	Electromagnetic Brake Mk1 (CCL)	LL.105
52	Rear Wheel (Hard Compound)	LL.106
53	Motor Shroud	LL.113
54	Rear Shroud Red Mk1	LL.114
55	Anti-Tip Wheel	LL.117
56	Electromagnetic Brake Mk2 (MTM)	LL.120
57	Motor Mk1 (CCL)	LL.124
58	Rear Shroud Blue Mk1	LL.135
59	Rear Chassis	LL.136
60	Rear Chassis Connector (Male)	LL.147
61	Rear Chassis Connector (Female)	LL.148
62	Motor Mk2 (MTM)	LL.160
63	Transaxle Mk2	LL.161
64	Rear Wheel (Soft Compound)	LL.167
65	Rear Shroud Blue Mk2	LL.183
66	Rear Shroud Sand Mk2	LL.184
67	Rear Chassis Connector Bracket	LL.191



Seat Parts		Part Number
68	Seat Cover (Base)	AL.109
69	Seat Cover (Back)	AL.110
70	Left Armrest	LL.111
71	Right Armrest	LL.112
72	Seat Post	LL.115
73	Seat Post Pin	LL.116
74	Arm Pad	LL.143
75	Armrest Securing Knob (Set)	LL.144
76	Seat Post Securing Knob	LL.145
77	Seat Lever Knob	LL.152
78	Seat Cover Back Blue Mk1	LL.153
79	Seat Cover Back Red Mk1	LL.154
80	Seat Cover Base Blue Mk1	LL.155
81	Seat Cover Base Red Mk1	LL.156
82	Seat Assembly Mk2	LL.182
83	Seat Base Mk2	LL.189

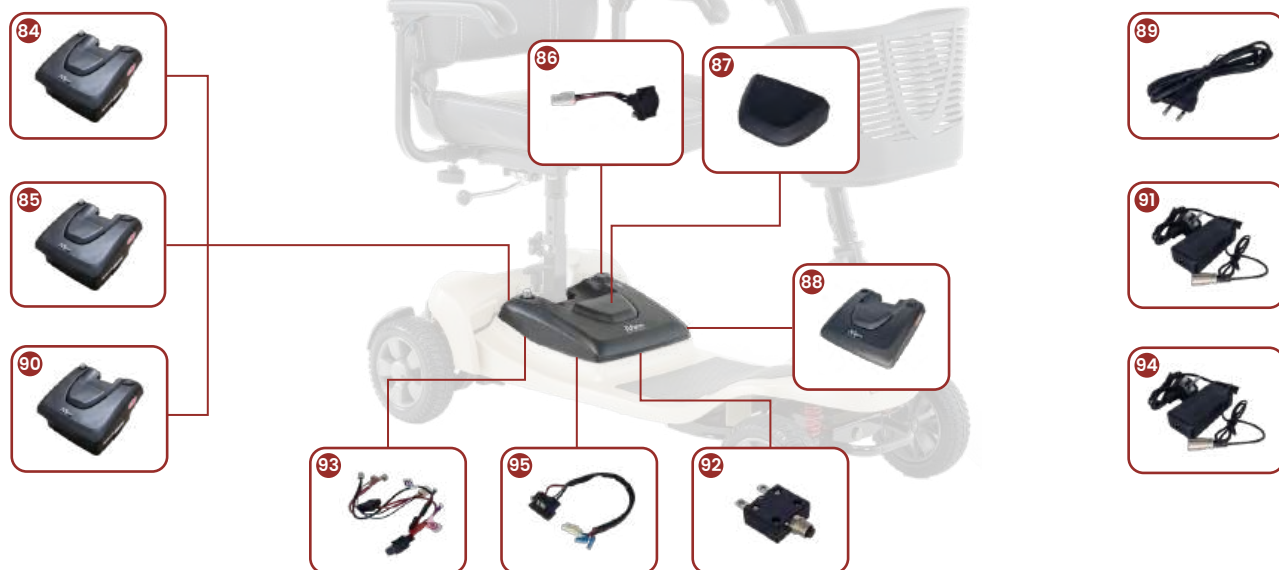

Battery Parts		Part Number
84	20ah Battery Pack (Standard)	AL.102
85	40ah Battery Pack (Pro)	AL.103
86	Battery Charging Port	AL.123
87	Battery Box Handle	AL.131
88	Battery Lid Set	AL.133
89	EU Power Cord (2ah)	CAB.001
90	10.75ah Battery Pack (Air)	LL.103
91	Alumina Battery Charger (2ah - Air & Std)	LL.104
92	Circuit Breaker	LL.119
93	Battery Pack Connector (Female)	LL.149
94	Alumina Battery Charger (3ah - Pro)	LL.150
95	Battery Pack Connector (Male)	LL.151