

Intercom instruction guide



When a call is made from a visitor the intercom screen will come on and the station will ring. To answer the call press the green "phone" button.

OUTDOOR STATION
0:00:03

Once pressed this will allow handsfree communication with the visitor, to allow access into the building press the unlock "key" button. This unlocks the door they are calling from and unlocks your lift floor for 3 minutes. The call will disconnect 5 seconds after pressing the unlock button



GC Electronic Security Pty Ltd Admin@GCElectronicSecurity.com.au